

Configuring HP-UX for Peripherals

HP 9000

First Edition (E0195)



Manufacturing Part Number: B2355-90053

January 1995

© Copyright 1995, Hewlett-Packard Company.

Legal Notices

The information contained within this document is subject to change without notice.

HEWLETT-PACKARD MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Hewlett-Packard shall not be liable for errors contained herein nor for incidental consequential damages in connection with the furnishing, performance, or use of this material.

Warranty. A copy of the specific warranty terms applicable to your Hewlett-Packard product and replacement parts can be obtained from your local Sales and Service Office.

Restricted Rights Legend. Use, duplication, or disclosure by the U.S. Government Department is subject to restrictions as set forth in subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 for DOD agencies, and subparagraphs (c) (1) and (c) (2) of the Commercial Computer Software Restricted Rights clause at FAR 52.227-19 for other agencies.

HEWLETT-PACKARD COMPANY
3000 Hanover Street
Palo Alto, California 94304 U.S.A.

Use of this manual and flexible disk(s) or tape cartridge(s) supplied for this pack is restricted to this product only. Additional copies of the programs may be made for security and back-up purposes only. Resale of the programs in their present form or with alterations, is expressly prohibited.

Copyright Notices. (C)copyright 1983-95 Hewlett-Packard Company, all rights reserved.

This documentation contains information that is protected by copyright. All rights are reserved. Reproduction, adaptation, or translation without written permission is prohibited except as allowed under the copyright laws.

(C)Copyright 1979, 1980, 1983, 1985-1993 Regents of the University of California.

This software is based in part on the Fourth Berkeley Software Distribution under license from the Regents of the University of California.

(C)copyright 1980, 1984, 1986 Novell, Inc.

(C)copyright 1986-1992 Sun Microsystems, Inc.

(C)copyright 1985-86, 1988 Massachusetts Institute of Technology.

(C)copyright 1989-93 The Open Software Foundation, Inc.

(C)copyright 1986 Digital Equipment Corporation.

(C)copyright 1990 Motorola, Inc.

(C)copyright 1990, 1991, 1992 Cornell University

(C)copyright 1989-1991 The University of Maryland.

(C)copyright 1988 Carnegie Mellon University.

Trademark Notices. UNIX is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company Limited.

X Window System is a trademark of the Massachusetts Institute of Technology.

MS-DOS and Microsoft are U.S. registered trademarks of Microsoft Corporation.

OSF/Motif is a trademark of the Open Software Foundation, Inc. in the U.S. and other countries.

Printing History

The manual printing date and part number indicate its current edition. The printing date will change when a new edition is printed. Minor changes may be made at reprint without changing the printing date. The manual part number will change when extensive changes are made.

Manual updates may be issued between editions to correct errors or document product changes. To ensure that you receive the updated or new editions, you should subscribe to the appropriate product support service. See your HP sales representative for details.

First Edition: January 1995 (HP-UX Release 10.0)

November 2002: This version does not update any content, it was modified to allow easier on-line viewing. No changes were made to the content. There may be some differences in format and structure, due to the differences in the versions of the authoring and presentation tools used. Figures were added back into the pdf version.

1. Getting Started

Peripheral Configuration in its Simplest Terms	13
Using SAM to Configure Peripherals	13
Using HP-UX Commands to Configure Peripherals	14
Understanding I/O Convergence	15
Understanding Device Special File Names	16
Sample Device Special File Names	17
Decoding Device Special Files with lssf.	18
Viewing the System Configuration with ioscan	19
Terse Listing of ioscan	19
Full Listing of ioscan	21
Configuring HP-UX for any Peripheral (A Summary)	25

2. Configuring Interface Cards

Planning to Configure an Interface Card	29
Maximum Configurations	31
Selecting Device Drivers for Your Interface Cards	32
Asynchronous Data Communication Configuration Guidelines	32
Centronics (Parallel) Configuration Guidelines	37
EISA Configuration Guidelines	38
Graphics Card Configuration Guidelines	39
Maintaining the Accuracy of Customized Graphics Configurations	41
HP-FL Configuration Guidelines	42
HP-IB Configuration Guidelines	44
Networking Configuration Guidelines	46
SCSI Configuration Guidelines	48
Configuring an Interface Card	55
For Further Information on Interface Cards	57

3. Configuring Terminals and Modems

Planning to Configure a Terminal or Modem	61
Planning to Configure a Port for a Terminal	61
Planning to Configure a non-HP Terminal	62
Planning to Configure a Port for a Modem	62
Selecting Device Drivers for Terminals and Modems	64

Contents

Configuring HP-UX for an HP Terminal or for a Modem	65
Additionally Configuring HP-UX for a Terminal	67
Differences between Console and Terminal Configuration	69
Running Screen-Oriented Applications on a Terminal	69
Configuring a Non-HP Terminal as a Console	70
Additionally Configuring HP-UX for a Modem	81
Requirements for Modems to Work on HP-UX	83
Removing or Moving a Terminal or Modem	85
Troubleshooting Terminal Problems	86
Unresponsive Terminals	86
Garbage Displayed on the Terminal Screen	88
For Further Information on Terminals and Modems	90

4. Configuring Disk Drives, Disk Arrays, and CD-ROM Drives

Planning to Configure a Disk Drive	93
Performance	93
Considerations for Configuring a Disk Array	94
Considerations for Configuring a CD-ROM Drive	94
Considerations for Configuring a Floppy Disk Drive	95
Selecting Device Drivers for a Disk Device and Interface	96
HP-IB Disk Configuration Guidelines	96
HP-FL Disk Configuration Guidelines	97
SCSI Disk Configuration Guidelines	98
Floppy Disk Drive Configuration Guidelines	101
Configuring HP-UX for a New Disk Device	102
Planning to Configure into your System a Disk Already Containing Data	104
Ensuring Against Clashes with HP-UX 10.0	105
Understanding How to Configure a Disk Already Containing Data	106
Configuring into your System an Unpartitioned Disk Already Containing Data ...	107
Configuring into Your System a Partitioned Disk Already Containing Data	109
Configuring into your System an LVM Disk Already Containing Data	111
Moving a Disk Drive to a Different Address	114
Removing a Disk Drive	119
Finding Out the Disk Model Number and Other Information	121
After Configuring HP-UX for the Disk Device	122

5. Configuring Magneto-Optical Devices

Planning to Configure a Magneto-Optical Device	125
Characteristics of Magneto-Optical Devices	125
Understanding Magneto-Optical Media Capacity	126
Magneto-Optical Disk Configuration Guidelines	127
Configuring HP-UX for a Magneto-Optical Disk	128
Magneto-Optical Disk Library Configuration Guidelines	129
Configuring HP-UX for a Magneto-Optical Disk Library.....	130
After Configuring a Magneto-Optical Device	132

6. Configuring Tape Drives

Selecting Device Drivers for a Tape Device and Interface	135
HP-IB Tape Drive Configuration Guidelines	135
SCSI Tape Drive Configuration Guidelines	138
Configuring HP-UX for a Tape Drive	140
Creating Customized Device Special Files for Tape Devices	142
Examples	142
After Configuring a Tape Drive	144

7. Configuring Printers and Plotters

Preparing to Configure HP-UX for a Printer or Plotter.....	149
Choosing Means of Access	149
Hardware Concerns	151
Software Concerns	151
Selecting Device Drivers for Your Printer or Plotter	152
Guidelines for Configuring a Printer or Plotter to an HP-IB Interface	152
Guidelines for Configuring a Printer or Plotter to a Serial Interface	155
Guidelines for Configuring a Printer or Plotter to a Parallel (Centronics) Interface .	158
Guidelines for Configuring a Printer to a SCSI Interface	159
Configuring a Printer Using HP-UX Commands.....	161
Creating a Device Special File for a Printer or Plotter Configured to a Serial Port	164
Creating a Device Special File for an HP-IB Printer	166
Guidelines for Configuring a Non-HP Printer to a Parallel Port	167
Configuring a Plotter or other Non-Automatically Configurable Output Devices Using HP-UX Commands	168

Contents

Moving a Printer or Plotter	170
For Further Information on Printer-Related Tasks	172
For Further Information on Plotter-Related Tasks	174

8. Configuring Uninterruptible Power Systems

Planning to Configure a UPS	177
Hardware Considerations	177
Software Considerations	179
Selecting Drivers for a UPS	180
Configuring a PowerTrust UPS	181
Configuring UPS to Cycle Power During Non-Work Hours.....	183
After Configuring the PowerTrust UPS	185
Troubleshooting the UPS	185

A. EISA Board Configuration

E/ISA Boards and CFG Files	189
Configuring the Software Required by the E/ISA Board	191
Configuring E/ISA Boards Using Interactive Mode	192
Sample Interactive Session to Add an E/ISA Card	193
Moving an E/ISA Board	201
Removing an E/ISA Board	202
Creating Identical E/ISA Configurations on Other Workstations	203
Troubleshooting E/ISA Board Configuration	204
Verifying the Syntax of a CFG File	204
Board Stops Working or No Non-Volatile Memory (NVM) Driver	204
Added or Moved Board Does Not Work	205
Board Configuration Conflicts	205
Two CFG Files Have the Same Name	206
E/ISA Board Power-Up Messages	207

B. Bus Architectures

Series 700 Bus Architecture	212
Model 712	213
Model 725/100	214
Model 770 (J Series)	216

Series 800 Bus Architecture	217
Model E Systems	217
Models F/G/H/I and 8x7 Systems	219
Models 890 and T500 Systems	220
Models 8x9 (K Series)	222

C. Major and Minor Numbers

Understanding how the Kernel Associates Drivers to Device	225
Major Numbers	226
Minor Numbers	226
Understanding the Construction of Device Special Files	227
Examples of Minor Number Creation	229
Minor Number Bit Assignments	231
Associating a Custom Driver with a Peripheral	235
Creating Device Special Files using mknod	238

D. Worksheets

Interface Cards	240
Terminals and Modems	241
Disk Drives	242
Tape Drives	244
Printers and Plotters	245
Uninterruptible Power Systems (UPS)	246

Index	247
--------------------	------------

Contents

1 Getting Started

Before physically *installing* a disk drive, tape drive, printer, or other peripheral device, you must *configure* the HP-UX operating system to communicate with it. *Configuring HP-UX for Peripherals* provides the software information needed for system administrators to configure the many peripheral devices supported on HP-UX.

Read this chapter for:

- an overview of peripheral configuration
- explanation of I/O convergence
- syntax of device special file names.
- information on associating device special files with their peripheral devices, by using `lssf` and `ioscan`.

Keep this manual and the following others available for reference when installing and configuring peripheral devices:

- The installation manuals shipped with the device.
- *HP-UX System Administration Tasks*
- *HP-UX Reference*

Commands such as `mksf`, `insf`, and `ioscan` (now available on both Series 700 and 800 systems) now make it largely unnecessary to manipulate the minor number literally. However, if you are configuring a peripheral for unusual circumstances, you might wish to consult the appendices at the back of this book.

NOTE


Configuring a peripheral device requires that you operate with `root` privileges. In consideration for others on the system, exercise caution when acting as superuser.

Peripheral Configuration in its Simplest Terms

Any peripheral device requires three steps to communicate with an HP-UX system: configure, install, reboot.

1. **Configure the device drivers into the kernel.** Device drivers are like translators that speak both the language of the peripheral device and the language of the computer.
2. **Install the hardware.** Perform any hardware-specific installation procedures required to physically connect the peripheral device to your computer. Then, turn on the power to the peripheral devices and *then* to the computer.
3. **Reboot the system.** As the system reboots, HP-UX automatically creates the necessary device special files required for the peripheral. At least one device special file must exist for the device driver to communicate with the peripheral device. Device special files tell the operating system which device driver to use, how to find the peripheral device, and what special characteristics the peripheral device employs.

Figure 1-1 The Essentials of Peripheral Configuration

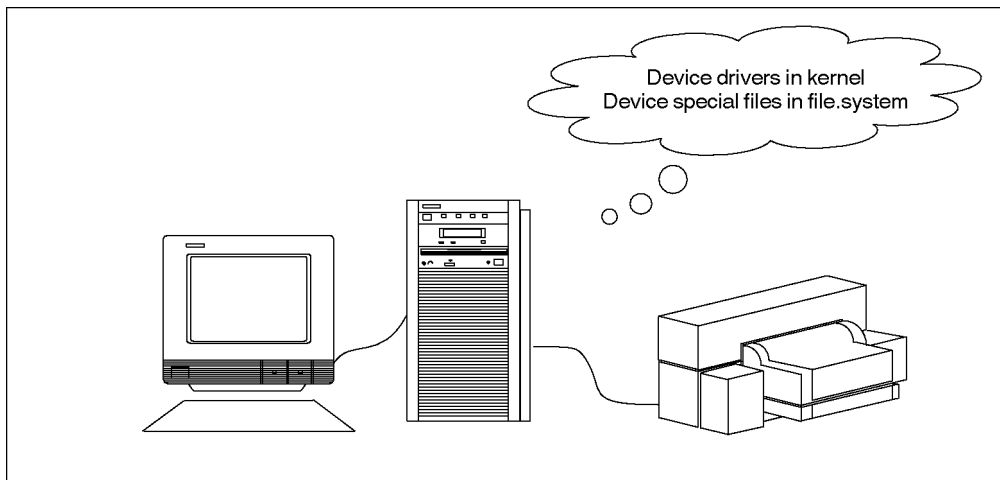

NOTE

Often, if you anticipate having to add a new external peripheral device, you can configure the device drivers into the kernel at a time when no one else is on the system. Then, when the peripheral arrives, you can physically install it with minimal user disruption.

Using SAM to Configure Peripherals

The HP-UX System Administration Manager (SAM) provides the easiest way to:

- view your system's configuration.
- configure the peripheral device's drivers into the kernel.
- regenerate the kernel after configuring the software.

To invoke SAM, type `/usr/sbin/sam`.

SAM's user interface and online help system allow you to discover the configuration information as you proceed through its screens. Once you provide SAM with basic information about the device being configured,

- SAM checks your currently running kernel configuration file for the required device drivers,
- reports whether or not the drivers are present,
- adds them if necessary, and
- reconfigures the kernel.

For some devices, SAM also automates other necessary steps. For example, when adding a terminal to your system, SAM edits the `/etc/inittab` file to add the terminal entry. You have to perform this step manually if you are not using SAM to configure the terminal.

Using HP-UX Commands to Configure Peripherals

You must use HP-UX commands to configure peripherals to the system if the device cannot be automatically configured or if SAM is not on your system.

Virtually all Hewlett-Packard disk drives, tape drives, printers, plotters and terminals are configurable automatically. Each peripheral-specific chapter of this book gives procedures for using HP-UX commands for configuration.

Exceptions: Drivers insf Cannot Recognize

Third-party drivers and certain drivers used for instrumentation or black-box applications are not recognized by `insf` to create device files automatically during the reboot process.

If you are adding a peripheral device requiring a driver that cannot be configured automatically, you must configure the device driver and create the device files using the `ioscan` and `mksf` or `mknod` commands.

For guidance in these cases, consult "Appendix C: Major and Minor Numbers," at the end of this book. "Chapter 7: Configuring Printers and Plotters" also has information on configuring instruments that require manual manipulation.

Understanding I/O Convergence

As of Release 10.0, the HP-UX I/O system is largely converged, allowing for an environment that supports a greater flexibility of bus architectural combinations. This is seen most dramatically on Model K (8x9) systems, which have capabilities previously found only on Series 700 workstations.

From an administrative perspective, I/O convergence means that the vast majority of configuration tasks are now performed identically, whether for a Series 700 or Series 800 system. Device file names on both architectures are consistent (the naming convention is explained in the next section), and drivers have been streamlined to work in this converged environment.

Think of the drivers as belonging to one of two broad categories, according to the PA-RISC bus architecture on which they run — the Server I/O (SIO) system and the Workstation I/O (WSIO) system. The SIO driver environment includes Series 800 CIO and HP-PB bus architectures. The WSIO driver environment supports bus architectures traditionally associated with Series 700 workstations, and provides greater openness for use of third-party interfaces and devices.

Throughout this manual, the terms Series 700 and 800 continue to be used, as the command `uname -m` continues to report Series 700 or 800 model numbers. Although we use the terms Series 700 and Series 800 when we describe drivers, we are really implying WSIO or SIO driver environments. These separate environments permit only those drivers required by a given bus architecture to be configured into the kernel as needed (for example, only WSIO drivers on a legacy Series 700 system or SIO d WSIO drivers on a Series 800 system).

Read the `/usr/conf/master.d/core-hpux` file to better understand the architectural context dependencies. Also, consult *master(4)* in the *HP-UX Reference*.

Understanding Device Special File Names

Device special files tell the operating system which device driver to use, how to find the peripheral device, and what characteristics the peripheral device should employ. Characteristics vary by device. Thus, device special files for magneto-optical devices show the surface being addressed, while those for tape drives show rewind and density.

Most device special file names contain the location of the device on the bus architecture. To see this, display the files in any subdirectory of the `/dev` directory. Note, all mass storage devices adhere to a syntax that includes `c#t#d#[s#]` (other kinds of device files use a related convention):

c#	represents the card instance number for the <i>class of interface card</i> to which the device is connected. Classes of interface cards include <code>ext_bus</code> , <code>graphics</code> , <code>tty</code> , <code>lan</code> , and others. The card instance of an interface card is unique for its specific class. There is no relationship between the instance number and the slot number of the interface card in the card cage. Class and instance number can be seen in the first two columns of <code>/usr/sbin/iocscan -f</code> output. When interpreting a device special file, the <i>only</i> significant instance number is the card instance (that is, the instance number for the <i>class of interface</i> to which a device is attached). Thus, in a sample disk device file <code>/dev/rdisk/c1t4d0</code> , the <code>c1</code> refers to the card instance, <i>not</i> to an LU number (as in previous releases).
t#	represents the target address of the device on the interface bus, and can range from 0 to 7 maximum. Typically <code>t#</code> is the address set with jumpers or dip switches on the device itself.
d#	represents the device number , and can range from 0 to 7 maximum. On SCSI devices, <code>d#</code> is the SCSI LUN; on HP-FL and HP-IB, it is the unit number. Except for multi-function devices, <code>d#</code> is typically <code>d0</code> .
s#	specifies section number (optional; made available for backward compatibility). Note, section 0 now represents the <i>entire</i> disk, while section 2 represents a small disk section (previously section 0). If the <code>s#</code> is not shown, the device special file refers to the entire disk.

Sample Device Special File Names

Every peripheral-specific chapter in this book has tables of configuration requirements that show the default device special file names for that class of device. Here are some sample device special files and their possible meanings:

<code>/dev/rdisk/c0t6d0</code>	Entire disk accessed in character (raw) mode through SCSI card instance 0, target 6, LUN 0.
<code>/dev/dsk/c3t2d4</code>	Entire disk accessed in block mode through HP-FL card instance 3, address 2, Unit 4.
<code>/dev/rac/c0t0d0_11a</code>	Surface 11a of a magneto-optical disk whose autochanger in a disk library accessed in raw mode through card instance 0, target 0, LUN 0.
<code>/dev/rmt/c1t0d0BESTnb</code>	Tape drive accessed through card instance 1, target 0, LUN 0. Tape writes at best available density/format, no rewind, Berkeley-style close.
<code>/dev/rmt/0mnb</code>	Tape drive device special file with identical characteristics (linked) to <code>/dev/rmt/c1t0d0BESTnb</code> .
<code>/dev/floppy/c1t3d0</code>	Entire floppy disk drive accessed in block mode through SCSI card instance 1 located in slot 13, with target 3, LUN 0.
<code>/dev/tty0p0</code>	Serial port of built-in card instance 0 port 0, hardwired at address 56.0; accessed through driver mux4.
<code>/dev/c1t0d0_lp</code>	Parallel port on core I/O card 1, set to handshake mode 2.
<code>/dev/lp</code>	Parallel port on core I/O card 1, set to handshake mode 2; device file is linked to <code>/dev/c1t0d0_lp</code> .

Both `lssf` and `ioscan` commands display the interface to which a device is connected. These are discussed in the next sections.

Decoding Device Special Files with lssf

Use the `/usr/sbin/lssf` command to decode device special files. The following figure compares `ll` and `lssf` output.

NOTE

Throughout this manual, examples of commands usage are shown as **bold text**.

```

ll /dev/rdisk/c11t2d0
crw-r----- 1 bin      bin      175 0x0b2000 Mar 25 15:46 /dev/rdisk/c11t2d0
/usr/sbin/lssf /dev/rdisk/c11t2d0
disc2 card instance 11 HPFL address 2 unit 0 section 0
  at address 6/8.4.2 /dev/rdisk/c11t2d0

ll /dev/rct/c0t3d1
crw-r----- 1 bin      bin      214 0x003140 Mar 25 12:41 /dev/rct/c0t3d1
/usr/sbin/lssf /dev/rct/c0t3d1
disc1 card instance 0 HPIB address 3 unit 1 cartridge tape section 0
  at address 2/4.0.3 /dev/rct/c0t3d1

ll /dev/rmt/c0t1d0NOMOD
crw-rw--rw-- 1 bin      bin      205 0x00100f May  4 11:31
/dev/rmt/c0t1d0NOMOD
/usr/sbin/lssf /dev/rmt/c0t1d0NOMOD
stape card instance 0 SCSI target 1 SCSI LUN 0 at&t keep existing
density/format
  at address 2/0/1.1.0 /dev/rmt/c0t1d0NOMOD

ll /dev/rmt/c0t1d0BESTb
crw-rw--rw-- 2 bin      bin      205 0x001080 Apr 28 17:24
/dev/rmt/c0t1d0BESTb
/usr/sbin/lssf /dev/rmt/c0t1d0BESTb
stape card instance 0 SCSI target 1 SCSI LUN 0 berkeley best density
available
  at address 2/0/1.1.0 /dev/rmt/c0t1d0BESTb

ll /dev/rac/c1t1d0_2a
crw-r--r-- 1 root      users    230 0x011003 May  3 16:46 /dev/rac/c1t1d0_2a
/usr/sbin/lssf /dev/rac/c1t1d0_2a
autox0 card instance 1 SCSI target 1 SCSI LUN 0 optical disk 2 side a
  at address 52.1.0 /dev/rac/c1t1d0_2a214

```

Viewing the System Configuration with ioscan

The `/usr/sbin/ioscan` command is the single most versatile tool in HP-UX for displaying your system configuration. For example, you can use `ioscan` to identify available hardware addresses.

Terse Listing of ioscan

In its simplest form, `/usr/sbin/ioscan` displays hardware path, device class, and description. The `-u` (usable devices) or `-k` (kernel structures) options give fastest response, because they do not probe the hardware.

The following example shows devices on a Series 800 Model E, connected through the HP-PB bus converter at address 56. The 56/52 is the address of the single-ended SCSI interface. The shaded digits below are the addresses already being used on the card. Note that there is no 56/52.4.0. If you attach another SCSI device to this card, you can set its address to 4.

```
/usr/sbin/ioscan -k
H/W Path   Class      Description
=====
56          bc         Bus Converter
56/52       ext_bus    HP 28655A - SCSI Interface
56/52.0     target
56/52.0.0   tape      SCSI Tape
56/52.1     target
56/52.1.0   disk      HP C2247M1 - SCSI Disk
56/52.2     target
56/52.2.0   disk      HP C2247M1 - SCSI Disk
56/52.3     target
56/52.3.0   disk      TEAC FC-1 ... - SCSI Disk
56/52.5     target
56/52.5.0   disk      HP C2247M1 - SCSI Disk
56/52.6     target
56/52.6.0   disk      HP C2247M1 - SCSI Disk...
```

Understanding Hardware Addresses

You can identify each piece of hardware configured to an HP-UX computer by its **hardware address** (shown in ioscan as H/W Path).

The length of these numerical sequences differ by system model and architecture, but every hardware path leads you through the bus structure, starting from the bus closest to the system processor and ending at the output device.

ioscan -H *hardware_path* shows you the sequence of connection to or from the specified location. In the following example,, which displays output from a Model 770, a disk attached to the GSC built-in Fast/Wide SCSI Interface has the hardware address 8/0.5.0.

```
/usr/sbin/ioscan -H 8/0.5.0
H/W Path      Class      Description
=====
                bc
8              bc              I/O Adapter
8/0            ext_bus        GSC built-in Fast/Wide SCSI Interface
8/0.5          target
8/0.5.0        disk          DEC      DSP3210SW
```

The hardware path can be decoded as follows:

- 8 identifies the bus adapter connecting the GSC+ bus to the system bus.
- 0 identifies the slot number of the Fast/Wide SCSI interface. (See Figure B-3 in Appendix B, Bus Architectures.)
- 5 represents the "target", or SCSI address, set on the disk device itself.
- 0 indicates a unit number or SCSI LUN number.

Field separators (slash (/) or dot (.)) separate the numbers of the hardware address and have no bearing on system administration. The displayed classes are more meaningful in the context of instance numbers, which are visible in ioscan -f listings, and will be discussed shortly. Explanation of hardware addresses on multi-function cards is in Appendix B.

Understanding the Description in `ioscan`

The description field displayed by `ioscan` derives from the peripheral device itself, and is sometimes more cryptic than is ideal. Typically, a numeric description refers to the manufacturer's vendor ID, and in some cases, this number corresponds to more than one model number. If you are troubleshooting a peripherals problem, the description is often useful information to an HP support engineer.

Full Listing of `ioscan`

`ioscan -f` displays full information about the system configuration, including instance number, device/interface driver, software state, and hardware type. The `-fn` option displays the device special files also.

`/usr/sbin/ioscan -f`

Class	I	H/W Path	Driver	S/W State	H/W Type	Description
...						
ext_bus	0	8/0	c720	CLAIMED	INTERFACE	F/W SCSI
target	0	8/0.5	tgt	CLAIMED	DEVICE	
disk	0	8/0.5.0	sdisk	CLAIMED	DEVICE	HP C2247
ba	0	8/12	bus_adapter	CLAIMED	BUS_NEXUS	Core I/O Adapter
ext_bus	2	8/12/0	CentIf	CLAIMED	INTERFACE	Parallel Interface
audio	0	8/12/1	audio	CLAIMED	INTERFACE	Audio
tty	0	8/12/4	asio0	CLAIMED	INTERFACE	RS-232C
ext_bus	1	8/12/5	c700	CLAIMED	INTERFACE	SCSI
target	1	8/12/5.0	tgt	CLAIMED	DEVICE	
disk	1	8/12/5.0.0	sflop	CLAIMED	DEVICE	TEAC FC-1
...						
lan	0	8/12/6	lan2	CLAIMED	INTERFACE	LAN
bc	2	10	ccio	CLAIMED	BUS_NEXUS	I/O Adapter
graphics	0	10/0	graph3	CLAIMED	INTERFACE	Graphics
...						

Understanding Class and Instance

The following ioscan output shows just the ext_bus class of a sample Model 770 system. The card instance numbers are listed under I and are highlighted.

For device file naming and hardware mapping, the *only* significant instance numbers are those associated with the INTERFACE hardware type.

```
/usr/sbin/ioscan -C ext_bus -f
Class      I  H/W Path  Driver      S/W State H/W Type  Description
=====
ext_bus    0  8/0      c720        CLAIMED   INTERFACE F/W SCSI
ext_bus    2  8/12/0   CentIf      CLAIMED   INTERFACE Parallel Interface
ext_bus    1  8/12/5   c700        CLAIMED   INTERFACE SCSI
```

The card instance number is assigned by the operating system to the interface card and reflects the order ioconfig binds that class of interface card to its driver when it boots.

Instance is stored in two files — /etc/ioconfig and /stand/ioconfig. These files retain their information across reboots, unless one is corrupted or missing, in which case, ioinit will rebuild the entire /dev structure. (If this occurs, you would have to recreate any customized permissions or files.)

For further explanation of card instance, read the white paper entitled *HP-UX 10.0 Device File Naming Convention*.

An Example Showing Correlation Between Card Instance and Device Files

The following example shows `ioscan` output taken from a Model 735. The shaded numbers show how card instance number and hardware path elements map directly into the device special file `/dev/dsk/c1t5d0` as card instance, target number, and device number.

Typically, the card instance maps as the digit after the letter `c` (or for terminals, the number after `tty`), as shown in the following example.

Note, the card instance designated in the device special file refers to the interface card, *not* to the instance number of the peripheral device attached to the card. (Ignore those numbers. This is a departure from the LU concept of previous HP-UX Series 800 releases. LU numbers were similar to device instance numbers and *are not used*.)

The card instance number is unique *only* for the specific class (in this case, `ext_bus`) of interface. Thus, for example, the `tty` class of interface has its own sequence of card instance numbers, beginning with zero, which appear in its device files.

```
/usr/sbin/ioscan -fn -H 2/0/7
Class      I  H/W Path  Driver      S/W State  H/W Type  Description
=====
ext_bus    1  2/0/7     c700        CLAIMED    INTERFACE Built-in F/W SCSI
target     3  2/0/7.5   target      CLAIMED    DEVICE
disk       2  2/0/7.5.0 sdisk       CLAIMED    DEVICE      HP      C2247
                        /dev/dsk/c1t5d0 /dev/rdsk/c1t5d0
...
```

Identifying Device Special Files Associated with a Peripheral Device

You can use `ioscan -fn` (or `-fkn` or `-fun`) to show device special file names associated with a peripheral. You can also add other `ioscan` options (such as `-H`, `-C`, `-d`, or `-I`) to limit your output to specific elements in your configuration.

The following example, using `-C tape`, shows the device files available for tape class, as well as the location and type of tape device. Note too, the new tape device file naming convention. These are explained in Chapter 6, "Configuring Tape Drives," and on the `mt(7)` manpage.

```
/usr/sbin/ioscan -fn -C tape
```

```
Class   I  H/W Path   Driver S/W State H/W Type  Description
=====
tape    0  56/52.0.0   tape2  CLAIMED  DEVICE   WANGTEK 51000 SCSI
                /dev/diag/rmt/c0t0d0  /dev/rmt/c0t0d0BESTn
                /dev/rmt/c0t0d0BEST  /dev/rmt/c0t0d0BESTnb
                /dev/rmt/c0t0d0BESTb
```

Consult the `ioscan(1M)` manpage for further information about this tool.

Configuring HP-UX for any Peripheral (A Summary)

Prepare by gathering information required for the successful configuration of the peripheral. Considerations vary and are discussed in each peripheral-specific chapter. For example:

- Have you prepared the physical location for the peripheral device?
- To what interface are you connecting the peripheral?
- What device drivers are required by the peripheral device?

In virtually all cases, the System Administration Manager (SAM) provides the simplest interface for configuring HP-UX for any standard peripheral device. If you must use the command line interface instead of SAM, the following procedure will familiarize you with the task.

1. Determine the device drivers needed for your peripheral device and interface by consulting the tables in the chapter devoted to that class of peripheral device. If any necessary device driver is absent from the kernel, you will need to rebuild the kernel to include it.

Here is how to rebuild the kernel:

- a. Change directory to the build environment (`/stand/build`). There, execute a system preparation script, `system_prep`. `system_prep` writes a system file based on your current kernel in the current directory. (That is, it creates `/stand/build/system`.) The `-v` provides verbose explanation as the script executes.

```
cd /stand/build
/usr/sbin/sysadm/system_prep -v -s system
```

- b. Edit the `/stand/build/system` file to add the absent driver(s).
- c. Build the kernel by invoking the `mk_kernel` command. This creates `/stand/build/vmunix_test`, a kernel ready for testing.

```
/usr/sbin/mk_kernel -s system
```

- d. Save the old system file and kernel by moving them. Thus, if anything goes wrong, you still have a bootable kernel.

```
mv /stand/system /stand/system.prev
mv /stand/vmunix /stand/vmunix.prev
```

- e. Move the new system file and new kernel into place, ready to be used when you reboot the system.

```
mv /stand/build/system /stand/system
mv /stand/build/vmunix_test /stand/vmunix
```


2. Notify users that the system must be rebooted.
3. Shut down and halt the system using the `/usr/sbin/shutdown -h` command.
 - a. When HALTED, you may cycle power appears on the screen, turn off the computer and unplug the power cord. This is recommended for all devices; for SCSI devices and interface cards, it is *required*.

- b. Install the peripheral device, following directions in the supplied hardware documentation.
 - c. Power on the peripheral devices and wait for them to signal ready; *then* power on the computer system, which will cause your system to reboot. As HP-UX reboots, it will create the device special files required by the new peripheral device in the appropriate /dev directories.
4. Verify the configuration by invoking the `ioscan` command, as discussed earlier in this chapter.

2 **Configuring Interface Cards**

Configuring an interface card or device adapter may provide new connectivity to external devices or instruments. For this to occur, the interface driver for the card must be present in the kernel. When the system is booted, HP-UX associates the driver (software module) with the card (hardware path) to provide communication for the external device or instrument.

Figure 2-1 Role of Drivers in Configuring Interface Cards and Peripheral Devices

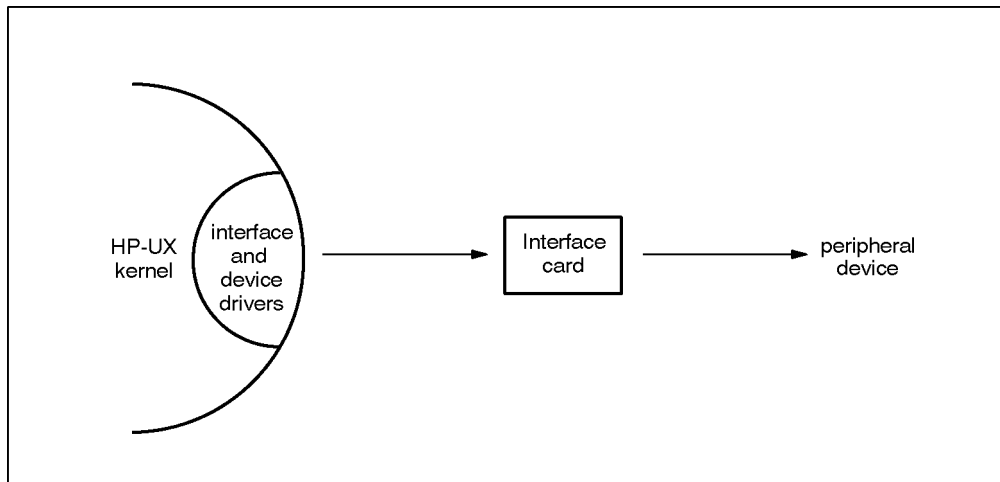

This chapter gives guidelines and configuration procedures for each type of HP interface card. If you are configuring an EISA or ISA card, also consult Appendix A, EISA Board Configuration. If you are configuring a custom SIO-style driver, consult Appendix C, Major and Minor Numbers.

Planning to Configure an Interface Card

- **Read the instructions** to be sure you understand them before proceeding. Have available the documentation supplied with the interface card.
- **Observe anti-static precautions** when handling interface cards. Interface cards and device adapters are susceptible to damage by electrostatic discharge, which can result in degraded performance or loss of operation.
 - Keep the card in or on its anti-static packaging until you install it, or use a static-free workstation, HP part number 9300-0933.
 - Use a grounding wrist strap when handling the interface card.
 - Handle the card only by its non-connector edges, faceplate (bulkhead), or extractor levers.
 - If necessary, store interface cards and device adapters in their original shipping containers or equivalent anti-static packaging. The storage area should be clean, dry, and free of corrosive elements.
- **Create a detailed record of your configuration.**
 - Use a worksheet in the back of this book to record the data provided on the stickers attached to the card. If problems arise, the codes provide service engineers with manufacturing version. The following information typically appears on the stickers:
 - Part number
 - Version and date, encoded in a five-digit alphanumeric string
 - Serial number, encoded in a ten-digit alphanumeric string
 - Other production identification information.
 - Record the firmware revision of the interface card.
 - Record the link level address for the processor. It comes with the shipping. The `/usr/sbin/lanadmin` command reports back the station address.
 - Record any dip switches or address settings you make on any cards or external devices.
 - Keep a current copy of output from `/usr/sbin/ioscan -f`, for a total picture of your system's configuration, including use of hardware slots and configured device drivers.

NOTE

The HP Precision Bus (HP-PB) backplane is a slot-priority based system. The higher the slot number in which a card is installed, the higher the card's priority for gaining access to and communicating over the backplane. Thus, a card installed at slot 10 has a higher priority than a card at slot 1.

- **Observe HP recommendations regarding hardware limitations and requirements.**

Planning to Configure an Interface Card

- Do not exceed recommended cabling lengths or maximum number of peripheral devices connected to an interface card. Note, these limitations vary widely depending on bus traffic, kind of I/O, and system. For explicit information, consult “Maximum Configurations” or other HP-published configuration guidelines.
- Take care that total power consumption of all voltages does not exceed card-cage limitations.
- Terminate SCSI devices as required. (See “SCSI Signal Termination”, later in this chapter, for explanation of SCSI terminators.)
- **If desired, install application software before physically installing the card.** Use the command `/usr/sbin/swinstall` and then reboot the system.
- **Warn users in advance** that you plan to bring the system down for installation. On a multiuser system, you can use the `wall(1M)` command.
- **Do not connect or disconnect a device while the system is running.** Do not turn power on or off to a mass storage device connected to a powered-up system. Doing so could result in data corruption or a system panic.

Maximum Configurations

Depending on interface, multiple peripheral devices can be connected to any interface card. However, because maximum device connections are device- and platform-dependent, the following information represents basic guidelines *only*. For detailed information, contact an HP Customer Engineer or field office, which should have access to recent information published in the HP 9000 configuration and price guides.

Table 2-1 Maximum Recommended Device Connections by Interface

Type of Interface	Maximum Devices per Card	Maximum Cabling
HP-IB	Varies ^a	20m
SCSI (Single-Ended)	7	6m ^b
SCSI (Differential)	7	25m ^b
SCSI (Fast-Wide)	15	25m ^b
HP-FL	8	(see note) ^c

- a. Depending on type of peripheral device.
HP-IB electrical specification permits up to 14 devices connected simultaneously. Devices requiring parallel polling protocol require use of addresses 0-7 only. Instruments can use addresses 0-29.
- b. Including internal cable length
- c. P-bus electrical cables limit intra-device distances; a maximum of 500m fiber-optic cable can connect devices to the server.

Selecting Device Drivers for Your Interface Cards

The following sections describe each interface and their connectivity to peripherals.

Asynchronous Data Communication Configuration Guidelines

HP-UX multiplexers provide asynchronous data communication using protocols RS-232-C, RS-422, or RS-423 (depending on the card). All HP-UX computers are equipped with RS-232-C serial ports. Additional serial cards increase the number of connections possible between the SPU and terminals, modems, printers, and uninterruptable power system (UPS). Table 2-2 summarizes the scope of HP cards, architecture, and drivers available. It also identifies the distribution panels available for each serial card.

Table 2-2 Multiplexer Connectivity Configuration Requirements

Card	Ports, Protocol	Architecture	Device Drivers	Available Distribution Panels
(internal)	2-port MUX RS-232-C	Series 700	asio0	none
98190A	16-port MUX RS-232-C	Series 800 CIO	mux0 ^a	ADP 5062-3070
28639-50001	2-port MUX ^b	Models 890, T500	mux4 ^c	none
40299B	8-port MUX RS-232-C or RS-422 ^d	Series 800 HP-PB	mux2 ^e	ADP 5062-3070 ADP422 5062-3085
J2092A	16-port RS-232-C ^f	HP-PB	mux2 ^e	DDP 5062-3066 DDP 5181-2085 RJ45 0950-2431
J2093A	32-port MUX RS423 or RS422 ^g	HP-PB	mux2 ^e	DDP 5062-3066 DDP 5181-2085 RJ45 0950-2431
J2094A	16-port MUX RS-232-C ^h	HP-PB	mux2 ^e	MDP 5062-3054
J2096A	32-port MUX RS-232-C ^f	HP-PB	mux2 ^e	DDP 5062-3066 DDP 5181-2085 RJ45 0950-2431
A1703-60003	2-port MUX ⁱ	Series 800 Models F/G/H/I	mux4 ^c	none
A1703-60022	16-port MUX ^j	Series 800 Models E/F/G/H/I	mux2 ^e	MDP 5062-3054 DDP 5062-3066 DDP 5181-2085

a. Specifying mux0 causes cio_ca0, sio, pfail, and pa to be included in the kernel.

b. The two ports can be used for console and remote console only; card also includes access port (AP).

- c. Specifying mux4 causes lanmux0, lantty0, sio, pfail, and pa to be included in the kernel.
- d. Card also includes console and access port (AP)
- e. Specifying mux2 causes sio, pfail, and pa to be included in the kernel.
- f. Peripheral devices must be local (up to 15m distance); does not support modem signals.
- g. up to 1200m.
- h. Peripherals may be connected locally (up to 15m) using data and modem signals, or remotely using asynchronous modems.
- i. Personality card also includes AP, SCSI, LAN. The two ports of this card can be used for console and remote console only.
- j. Personality card also includes AP, SCSI, parallel.

Distribution Panels for Asynchronous Connectivity

Distribution panels (DDPs, ADP/MDPs) can be used to expand the connectivity between serial interface card and peripheral device. Data communications and terminal controllers (DTCs) provide additional serial connectivity for local or remote devices directly to the LAN. These mechanisms are illustrated in Figure 2-2.

Figure 2-2 Serial Connectivity via Distribution Panels or DTC

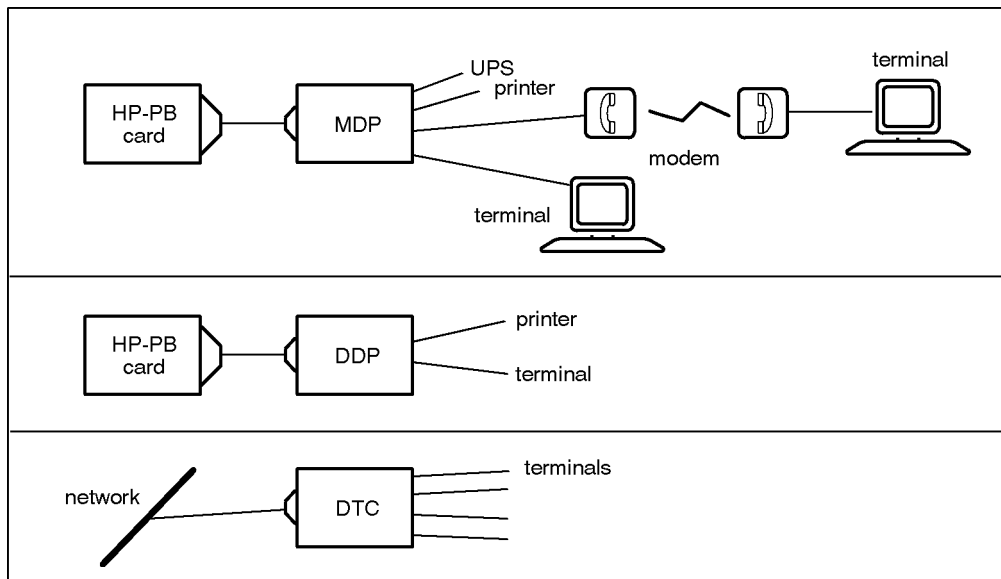


Table 2-3 summarizes the distribution panels and their capabilities. All distribution panels listed provide connectivity for terminals, printers, and plotters. Those with full duplex modem control provide connectivity for modems also.

Table 2-3 Distribution Panels

Model	Type of Distribution Panel	Compatible Protocols	Complexity	No. Ports, Connectors	Form Factor	Duplex Modem Control
0950-2431	Direct (DDP)	RS-232-C ^a RS-423 ^b	pass-through	16 RJ45	19in. rack-mount	no
5062-3054	Modem (MDP) ^c	RS-232-C ^a	added logic	8 DB25 female	10.25 x 4.25in.	yes
5062-3070	Active (ADP)	RS-232-C ^a	added logic	8 DB25 female	10.25 x 4.25in.	yes
5062-3085	Active (ADP)	RS-422 ^b	added logic	8 DB25 female	10.25 x 4.25in.	yes
5181-2085	Direct (DDP)	RS-232-C ^a RS-423 ^b	pass-through	8 DB25 female	19in. rack-mount	no
28659-60005	Modem ^d	RS-232-C ^a	added logic	6 DB25 female	8.5 x 4in.	yes

a. 3 pins: transmit, receive, ground.

b. 4 pins: transmit, transmit ground, receive, receive ground

c. formerly ADP II

d. Used on CIO-based systems only.

Data Communication and Terminal Controllers (DTC)

Data communication and terminal controllers (DTCs) are stand-alone boxes that connect to the LAN to provide additional serial connections for local or remote devices. Unlike serial interface cards, which communicate directly with the core operating system, DTCs use Telnet-TCP/IP protocols to communicate with the peripheral devices. Therefore DTCs provide most, but not all, the same functionality. Two types of DTCs are available:

- **DTC 16TN/MX telnet terminal server (J2060A/J2063A)**, providing direct connection for LAN, diagnostics, and up to 16 serial-connected peripherals.
- **DTC 72MX communications server (J2070A)**, providing LAN, telnet access, X.25 access, and connection for up to 72 serial-connected peripherals via an asynchronous processor board.

DTCs must be configured by one of two DTC software products, HP OpenView DTC Manager (HP part number D2355A) and HP DTC Manager/UX (HP part number J2120A), both of which can be used with HP-UX systems. Consult your HP Sales Representative for full information.

RS-232-C Cabling Guidelines

For cabling purposes, serial devices may be thought of as Data Communications Equipment (DCE) or Data Terminal Equipment (DTE). Historically, DCEs were modems, and DTEs were whatever terminated the data path, typically a terminal at one end, and computer at the other. When transmitting remotely, the circuit may be shown diagrammatically as follows, with the active pins listed in Table 2-4.

Computer [DTE] - { DCE ~ phone lines ~ DCE } - [DTE] terminal

Table 2-4 DCE and DTE Pin Assignments

	DCE pins	DTE pins
Transmit^a	3	2
Receive	2	3
Monitor	4,20	5,6,8,22
Assert	5,6,8,22	4,20
Ground	7	7

a. For simple serial I/O, only transmit, receive, and ground are required.

Table 2-5 provides a quick reference to RS-232-C cabling between serial devices and an HP-UX system. Neither RS-422 nor direct CPU-to-CPU connections are tabulated.

Table 2-5 RS-232-C Interconnections

Host Computer Connection ^a	Device Connection	Cable Suggested
DTE-4F	DCE-25F	Not recommended for DCEs. Use 92219T + 17255=D.
DTE-4F	DTE-25F	92219T
DTE-4F	DTE-25M	92219T + 92224F adapter
DTE-9F	DCE-25F	92221M, or 98561-61604 + 40242M
DTE-9F	DTE-25F	92221P, or 98561-61604 + 40242G
DTE-9F	DTE-25M	98561-61604 + 40242C
DTE-9M	DCE-25F	24542M, or 98574-61606 + 92221M, or 98574-61606 + 98561-61604 + 40242M
DTE-9M	DTE-25F	24542G, or 98574-61606 + 92221P, or 98574-61606 + 98561-61604 + 40242G
DTE-9M	DTE-25M	24542H, or 98574-61606 + 98561-61604 + 40242C
DCE-25F	DCE-25F	40242G
DCE-25F	DTE-25F	40242M or 92224M adapter, if cables present
DCE-25F	DTE-25M	40242C or connect directly, if cables present
DCE-25F	DCE-25F	92219Q
DTE-25F	DCE-25F	40242M, or 92224M adapter, if cables present
DTE-25F	DTE-25F	40242G
DTE-25F	DTE-25M	17255D
DTE-50F	DCE-25F	5061-4215
DTE-50F	DTE-25F	5061-4216 + 92224M
DTE-50F	DTE-25M	5061-4216

a. F denotes female receptacle; M, male plug. 4 denotes USOC RJ-11C connector (as on contemporary consumer telephones), 9 denotes 9-pin DB-0 subminiature D-style connector, 25 denotes 25-pin DB-25 subminiature D-style connector, 50 denotes 50-pin amp "blue ribbon" D-style connector.

Centronics (Parallel) Configuration Guidelines

The centronics (parallel) interface allows characters to transfer over multiple data lines, one bit per line. This results in faster speed than serial transmission and is preferred for configuring printers, plotters, and scanners.

On Series 700 workstations, the centronics (parallel) interface is provided as a standard feature; Series 800 systems may have a parallel interface on the multi-functional I/O card (personality card) supplied standard with the computer or on an optional SCSI/Centronics interface card. Centronics is not supported on Series 800 CIO systems.

Table 2-6

Centronics Configuration Requirements

Architecture	Interface card	Interface Driver
Series 700 Core I/O	(internal)	CentIf ^a
Series 800 HP-PB	28655A	lpr0

a. Specifying CentIf causes ChrDrv to be included in the kernel.

EISA Configuration Guidelines

When configuring an interface card to the EISA bus, the `eisa` device driver must be present in the kernel, that is, it must be listed in `/stand/system`.

Because EISA is a set of services used by other interfaces, configuring EISA cards is done differently than for other HP-UX interfaces. Refer to Appendix A, "EISA Configuration," for detailed information on configuring EISA cards and using the `/sbin/eisa_config` utility.

Swapping to an EISA Device

If you are adding a device to your system that you plan to use as a primary swap device, and the device will be connected to an EISA card, you *must* perform the task in the following order:

1. Shut down the system without changing the kernel (still swapping to the original swap device).
2. Add the EISA card and connect the new device.
3. Boot the system, which is still swapping to the original swap device.
4. Configure the kernel to swap to the new EISA device.
5. Reboot the system.
6. If the new swap device is connected to an EISA card, it will be configured automatically by `/sbin/eisa_config`. If the new card creates a resource conflict with EISA cards already configured, you must run `eisa_config` manually to resolve the conflict. If the new swap device is connected to an ISA card, you must run `eisa_config` manually to configure the new swap device.

Graphics Card Configuration Guidelines

The following table shows the driver and device special files used by graphics cards and subsystems.

Table 2-7 Graphics Card Configuration Requirements

Architecture	Required Drivers	Default Device Special Files
Series 700 all models Series 800 Models 8x9	graph3 ^a	/dev/crt /dev/crt0 /dev/crt1 /dev/crt2 /dev/crt3 /dev/ocrt /dev/ocrt0 /dev/ocrt1 /dev/ocrt2 /dev/ocrt3

a. Specifying graph3 causes wsio, ite, and framebuf to be included in the kernel.

During system bootup, `iocinit` creates the default device special files shown in this table when it encounters the framebuf driver.

If for any reason these device files are insufficient for your purposes, you can create new ones using `mknod`. As shown in `/usr/conf/master.d/core-hpux`, the major number for framebuf (the driver that provides the additional graphics capability) is 174. A character (raw) device special file is required. Use the bit assignments shown for graph3 interface driver in Table C-5 in Appendix C of this manual.

Graphics capabilities can be enhanced by installation of any of a growing family of cards and subsystems. Table 2-8 is intended only to give a rough idea of the possibilities available on HP workstations. Consult your HP Sales Representative for information targeted to your specific needs.

Table 2-8 Graphics Enhancement Capabilities

Product	Compatibility	Provision
98768A CRX subsystem	Series 700	Upgrades to CRX color graphics workstation
A1439 24-bit Z Buffer and Graphics Accelerator card	Models 720, 730, 735, 750 or 755	Converts CRX-24 workstation to a CRX-24Z configuration.
A2269A Dual CRX Graphics card	Models 720, 730, 735, 750, 755.	Upgrades Model 750 or 755 from dual CRX workstation to a quad-CRX (four-monitor) configuration; provides connectivity for two graphics displays on a single card.
A2270A/A2271A/A2272A	Models 720, 730, 735, 750, 755	Upgrades Model 750 or 755 CRX-24 to a dual CRX-24 (two-monitor) configuration. Upgrades Models 720, 730, 735, 750, or 755 to CRX-24 workstations. A2272A upgrades a Series 700 PVRX workstation to CRX-24 configuration.
A2666A CRX-48Z subsystem	Models 735 or 755	Upgrades from CRX-24Z to CRX-48Z configuration.
A2667A CRX-48Z subsystem	Model 735 or 755	Upgrades PVRX to CRX-48Z configuration.
A2673A CRX-24 subsystem	Model 715 or 725 EISA	Upgrades to CRX-24 configuration.
A2674A 24-bit Z Buffer and Graphics Accelerator	Model 715 or 725	Upgrades a color workstation to a CRX-24Z configuration.
A2675A CRX-48Z subsystem	Model 715/50 or 725 EISA	Upgrades to CRX-48Z configuration.
Z1100A VideoLive card	Series 700 EISA	Provides live video output.
A4070A HyperCRX8 Graphics Adapter	Series 700 GSE bus	Provides double buffered 8-bit plane graphics with 8 overlay planes, color recovery
A4071A HCRX24 Graphics Adapter	Series 700	Provides 24-bit plane color with 8 overlay planes.
A4072A 3D accelerator	Series 700	Accelerates HyperCRX series graphics adapters.
A4073A GSIC	Model 715/100	Allows CRX-48Z upgrade/use.

Graphics Cable Extensions

The following extensions are available for placing the CRT a distance away from the SPU:

46082A/B	RGB extension
46080/81A	HIL extension
1250-1287	Use three of these connectors to extend RGB cable for a Model 712.

There is no PS/2 keyboard or mouse extension available for the Model 712.

Maintaining the Accuracy of Customized Graphics Configurations

Any time you modify your graphics configuration, be sure to update the configuration files used by your application programs.

For example, if you are adding a CRX24 (or CRX48) and using it as a console, you must

1. Note the hardware path in which you insert the card.
2. Identify the device special file for the CRX24. By default, the minor number of the console device special file is 0x000000.
3. Make sure the files in the /etc/X11 directory refer to the correct device special file for the console.
4. Change the console path in BOOT_ADMIN to match the hardware path into which you insert the card. For example,

```
BOOT_ADMIN> path console graphics2
```

You can display the correlation between the PDC names and hardware paths by using the `info` query at the BOOT_ADMIN prompt.

HP-FL Configuration Guidelines

The HP-FL interface, based on fiber-optic technology, is used where radio-frequency interference poses problems or for high security since communication between the SPU and disks transmit without radiated signals. HP-FL is suited to large-disk configurations, particularly when the SPU is distant from the source of data.

HP-FL is not supported on Series 700 computers.

Table 2-9 **HP-FL Interface Cards and Configuration Requirements**

Architecture	Interface Card	Interface Driver
Series 800 CIO	A27111A	disc2 ^a
ChannelSpan Series 800 CIO emulation on HP-PB ^b	A1749A	disc2 ^a
Series 800 HP-PB ^b	28615A	disc4 ^c

a. Specifying disc2 causes hpfl0, cio_ca0, sio, pfail, and pa to be included in the kernel.

b. HP-FL is not supported on F10, F20, F30, 807, 817, and 837 business servers.

c. Specifying disc4 causes disc3, hpfl1, and target to be included in the kernel.

HP-FL Cables and Accessories

Peripheral devices (such as disks) connect to the HP-FL interface port via fiber-optic link (up to 500 meters). The HP-FL peripheral devices themselves are daisy-chained to one another using electrical PBus cables. This is shown in Figure 2-3.

Fiber-optic cable can be ordered from Hewlett-Packard to custom length; specify HFBR-AWSxxx, where xxx is the length in increments of one meter from 001 to 500 meters.


HP 1005-0078 30-meter fiber-optic cable with 905-type SMA connectors.

HP 5061-3151 PBus terminators (2 per package).

HP 5061-3174 PBus electrical cable.

NOTE Do not bend, twist, or lay objects on fiber-optic cable. Protect the cable from foot traffic and sharp objects. Do not stress or damage the cable during or after installation.

Figure 2-3 HP Fiber-Optic Connectivity

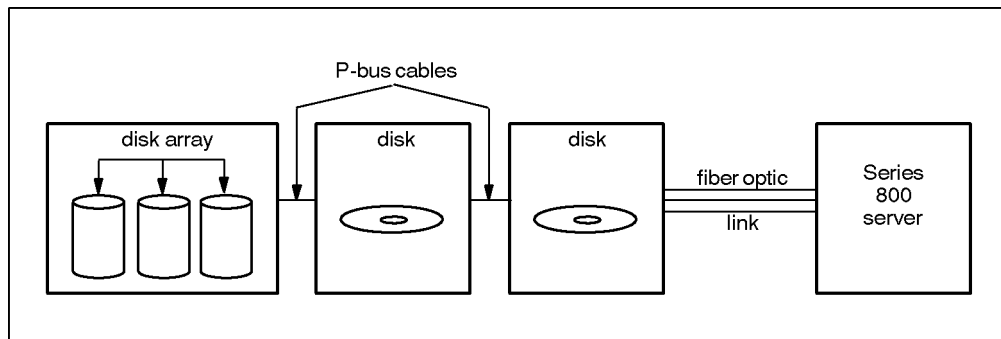

HP-IB Configuration Guidelines

The Hewlett-Packard Interface Bus (IEEE Standard 488-1980) provides connectivity for up to four peripherals on the same card, including disks, cartridge tape subsystems, magnetic tape units, plotters, and printers.

Table 2-10 HP-IB Configuration Requirements

Architecture	Interface Card	Interface Drivers
Series 700 EISA	25560A	hshpib ^a
Series 800 CIO	27110B	hpib0 ^b
Series 800 HP-PB	28650A/B ^c	hpib1 ^d

- a. Specifying hshpib causes eisa, eeprom, wsio, and core to be included in the kernel.
- b. Specifying hpib0 causes cio_ca0, sio, pfail, and pa to be included in the kernel.
- c. HP 28650A is used in Models 808, 815, and 8x2; HP 28650B is used in other HP-PB systems. Neither card supports printers.
- d. Specifying hpib1 causes sio, pfail, and pa to be included in the kernel.

Instrumentation Access to HP-IB

Two Series 700 EISA HP-IB cards, E2070A and E2071B, are available for instruments. Both use drivers that are packaged as part of the Standard Instrument Control Library (SICL) and a graphical processing environment (VEE-TEST). See your HP Sales Representative for information on these products.

For Series 800 HP-IB cards only, you can access the entire card and all activity on the HP-IB bus by including the `instr0` driver in your kernel. For example, you can set medium or fast signal transmission on the HP-IB bus using the `instr0` driver. (Disks and tape drives require high-speed signal transmission, while printers and plotters require medium speed.) For specification of the I/O controls, consult the *hpib(7)* manpage of the *HP-UX Reference*.

HP-IB Cabling

An HP-IB device can be cabled directly to its port on the back of the computer, or to other HP-IB devices only in a daisy-chained arrangement. HP-IB cable is available in the following lengths:

- HP 10833A 1.0 meter
- HP 10833B 2.0 meter
- HP 10833C 4.0 meter
- HP 10833D 0.5 meter

Cabling of medium-speed devices is limited to two meters per device or 20 meters total, whichever is less.

Cabling of high-speed devices is limited to one meter per device or 10 meters total, whichever is less.

Transmission distance between an HP-IB interface and peripheral devices can be extended to a maximum of 1.25km using the HP 37204A Multipoint HP-IB extender with coaxial or fiber-optic cable. Consult your HP Sales Representative for information.

Changing HP-IB Address Switch Settings

1. *First* shut down and halt the system using `/usr/sbin/shutdown -h`; turn off the computer and its battery backup (if equipped) and unplug its power cord.
2. *Then* turn off the peripheral device.
3. Change the switch settings on the device.
4. Turn on the device.
5. Turn on your system.

Networking Configuration Guidelines

HP Series 700 and 800 systems shipped with LAN ports on the personality (multi-functional) or core I/O boards provide network access through AUI LAN, ThinLAN, or EtherTwist. (Note, the two ports on the standard LAN personality card are mutually exclusive; you can use either, but not both ports simultaneously.)

Additional networking options are available for HP-UX systems. Table 2-11 summarizes their initial configuration requirements.

All network products require a layered set of software — links, transports, and services — whose details fall beyond the scope of this book. Consult networking documentation for further information.

Table 2-11 Network Interfaces and initial Configuration Requirements

Card	Supported Models	Bus Architecture	Drivers
25567B LAN/9000	Series 700	EISA	lan2
28640 LAN/9000	Series 800	HP-PB	lan3
36960A X.25Link	Series 800	HP-PB	pdn0 x25ip x25pa
36967A LANLink	Series 800	CIO	cio_ca0 lan0
A2544A Apollo TokenRing	Models 730, 750	EISA	token1
J2104A, J2109A HP ISDN Link	Series 700	EISA	isdnnnetd isdnx25 isdn isdnsn
J2069A HP HIPPI Link	Series 700	EISA	hippi
J2146A LANLink	Series 800	HP-PB	lan3
J2156A FDDI/9000	Series 700	EISA	fddi
J2157A FDDI	Series 800	HP-PB	fddi

Table 2-11 Network Interfaces and initial Configuration Requirements

Card	Supported Models	Bus Architecture	Drivers
J2159A X.25/9000	Series 700	EISA	pdn0 x25ip x25pa
J2165A HP TokenRing 9000	Series 700	EISA	token1
J2166A HP TokenRing 9000	Series 800	HP-PB	token2
J2220A SNAplus Link	Series 800	HP-PB	psi0 sna_router sna_trace sna_access sna_NODE sna_SDLC sna_QLLC sna_LAN
J2226A SNAplus Link	Series 700	EISA	psi1 sna_router sna_trace sna_access sna_NODE sna_SDLC sna_QLLC sna_LAN

SCSI Configuration Guidelines

Small Computer System Interface (SCSI) is an ANSI standard for connecting computers and peripheral devices. HP Series 700 and 800 computers support three implementations of SCSI-2, as shown in Table 2-12.

Table 2-12 **Types of SCSI and Characteristics**

SCSI Type	SCSI Single-Ended	SCSI Differential	SCSI Fast/Wide
Bus Support	Series 700: Core I/O, EISA Series 800: CIO, HP-PB	Series 700: Core I/O, EISA	Series 700: Models 735, 755 Series 800: HP-PB, 890, T500
Line Out	Single line (plus ground) per 8 bits	Two lines (plus ground) per 8 bits; less susceptible to spikes; faster data transmission.	Same as Differential
Bus Width	8 bits	8 bits	16 bits (can run 8 bits)

Table 2-13 lists HP SCSI cards, the architecture on which they are supported, and the configuration requirements of the cards and attached SCSI devices.

Table 2-13 SCSI Configuration Requirements

Architecture	Interface Card (SCSI Type)	Interface Driver
Series 700 EISA	25525A/B (Differential)	sctl ^a
Series 800 CIO	27147A (Single-Ended)	scsi2 ^b
Series 800 HP-PB	28655A (Single-Ended)	scsi1 ^c
Series 800 HP-PB	28696A (Fast/Wide)	scsi3 ^c

- a. Specifying sctl causes c700, c720, wsio, core, eisa, and eeprom to be included in the kernel.
- b. Specifying scsi2 causes cio_ca0, sio, pfail, and pa to be included in the kernel.
- c. Specifying scsi1 or scsi3 causes sio, pfail, and pa to be included in the kernel.

SCSI Addressing

Up to seven single-ended SCSI or fifteen fast-wide SCSI devices can be configured to a single SCSI device adapter. Each device requires a unique bus address.

- For single-ended SCSI, addresses range from 7 to 0 with 7 (highest priority) reserved for the adapter itself and 0 being the lowest priority.
- For fast-wide SCSI, addresses range from 7 to 0 with 7 (highest priority) reserved for the adapter itself and 14 to 8 (lowest priority).

Although most peripheral devices require only one address, the Optical Disk Library System (HP C17xxA) uses three SCSI addresses (two for the magnet-optical drives and one for the autochanger picker).

SCSI Cabling

Multiple SCSI peripheral devices can be connected to a single SCSI interface using a daisy-chain configuration. The final SCSI device in the daisy chain requires the proper terminator, discussed later in "SCSI Signal Termination."

NOTE

The SCSI bus should be kept as short as possible. Total cable length for *single-ended* SCSI must *not* exceed six meters. Total cable length for *fast/wide* SCSI must *not* exceed 25 meters. These limitations include both internal and external cables. Refer to the documentation that came with your device for internal cable lengths.

Table 2-14

SCSI Cables

Product Number	Length	Connectivity Description
Adapter-to-Peripheral SCSI Cables		
K2296 ^a	1.0 m	High-density (HD) screw to low-density (LD) bail-lock male-male
K2297 ^a	1.5 m	HD screw to LD bail-lock male-male
Peripheral-to-Peripheral SCSI Cables		
92222A	0.5 m	LD bail-lock male-male
92222B	1.0 m	LD bail-lock male-male
92222C	2.0 m	LD bail-lock male-male
SCSI Extender Cables		
92222D	1.0 m	LD male-female
C2900A	3.0 m	LD bail-lock male-female ^b
C2901A	5.0 m	LD bail-lock male-female ^b
C2902A	10.0 m	LD bail-lock male-female ^b
C2903A	20.0 m	LD bail-lock male-female ^b
C2906A	2.0 m	LD male-male ^c

a. This is a replacement number for the SCSI cable included with the host adapter.

b. Recommended for use with HP EISA cards.

c. SCSI-II (50-pin) to SCSI-III (68-pin) cable, to connect Series 700 workstations to C2425J/JK, C2427J/JK.

Cabling options can be ordered for the HP fast/wide/differential host adapter (HP 28696A) to extend standard cabling and for SwitchOver configurations (V-cables, male-male-male to daisy-chain multiple hosts). Table 2-15 show additional cables available to connect a Fast/Wide SCSI adapter-to-peripheral or peripheral-to-peripheral.

Table 2-15 Fast/Wide SCSI Cables

Product Number	Length	Product Compatibility
C2911A	0.9 m	C2425JK, C2427JK, C3034T, C3035T, C3036T
C2924A	2.5 m	C3034T, C3035T, C3036T
C2925A	10.0 m	C3034T, C3035T, C3036T
C2926A	20.0 m	C3034T, C3035T, C3036T

The HP 28643A SCSI Fiber-Optic Extender overcomes SCSI distance limitation to a maximum of 100 meters. Note, however, this device is single-ended SCSI and is recommended for printers, optical libraries, and magnetic tape drives only. It is not supported for SwitchOver configurations.

SCSI cable impedance and construction have a significant impact on signal quality; use only HP cables.

Calculating SCSI Cable Length

Table 2-16 demonstrates how to calculate SCSI bus cable lengths for a typical installation.

Table 2-16**Example of SCSI Cable Length Calculation**

Starting Point Device	Cable to Next Device		Internal Cable	Cumulative Cable Length
SCSI host adapter	5062-3383	1.0m	0.1m	1.1m
HP device #1	92222A	0.5m	0.2m	1.8m
HP device #2	92222A	0.5m	0.4m	2.7m
HP device #3	92222A	0.5m	0.3m	3.5m
HP device #4	none		0.4m	3.9m
Total				3.9m

All devices must be connected to a common (single point) system reference ground. The system ground must be isolated from other electrical devices such as copying machines, arc welders and air conditioners. Cables supplied by HP have correct grounding.

SCSI Signal Termination

Make sure there are no unterminated cables (that is, that all cables are attached to a device at both ends).

Because a closed loop is required by the SCSI bus for successful signal transmission, the last SCSI device in the chain *must* have a terminator installed on its second connector. The terminator is (or acts as) a small resistor that provides matching impedance on the bus circuit. Without such termination, data traveling on the bus is likely to be corrupted and the protocol upset to the point that it hangs the bus.

Some devices (particularly host adapters) contain internal SCSI bus terminators or require special terminators. If two devices supply termination power, locate them at each end of the SCSI bus. Refer to the specific hardware manuals of host adapters and the devices on the bus for instructions on how to prevent excessive or improper SCSI bus termination.

CAUTION

Only the two ends of a SCSI bus should be terminated. Excessive or improper termination overloads the SCSI port's termination power (TERMPWR) circuitry. This can result in blowing the TERMPWR fuse on the adapter, or damaging transceivers on any attached device, including the adapter.

All HP SCSI products are shipped with appropriate terminators. Table 2-17 might be helpful if you need to order additional termination.

Table 2-17

SCSI Terminators

Part Number	Kind of Terminator	No. Pins	Application
C2904A	high-density w/ thumb screw	50	Active SCSI-II
C2905A	high-density w/ thumb screw	68	Active SCSI-III
K2290	low-density w/ thumb screw	50	Passive SCSI-II
K2291	low-density w/ bail connector (wide mouth)	50	Passive SCSI-II

SCSI Parity

All devices on a SCSI bus must be consistent in parity-checking capability. If any device on the SCSI bus does not generate parity, all devices on the bus, including the adapter, must not check parity. (Although parity-checking is selectable, the adapter always generates parity.)

If a SCSI device cannot match the parity-checking capability of other devices on the bus, it must be installed on a separate SCSI bus.

Changing the Bus Address of a SCSI Device

1. Shut down and halt the system using the `/usr/sbin/shutdown -h` command. On systems with powerfail mode, be sure to also turn off the battery backup.
2. TURN OFF the computer and unplug the power cord.
3. Turn off the device.
4. Change the bus ID on the device.
5. Turn on the device.

Power on all SCSI peripherals and allow them to complete their selftest before powering on the SPU (System Processor Unit).

6. Turn on your system.

Use of non-Hewlett-Packard peripherals is not supported by Hewlett-Packard's standard support process.

Configuring an Interface Card

1. Determine the interface driver needed for your interface card by consulting the tables in “Selecting Device Drivers for Your Interface Cards”.

Look at your `/stand/system` file to see if the required driver is present. (If you are also adding an external device such as a printer, consult the tables in the appropriate chapter and look for the presence of those drivers in `/stand/system` also.)

If any necessary driver is absent, you will need to rebuild the kernel to include it.

- a. Change directory to the build environment (`/stand/build`). There, execute a system preparation script, `system_prep`. `system_prep` writes a system file based on your current kernel in the current directory. (That is, it creates `/stand/build/system`.) The `-v` provides verbose explanation as the script executes.

```
cd /stand/build
/usr/sbin/sysadm/system_prep -v -s system
```

- b. Edit the `/stand/build/system` file to add the absent driver(s).
- c. Build the kernel by invoking the `mk_kernel` command. This creates `/stand/build/vmunix_test`, a kernel ready for testing.

```
/usr/sbin/mk_kernel -s system
```

- d. Save the old system file and kernel by moving them. Thus, if anything goes wrong, you still have a bootable kernel.

```
mv /stand/build/system /stand/system.prev
mv /stand/build/vmunix_test /stand/vmunix.prev
```

- e. Move the new system file and new kernel into place, ready to be used when you reboot the system.

```
mv /stand/build/system /stand/system
mv /stand/build/vmunix_test /stand/vmunix
```

2. Notify users that the system will be shut down to configure the new interface card and any related peripheral device. You can use the `wall` command and/or the interactive capabilities of the `shutdown` command to broadcast a message to users before the system goes down. See `wall(1M)` or `shutdown(1M)` in the *HP-UX Reference*.

3. Bring the system to a halt, using the `shutdown` command.

4. Turn off the power to all peripheral devices and *then* to the SPU. On systems with powerfail mode, turn off the battery back-up also. Unplug the power cords.

5. Select an appropriate slot in the I/O card cage and install the interface card, following instructions provided with the card and computer hardware manual.

If you are also configuring a peripheral device to the card, install it at this time also. Use the cabling recommended in the hardware documentation.

6. Record all pertinent information about the installation and configuration on a worksheet at the back of this book. Keep accurate records of the interface (as shown on the ID stickers), slot number, power requirements, and bus address.

7. Turn on the power to all peripheral devices. Wait for them to become "ready", *then* turn on power to the card cages and SPU.

On booting up, HP-UX detects the new interface and peripheral device and associates them with their device drivers. `insf` creates the device special files required to communicate with the devices.

8. Verify the configuration by invoking the `ioscan` command to confirm that the interface card (and any peripheral devices you configured) are present and device special files have been created.

In the following sample `ioscan` output, the LAN card installed in slot 14 of a Model 887 is displayed as hardware path 56 (slot number times 4).

```
/usr/sbin/ioscan -C lanmux -f
Class      I  H/W Path  Driver  S/W State H/W Type  Description
=====
lanmux     0  56        lanmux0 CLAIMED  INTERFACE LAN/Console
```

For more information on using `ioscan`, consult Chapter 1, "Getting Started," and the `ioscan(1M)` manpage.

For Further Information on Interface Cards

For information on any device drivers, consult the Section 7 manpages in the *HP-UX Reference*, most of which deals with interfaces.

For further information on DTCs, consult the following manpages in the *HP-UX Reference*:

dp(4) Dedicated ports file, used by DDFA and DTC port ID

ddfa(7) DTC device file access software

Another useful resource for RS-232-C connectivity is the *Racking and Cabling Guide for DTCs*, HP part number 5961-0373.

For information on graphics configuration and use, consult the HP Starbase, X Windows, and RTAP/Plus documentation sets, as well as any other documentation pertinent to the application programs you are running.

3 Configuring Terminals and Modems

This chapter contains the procedures for configuring terminals and modems to serial (RS-232-C) ports.

For HP-UX to communicate with a terminal or modem, the following conditions must be met:

- The serial device driver required to communicate with the device must be part of the kernel.
- The terminal or modem must be physically attached and configured to the port.
- A device special file must be created to communicate through the port.
- A *getty* process must be run against the (terminal) port to solicit logins.

For procedures on configuring terminals and modems attached to HP terminal controllers (DTCs) on the network, refer to the following resources:

- *Using the HP DTC Manager/UX* (part number J2120-62000), for managing terminals and modems from a host HP-UX system.
- *Using HP OpenView DTC Manager* (part number D2355-90001), for managing terminals and modems from a personal computer.
- documentation accompanying your third-party terminal server.

For procedures to configure X-terminals and modems attached to an X-terminal, see *HP VUE 3.0 User's Guide* (part number B1171-90061).

Planning to Configure a Terminal or Modem

Plan ahead before configuring a terminal or modem. Read the hardware documentation shipped with the peripheral device and understand what you need to do before getting started.

Planning to Configure a Port for a Terminal

Consider the following:

- Are you configuring the device directly to a serial (RS-232-C) port or to a terminal server through the LAN?
- Will other users be affected by the configuration? If so, notify them before you bring the system down.
- Observe HP recommendations concerning maximum recommended cabling distances and maximum number of terminals per interface.
- Decide whether you will be running uucp on the device.
- Invoke `/usr/sbin/ioscan -f` before beginning your configuration to figure out to which interface card or MUX you are adding the terminal or modem. Note which ports are already used. Attempt to distribute the peripherals among your cards, if possible.

HP systems are shipped so that you can use the HP console terminal immediately after plugging it into an SPU.

The simplest way to configure any HP terminal or a modem is to use the System Administration Manager (`/usr/sbin/sam`). SAM's self-explanatory menus and help system prompt you for all the software requirements, to ensure the terminal or modem is configured properly and with appropriate security settings. If SAM is not loaded on your system or if you prefer to use the command-line interface, the following procedure will guide you through the task. Familiarize yourself with the instructions before getting started.

Planning to Configure a non-HP Terminal

NOTE

As of 10.0, HP provides limited support for non-HP terminals. Their configuration and limitations are discussed in the section, “Configuring a Non-HP Terminal as a Console”, later in this chapter.

The following non-standard terminal emulations are provided for HP-UX:

- DEC VT100, VT320
- VT420 terminals in VT100 or VT320 modes
- Wyse 60
- HP terminal 700/60 in VT100, VT320, and Wyse 60 modes.

Note, the less expensive DEC and Wyse terminals lack certain capabilities standard to full-featured HP terminal firmware. See “Limitations to Non-HP Terminal Emulation” for information on the differences.

Planning to Configure a Port for a Modem

To add a modem to an HP system, you need to configure both the serial port for HP-UX to recognize the modem and the modem's protocol. Regardless of whether you configure using SAM (recommended) or HP-UX command-line interface, read the procedure and modem documentation beforehand.

Consider the following choices:

- The hardware path (including port number) of the serial interface to be used by the modem. You can identify potential ports by invoking `/usr/sbin/ioscan -C tty` or `list /dev/ttyxp*`, where *x* is the mux card instance and *p** shows all existing ports.
- The modem's baud rate.
- Whether the modem will be used for outgoing calls.
- Whether the modem will receive incoming calls.
- Whether the modem requires CCITT (required *only* by certain European government protocols). For standard Hayes-compatible modems that use CCITT modulation and compression standards, do *not* use CCITT mode. See *modem(7)* for details of RS-232-C signaling characteristic of simple and CCITT modems.
- Whether you need to configure for UUCP connectivity.

You will need to create device special files with `/usr/sbin/mksf` specifically for modem use.

`mksf` provides options for CCITT for special European protocol requirements (most US customers should *not* use the CCITT option), `-i` option for a UUCP dialer (used with access mode 0), and hardware flow control (an alternative to XON/XOFF pacing). The `mksf` options for the `asio0` device driver allows for incoming and outgoing hardware buffering.

An example of creating modem device special files is provided in “Additionally Configuring HP-UX for a Modem”, later in this chapter.

See the *mksf*(1M), *modem*(7), and *termio*(7) manpages in the *HP-UX Reference* for bit values and use. Also review “Requirements for Modems to Work on HP-UX” to ensure proper functioning.

Selecting Device Drivers for Terminals and Modems

Use Table 3-1 on the next page to identify the interface and device drivers required to configure a terminal or modem to a serial port.

For information on increasing the number of available serial ports, see Chapter 2, "Configuring Interface Cards."

Table 3-1 **Serial Configurations for Terminals and Modems**

Architecture ^a	Interface Cards	Drivers	Device Files (for terminals ^b)	H/W Flow Control ^c
Series 700	(internal)	asio0	/dev/mux# /dev/tty#p# ^d	Yes
Series 800 CIO	98190A 98196A	mux0 ^e	(same as above)	No
Series 800 HP-PB	40299B J2092A J2093A J2094A J2096A A1703-60022 ^f	mux2 ^g	(same as above)	40299B - No J2092A - No ^h J2093A - No J2094A - Yes J2096A - No ^h A1703-60022 - Yes ⁱ
Series 800 HP-PB	A1703-60003 ^j 28639-60001 ^f	mux4 ^k	(same as above)	No

- The following terminals are supported for HP-UX: C1006A/G/W, C1007A/G/W, C1017A/G/W, C1064A/G/GX/W/WX, C1065A/G/W, C1080A/G/W, C1083W, C1084W, C1085W, VT100, VT320, WYSE60, 700/60, 700/96, 700/98. HP-UX supports numerous third-party modems.
- Device special files for modems are not created by default. See Table 3-7 for information on creating them using `mksf`.
- See `termio(7)` and `termiox(7)` for information.
- `mux#` and `tty#p#` derive from `ioscan` output: The numeral after `mux` and `tty` is the card instance for the `tty` class of interface card to which the terminal is connected; the numeral after `p` is the port number of the serial interface.
- Specifying `mux0` causes `cio_ca0`, `sio`, `pfail`, and `pa` to be included in the kernel.
- The A1703-60022 and 28639-60001 personality cards are used for console connection.
- Specifying `mux2` causes `sio`, `pfail`, and `pa` to be included in the kernel.
- J2092A and J2096A do not support modems.
- Hard ware flow control is supported on the A1703-60022 for the first eight (of 16) ports only.
- Personality card used for console and remote console connection.
- Specifying `mux4` causes `lanmux0`, `lantty0`, `sio`, `pfail`, and `pa` to be included in the kernel.

Configuring HP-UX for an HP Terminal or for a Modem

1. Determine which driver is required for the terminal or modem by consulting Table 3-1.
 2. Determine whether the driver is present in the kernel by invoking the command, `/usr/sbin/ioscan -fn -C tty`, from the system console or any login to the system using an active terminal.
- **If the necessary driver is present in the kernel** (likely), the `ioscan` output of a Series 700 might resemble this:

```
/usr/sbin/ioscan -d asio0 -fn
```

Class	I	H/W Path	Driver	S/W State	H/W Type	Description
tty	0	2/0/4	asio0 /dev/tty0p0	CLAIMED	INTERFACE	Built-in RS-232-C
tty	1	2/0/5	asio0 /dev/tty1p0	CLAIMED	INTERFACE	Built-in RS-232-C

Similarly, the `ioscan` output of a Series 800 system might resemble this:

```
/usr/sbin/ioscan -d mux4 -fn
```

Class	I	H/W Path	Driver	S/W State	H/W Type	Description
tty	0	56/0	mux4 /dev/diag/mux0 /dev/diag/tty0p1	CLAIMED	INTERFACE	MUX /dev/diag/tty0p0 /dev/mux0 /dev/tty0p1

The `-fn` option caused `ioscan` to display the device special files created by `insf`. `insf` automatically creates device special files appropriate for terminals at each serial port. The sample device special file highlighted communicates with port 1 (p1) of the MUX card found at card instance 0 of tty class.

You can display the device file's characteristics by invoking `/usr/sbin/lssf` on the file. By comparing `lssf` and `ll` output, you can see that bits 16 to 23 of the minor number (0x000100) correspond to the port number of 1. (See Appendix C for explanation of bit assignments.)

```
/usr/sbin/lssf /dev/tty0p1
```

```
mux4 card instance 0 port 1 hardwired at address 56/0 /dev/tty0p1
```

```
ll /dev/tty0p1
```

```
crw-rw-rw- 1 bin      bin      178 0x000100 Mar 16 18:29 /dev/tty0p1
```

- If you are configuring a terminal without having to install an interface card, you can physically connect the terminal, as described in its owner's manual. Then, skip ahead to “Additionally Configuring HP-UX for a Terminal”, the next section.
- If you are configuring a modem to an existing port, note the hardware address (or card instance number) and port number you will be using from the `ioscan` output. Then, skip ahead to “Additionally Configuring HP-UX for a Modem”, later in this chapter.

- **If the necessary driver is not present in the kernel**, you will need to rebuild the kernel to include the additional driver. (This might occur if you have to add hardware to configure additional terminals or if you are running a minimal kernel.)
3. To rebuild your kernel and include an additional driver, here is what to do:
 - a. Identify the needed driver by consulting the table in “Selecting Device Drivers for Terminals and Modems”, earlier in this chapter.
 - b. Change directory to the build environment (`/stand/build`). There, execute a system preparation script, `system_prep`, which extracts the system file from the current kernel and writes a system file in your current directory. (That is, it creates `/stand/build/system`.) The `-v` provides verbose explanation as the script executes.


```
cd /stand/build
/usr/sbin/sysadm/system_prep -v -s system
```
 - c. Edit the `/stand/build/system` file to add the absent driver(s).
 - d. Build the kernel by invoking the `mk_kernel` command. This creates `/stand/build/vmunix_test`, a kernel ready for testing.


```
/usr/sbin/mk_kernel -s system
```
 - e. Save the old system file and kernel by moving them. Thus, if anything goes wrong, you still have a bootable kernel.


```
mv /stand/system /stand/system.prev
mv /stand/vmunix /stand/vmunix.prev
```
 - f. Move the new system file and new kernel into place, ready to be used when you reboot the system.


```
mv /stand/build/system /stand/system
mv /stand/build/vmunix_test /stand/vmunix
```
 4. Bring down the system with sufficient grace period to allow users to exit their files. You can execute `/usr/sbin/shutdown -r` or `/usr/sbin/reboot`.

If you are installing an interface card, bring the system to a halt (that is, use the `-h` option). See `shutdown(1M)` or `reboot(1M)` in the *HP-UX Reference*. Power off all peripherals, and *then* the SPU. Perform the physical installation, as described in the hardware manual accompanying the interface card or other device. Power on all peripherals, and *then* the SPU.

Once the system boots from the newly created kernel, HP-UX detects the new terminal and associates it with its driver. `insf` automatically creates the device special files necessary to communicate directly with the terminal.
 5. Invoke `/usr/sbin/ioscan -C tty -fn` to confirm that the I/O subsystem finds the terminal. Your output should now resemble the `ioscan` output shown in step 2.
 6. Proceed to “Additionally Configuring HP-UX for a Terminal” or “Additionally Configuring HP-UX for a Modem” (later in this chapter), depending on which device you are configuring.

Additionally Configuring HP-UX for a Terminal

The previous procedure ensured the system side was set up properly; now you are setting up the terminal side.

- If the terminal will be used as a console, the default configuration is likely to be correct.
 - If the terminal will not be used as a console (but rather as an additional serial terminal), you might have to set configuration modes.
1. From the new terminal, use the function keys to set the terminal's features. In most cases, default settings will be sufficient.

NOTE

Newer terminals have default modes correct for communicating with HP-UX. If you are uncertain the terminal is configured in default mode,

- a. Power off the terminal.
- b. Hold D key down while powering on.

The terminal will power on with correct default modes. Make any adjustments that might be necessary.

2. Add a `getty` entry for each new terminal in `/etc/inittab`. Entries must conform to the pattern `id:run_state:action:process`, as documented on the *inittab*(4) manpage. A sample terminal entry resembles the following:

```
ttp3:2:respawn:/usr/sbin/getty -h -t 60 tty0p3 9600
```

- `ttp3` is a label used by `init` to identify the action uniquely (see *init*(1M)).
 - The `2` is the run state. Systems are shipped with the multi-user run state (see the `initdefault` entry in *inittab*). When the system is running in single-user mode (state `S`), this process is not executed.
 - The `respawn` tells `init` to restart the process if it exits.
 - The `/usr/sbin/getty` is the process used to set up serial terminal and modem ports and provide the initial login prompt.
 - The `-h` option ensures that the `getty` will not hang up the line before setting the port speed.
 - The `-t 60` is a security option to require that the user login name and password is typed within 60 seconds.
 - `tty0p3` identifies the port in `/dev` to which the `getty` attaches.
 - The `9600` (highlighted) does *not* represent the baud rate. It is a pointer into the `/etc/gettydefs` file, telling the system side what entry to use. An `H` entry is also provided for hard-wired terminals. See *gettydefs*(4).
3. Invoke the following command to activate the updated `/etc/inittab` file:

```
/sbin/init q
```

4. Add an (optional) entry to `/etc/ttytype`. Entries should conform to the format documented on the `ttysize(4)` manpage. In the following example, 2392 is the terminal type; `console` and `tty0p3` are the device file names in the `/dev` directory.

```
2392 console2392 tty0p3
```
5. Now that HP-UX is set to communicate with the new terminal, verify that the communication parameters for the terminal correspond to their `/etc/gettydefs` entries. Instructions on necessary changes will be discussed in “Differences between Console and Terminal Configuration”, the next section.
6. With the configuration complete, your terminal should display a `login` prompt. If no `login` is displayed, press **Return** several times. If a prompt fails to appear, consult the “Troubleshooting Terminal Problems” toward the end of this chapter.

Differences between Console and Terminal Configuration

As shipped, HP terminals are configured properly for use as a system console. To use the terminal as a serial terminal, the parameters shown in Table 3-2 might require configuration in `/etc/gettydefs`.

Table 3-2

Key Terminal Configuration Parameters

Parameter	Console (as shipped)	Serial Terminal (hard-wired) ^a	Serial Terminal (via modem)
Data bits	8	8	7
Parity	no	no	even
Default speed	9600 ^b	9600	300 ^b

- a. These are the parameters set for the H entry in `/etc/gettydefs`, and can be used for terminal configuration in `/etc/inittab`.
- b. Sending a **Break** will cause the speed to change in the sequence shown in `/etc/gettydefs`.

Running Screen-Oriented Applications on a Terminal

To run screen-oriented applications (such as SAM or `swinstall`) on a terminal that is not being used as a console, you can use the H setting in `/etc/gettydefs`. As shown in Table 3-2, this will give you 8 data bits and no parity, which are required by screen-oriented applications.

1. Edit the `getty` entry in `/etc/inittab` so that the device special file for the terminal points to the H entry in `/etc/gettydefs`.

```
ttp2:234:respawn:/usr/sbin/getty -h tty0p2 H
```

2. Reissue the `/sbin/init q` command to activate the updated `/etc/inittab` file.

See `gettydefs(4)` in the *HP-UX Reference*.

Configuring a Non-HP Terminal as a Console

HP supports Wyse 60 terminals with native ASCII keyboards, VT320, and VT100 compatible (as defined by DEC VT420) terminals, in their default power-on configuration as system consoles for HP 9000 Series 800 E Family computers. Also, HP 700/60 terminals can be configured to emulate the non-HP consoles. Only HP terminals are supported as system consoles on other HP 9000 Series 800 computers.

Two HP MUX interface modules support configuration of a non-HP terminal console, provided you have the correct firmware version:

- Access port MUX16 (part number A1703-60022 for Series 800 HP-PB) with firmware version Rev 2.30 datecode 3341. (If you installed the card, you should have recorded the firmware revision on a worksheet in Appendix D.)
- The access port MUX module integrated into the core I/O card of Model I computers.

If you are configuring a non-HP terminal or terminal emulation, proceed through the instructions provided in the following sections, and note the limitations described in “Limitations to Non-HP Terminal Emulation”.

Configuring a DEC 420 Terminal to Emulate VT100 or VT320 Mode

The DEC VT100 and VT320 terminals will work in their default settings with HP-UX. For a VT420 terminal to work in HP-UX, it must be configured to emulate either a VT100 or VT320 terminal, as follows:

1. Install the hardware, as described in the terminal's manual.
2. Enter set-up mode by pressing the **F3** key.
 - a. Select *Default* and press **Return**.
 - b. Select *General* and press **Return**.
 - c. Set the Mode.
 - To emulate a VT320, select *VT400 Mode, 7 bit Controls*.
 - To emulate a VT100, press **Return** until the selection reads "VT100 Mode."
 - d. Set the ID.
 - To emulate a VT320, select *VT320 ID*.
 - To emulate a VT100, select *VT100 ID*.
 - e. Return to the main settings and save the configuration. Then press the **F3** key to exit set-up mode.

Table 3-3 shows the correct values for a Model VT420 terminal set up to emulate a VT100.

Table 3-3 Configuration Values for vt100 Compatibility

Global Set-Up	On-Line S1-Comm1 CRT Saver Printer Shared 70 Hz
----------------------	---

Table 3-3 Configuration Values for vt100 Compatibility

Display Set-Up	80-Columns Interpret Controls No Auto Wrap Smooth-2 Scroll Dark Screen Cursor Block Cursor Style No_Status_Display Cursor_Blink 6x24 Pages 24 Lines/Screen Vertical Coupling Page Coupling No Auto Resize Screen
General Set-Up	VT100 Mode ^a VT100 ID ^a User-Defined Keys Unlocked User Features Unlocked Numeric Keypad Normal Cursor Keys No New Line UPSS DEC Supplemental When Available Update
Printer Set-Up	Speed=4800 No Printer to Host Normal Print Mode XOFF 8 Bits, No Parity 1 Stop Bit Print Full Page Print National Only No Terminator

Table 3-3 Configuration Values for vt100 Compatibility

Communications Set-Up Comm1	Transmit=9600 Receive=Transmit XOFF at 64 8 Bits, No Parity (console) 1 Stop Bit (console) No Local Echo Data Leads Only Limited Transmit No Auto Answerback Answerback= Not Concealed
Keyboard Set-Up	Caps Lock Auto Repeat Keyclick High Margin Bell Off Warning Bell High Character Mode <X Backspace ^b Local Compose Ignore Alt F1=Hold F2=Print F3=Set-Up F4=Session F5=Break ,< and .> Keys <> Key `~ Key
Tabs Set-Up	8 spaces apart, starting in column 9

- a. The mode and ID can be VT100 or VT320, depending on which model is being emulated.
- b. You may need to configure this key from Delete to Backspace. To do so, use the stty command as follows: stty erase <backspace_key>.

Your VT420 terminal is now configured for use as an HP-UX system console. Please be aware that the configuration is based solely on the VT100 default configuration.

You may notice the following differences between the DEC VT100, VT320, or VT420 terminals and an HP terminal:

Table 3-4 Unique Definitions of VT100 Keys

Key	Meaning
Backspace	Sends Delete character (octal \177) instead of Backspace
Alt Char	Escape
Er Line	New Line or Line Feed
F1-F5	(Consult DEC manual for captive meanings)
F6 (Inter/Halt) F7 (Resume) F8 (Cancel) F9 (Main Screen) F10 (Exit) F15-F20 FindSelect Remove Insert Here PrevNext	Inoperative in vt100 mode

Using an HP 700/60 Terminal in DEC Mode

If you have reason to use an HP 700/60 terminal in DEC-emulation mode, you might wish to change the operation of the Backspace key. You can do so by using the HP 700/60 terminal's set-up menu.

1. Enter the Setup menu and proceed to the Keyboard Configuration menu.
2. Set the Backspace key from Delete to Backspace.
3. Save the Keyboard Configuration.
4. Log out, then log back in again. Your keyboard will now be set to erase characters correctly.

By default, the backspace key on both DEC terminals and emulation is configured as DEL, echoes ^? on the screen, and does not erase. To set the key to erase, execute an `stty` command as follows:

`stty erase "^^"`

Input the ^ and ? characters as separate keystrokes and be sure to enclose them in quotation marks.

HP 700/60 terminals in VT320 mode uses control-H for backspace.

You can set this up in your `.profile` or `.login` file.

Configuring the Wyse 60 Terminal

Configure the Wyse 60 terminal for use as an HP console by executing the following set of instructions:

1. Install the hardware, as described in the terminal's manual.
2. Configure HP-UX to use the Wyse 60 terminfo file to communicate with the terminal. To do so, set the TERM variable to wy60 by executing the following command for Posix or Korn shell:

```
export TERM=wy60
```

Your Wyse 60 terminal is now configured for use as an HP system terminal. Please be aware that the configuration is based solely on the Wyse 60 default configuration. If further adjustment is required, use the terminal values provided in Table 3-5.

Table 3-5 Wyse 60 Default Configuration Values

Display F1	Columns	80
	Lines	24
	Page Length	1*Lines
	Attributes	Char Standard
	Status Line	Jump
	Scroll Speed	Blink Block Off
	Cursor	Dark
	Answerback Mode	On
	Background	On
	Screen Saver	Off
General F2	Display Cursor	Off
	Answerback Conceal	
	Personality	Wy60
	Comm mode	Full Duplex
	Data/Printer	Modem/Aux
	Rcvd CR	CR
	Enhance	On
	End-of-Line-Wrap	On
	Auto Scroll	On
	Monitor	Off
	Font Load	On
	Send Ack	On
	Init Tabs	Off
	Width Change Clear	Off

Table 3-5 Wyse 60 Default Configuration Values (Continued)

Keyboard F3	Keyclick	On
	Return	CR
	XMT Limit	None
	Wyse Word	Off
	Keylock	Caps
	Enter	CR
	Fkey Xmit Limit	No
	Language	US
	Key Repeat	On
	Corner Key	Funct
	Break	250 ms
	Margin Bell	Off
Comm F4	Baud Rate	9600
	Rcv Handshake	None
	Aux Baud Rate	9600
	Aux Rcv Handshake	DSR
	Data/Stop Bits	8/1
	XMT Handshake	None
	Aux Data/Stop bits	8/1
	Aux Xmt Handshake	None
	Parity	None
	XPC Handshake	Off
Misc F5	Block End	us/cr
	Auto Page	Off
	TVI 955 Attribute	No Space
	VP0 Blk End	None
	Labels	Off
	Save Labels	Off
	Page Edit	Off
	WPRT Intensity	Normal
	WPRT Reverse	Off
	WPRT Underline	Off
	Test	Off

Table 3-5 **Wyse 60 Default Configuration Values (Continued)**

Tabs F6	Tabs	(undefined)
Answerback F7	Answerback	(blank)
FKeys F8	All FKeys definition	(undefined)
FKey Labels F9	All FKey labels	(undefined)

Limitations to Non-HP Terminal Emulation

Non-HP terminal support has limitations to usage, particularly in the area of keyboard differences. Observe the following:

- The CUE startup screen will work with non-HP terminals only if the -T option is used with `cuegetty` (see `cue(1)` and `cuegetty(1M)` in the *HP-UX Reference*).
- All HP terminals use screen buffers for the page-up/Prev and page-down/Next functions. Non-HP terminals and terminal emulations do not provide these keys; they rely on applications to handle them.

Wyse 60 Emulation Limitations

- The Wyse 60 overloads the meaning of various ASCII control characters. As a result, the behavior of some control characters may not be as the user expects.
- Use the DEL key (located next to Backspace) to backspace. If using HP 700/60 with a PC-AT keyboard in Wyse60 mode, the DEL key is located in the bottom row of the number pad.
- Unlike HP terminals, which provide two lines, Wyse 60 terminals provide a single line to display softkey labels. Sometimes, this may result in truncated softkey labels. For example, the "Help on Context" label for F1 might appear as "Help on C."

DEC VT-Series Limitations

- Two different kinds of keyboards are available for DEC terminals — a DEC/ANSI keyboard with programmable function (PF) keys and a PC-AT keyboard, which does not provide programmable function keys.

The function keys F1 through F4 on the DEC/ANSI keyboard are preassigned. Different keys are used for its programmable function (PF) keys. Certain applications, such as Dialog Manager based applications, will remap some of the keys. Other commands may or may not have any keyboard remapping.

The DEC PC-AT keyboard does not provide PF1, PF2, PF3, or PF4 keys. PF4 can be mapped on a DEC PC-AT keyboard to the - key.

Table 3-6 compares use of function keys on the DEC/ANSI keyboard, DEC PC-AT keyboard, and an HP keyboard. (Function keys on Wyse keyboards are consistent with HP keyboards.)

Table 3-6 Function Key Mappings

HP or Wyse60	DEC/ANSI keyboard in VT100 or HP700/60 in VT100 mode	DEC/ANSI keyboard in VT320 or HP700/60 in VT320 mode	DEC PC-AT keyboard
F1	PF2	PF2	/ key
F2	PF1	PF1	NumLock
F3	space bar	space bar	space bar
F4	PF3	PF3	* key
F5	return	F10, [exit]	F5
F6	none	none	none
F7	none	F18	first unlabeled key to right of Pause/Break
F8	none	F19	second unlabeled key to right of Pause/Break

- Many applications use **Tab** for forward navigation and **ShiftTab** for backward navigation when moving from one field to another. Users having DEC terminals or using terminals in DEC emulation modes will find that these two actions are indistinguishable. Therefore, you must navigate in a circular fashion to return to a desired field (that is, **Tab** forward through the menus).
- DEC terminals do not support softkey menus; thus, no such menus are displayed on these terminals.

Additionally Configuring HP-UX for a Modem

1. If you are configuring a modem to the single modem port on a Series 800 multi-function card, you need to ensure that the modem port is not locked.
 - a. Execute a control-B on the console to get into command mode. This will give you a CM> prompt.
 - b. Execute a ur command to unlock the remote access port.
 - c. Execute a dr command to disable the remote access port.
 - d. Execute a co command to return to the console mode.
2. Execute the `ioscan -C tty -fn` command to identify again the card instance, hardware path, and port number for the modem port.
3. Create device special files for the modem based on the card instance (or hardware path) and port number. You can use SAM to create the device special files (recommended) or use `mksf`. Modem device files have the following format:

Table 3-7 Device Special Files for Modems

Access Mode ^a	Port Access	Device File Format
0	Direct connect	<code>/dev/cuainstance#pport#^b</code>
1	Dial-out port ^c	<code>/dev/culinstance#pport#</code>
2	Dial-in modem ^c	<code>/dev/ttydinstance#pport#</code>

- a. See `mksf(1M)` -a option of `asio0` and `muxx` drivers.
- b. Instance number derives from `ioscan -f` output; use the card instance shown for the `tty` class of interface card to which the modem is being attached.
- c. Required for all modems.

NOTE

By default, `mkfs` creates a device special file for access mode 0 appropriate for terminals. To create a device file with modem syntax (that is, `/dev/cua#p#`), you need to execute `mksf` with the `-i` option. The `-i` is used for only direct connect; it is not necessary for dial-out or dial-in modem files.

Here is an example of creating device special files with `mksf` for a Series 700 whose modem is connected to hardware path 2/0/4. Note that one file each is created for direct connect (`-a0`), dial-out modem (`-a1`) and dial-in modem (`-a2`).

```
/usr/sbin/mksf -d asio0 -H 2/0/4 -a0 -i -v
    making cua0p0 c 1 0x000000
/usr/sbin/mksf -d asio0 -H 2/0/4 -a1 -v
    making cul0p0 c 1 0x000001
/usr/sbin/mksf -d asio0 -H 2/0/4 -a2 -v
    making ttyd0p0 c 1 0x000002
```

Series 800 requires yet another additional option when creating device special files for a modem: you must cite the port number for the Series 800 in your mksf command. (In the following example, the card instance is used instead of the hardware path and the port is 2.)

```
/usr/sbin/mksf -d mux2 -I 0 -a0 -p2 -i -v
making cua0p2 c 193 0x000201
/usr/sbin/mksf -d mux2 -I 0 -a1 -p2 -v
making cul0p2 c 193 0x000201
/usr/sbin/mksf -d mux2 -I 0 -a2 -p2 -v
making ttyd0p2 c 193 0x000202
```

4. Verify the creation of the device special files by using the lssf command.

For the Series 700 example,

```
/usr/sbin/lssf /dev/cua0p0
asio0 card instance 0 hardwired at address 2/0/4 /dev/cua0p0
/usr/sbin/lssf /dev/cul0p0
asio0 card instance 0 callout at address 2/0/4 /dev/cul0p0
/usr/sbin/lssf /dev/ttyd0p0
asio0 card instance 0 callin at address 2/0/4 /dev/cul0p0
```

For the Series 800 example,

```
/usr/sbin/lssf /dev/cua0p2
mux2 card instance 0 port 2 hardwired at address 56/0 /dev/cua0p2
/usr/sbin/lssf /dev/cul0p2
mux2 card instance 0 port 2 callout at address 56/0 /dev/cul0p2
/usr/sbin/lssf /dev/ttyd0p2
mux2 card instance 0 port 2 callin at address 56/0 /dev/cul0p2
```

5. With your modem still *disconnected* from the port, edit the `/etc/inittab` file to add a getty entry for the modem port that will receive incoming calls. The entries must conform to the format documented on the *inittab(4)* manpage of the *HP-UX Reference*. For example:

```
p5:234:respawn:/usr/sbin/getty -h -t 240 ttyd2p5 9600
```

- The p5 is a label used to uniquely identify the entry.
- This getty is executed when the system is in both run states 1 and 2.
- The respawn tells init to restart the process if it dies for any reason.
- The `/usr/sbin/getty` is the process used to open the port and provide the initial login prompt.
- The `-h` option ensures that the getty will set the port speed before resetting the port, which is crucial for the modem to work properly.
- The `-t 240` is a security option to require that the user login name and password is typed within 240 seconds.
- The `ttyd2p5` is the device for modem port through which the getty will receive incoming calls. (getty will complete the device name by prefixing `/dev` to the port designation.)
- The 9600 does *not* represent the baud rate, but represents a label in the `/etc/gettydefs` file. See *gettydefs(4)*.

6. After saving the file, invoke the following command to activate the updated `/etc/inittab` file:

`/sbin/init q`

7. To verify that getty is running on the port in a pending state, execute `ps -ef | grep ttyd2p5` (using the device file name for which the getty was created). You should see a question mark in the tty field.
8. With modem still disconnected from the port, but powered on, the DTR or TR light should be off. Connect the modem to its port. DTR or TR light should come on. This verifies that the port (not the modem) is setting DTR or TR. If DTR or TR light remains on all the time, the modem has DTR strapped high and setting should be changed. Check the modem users' manual for procedure on how to change strapping.
9. Execute another `ps -ef | grep ttyd2p5` command to verify that getty is still in a pending state. If getty has a port number in the tty field instead of a question mark, the modem has carrier detect (CD) strapped high. Check the modem users' manual for procedure on how to change strapping.

At this point the modem is ready for call-in use.

10. To set up the modem for call-out use, you must add entries to the `/etc/uucp/Devices` file. (This file does not have an associated manpage; follow the examples given in the file itself.)

Edit `/etc/uucp/Devices` to include an entry for the `/dev/cu!npp` file created earlier. For example,

```
ACU cul2p5 - 2400 hayesDirect cul2p5 - 2400 direct
```

11. After saving the file, you can test the modem's call-out ability executing the following `cu` command:

```
/usr/bin/cu -s2400 -lcul2p5 dir
```

You should get a message indicating that you are connected. If you enter **AT Return**, the system will respond with OK. If it does not, the modem might have its echo turned off. Enter `ATDTtelephone_number` and listen to the modem to hear if it dials. If the modem does not dial, refer to your modem user's manual or have the modem hardware checked out.

The modem is now ready for call-out using `cu -s2400 telephone_number`.

Requirements for Modems to Work on HP-UX

Your modem hardware documentation will be your primary resource for setting switch positions and commands for proper functioning of your modem. However, note the following information specific to HP-UX:

- The modem should not ignore DTR, but instead autoanswer when HP computer raises DTR. Modem should hang up the line, disable autoanswer, and return to command state when computer drops DTR. (This is AT&D2 on Hayes modem protocol). Do not have the modem do power-on reset when DTR is dropped, as some modems temporarily raise CD during reset. (On Hayes modems, do *not* use AT&D3.)
- Modem should assert carrier detect only when there is a carrier and should drop CD when carrier is lost. (This is AT&C1 on Hayes modem).
- Modem should pass through BREAK, because the BREAK key is used for the interrupt signal as well as for baud-rate switching.

Additionally Configuring HP-UX for a Modem

- Modem speed between modem and terminal should be known; however, speed can be negotiated in modem-to-modem connections (using the modems' autobauding speed detection). Initially, features such as hardware flow control (CTS/RTS) and error correct should be turned off. Once you have established that the modem communicates properly, add these features one at a time.
- If modems connect but no data appears, turn off all compression, reliability, MNP, PEP, LAP, and other advanced features. Set the modem as simply as possible. Once working, add the advanced features.
- Do *not* use CCITT control signals on modem or HP computer. Note that this does not affect the modem use of CCITT modulation or compression standards such as V.22, V.32, V.22bis, V.32bis, V.34, V.42, or V.42bis.
- Save modem settings in non-volatile memory on modem so modem remembers setup after power loss. (Use AT&W on Hayes modems).
- Record modem settings on a worksheet in Appendix D for future reference.

Removing or Moving a Terminal or Modem

NOTE

Removing the system console is not supported.

Terminals and modems are most easily removed using SAM, because SAM also removes the `getty` entries in `/etc/inittab` and ensures that `inittab` is reread.

However, it is also a simple matter to remove a terminal or modem using HP-UX commands.

1. If users will be affected, notify them in advance about the change. The terminal or modem to be removed cannot be in use; it must be inactive.
2. Create a backup copy of the `/etc/inittab` file by copying it.
3. Edit the `/etc/inittab` file to remove or modify any `getty` entries for the terminal. Refer to *inittab(4)* in the *HP-UX Reference*.
4. Activate the updated `/etc/inittab` file by typing
`/sbin/init q`
5. Update any software application configurations that use the moved terminal or modem. Refer to your software application documentation for specific instructions.
6. If you are removing the terminal or modem, unplug and disconnect it.

If you are moving the terminal or modem, add the terminal or modem to the system at the new hardware location, following the instructions found in “Configuring HP-UX for an HP Terminal or for a Modem”, earlier in this chapter.

Troubleshooting Terminal Problems

This section addresses problems with alphanumeric display terminals; however, the techniques can be applied to problems with terminal emulators such as AdvanceLink or X-Windows terminal processes (such as `hpterm` and `xterm`).

Unresponsive Terminals

Several conditions can cause a terminal not to display any characters except for those it echoes when you type. Proceed through these steps (working from an active terminal) to solve many of them.

1. **Check the status of the system.** If the system is still running, try resetting the terminal.

If the system is in single-user mode, the only active terminal will be the system console; other terminals will not respond. Switch to a multi-user state. Consult the `init(1m)` manpage in the *HP-UX Reference* for information on changing run levels.

Check your system run-level as follows:

```
who -r
.      run-level 2 Sep 28 10 07:10    2    0    S
```

The current state of the machine (run-level 2 in this example) is shown in the highlighted field. For complete information on each of the fields, consult the `who(1)` manpage.

2. **Look for an editor running on the terminal.** Examine the active processes associated with the unresponsive terminal and look for an editor (such as an active `vi` process). For example, for terminal `tty0p1`,

```
/etc/fuser /dev/tty0p1
or
ps -t tty0p1 -f
```

If you find an active editor process running at the terminal, it is probably in a text-entry mode. You will need to save the work to a temporary file and exit the editor. If you are not sure of the status of the work being edited, do *not* simply save the file and exit. You will overwrite the previous contents of the file with unknown text. Save the work-in-progress to a temporary file so that both the original and edited versions of the file are accessible. If all else fails, kill the editor process from the console, as described in step 8.)

3. Enter **Ctrl-Q** at the terminal keyboard. If output to the unresponsive terminal was stopped because an XOFF signal (**Ctrl-S**) was sent from the terminal to the computer, you can restart it by sending an XON signal (**Ctrl-Q**).

If an application program is looping or functioning improperly, press the **Break** key and then **Ctrl-C** to attempt to regain a shell prompt.

If the unresponsive terminal uses something other than **Ctrl-C** as the interrupt character, you can identify it by logging into another terminal and executing the command `stty -a` against the device special file of the unresponsive terminal. Use the `stty` command *only* with device file names for *currently active* terminal device files. (Use `who` to see which device files are active.) Executing `stty` with an inactive device file will hang the terminal from which you enter the command. For example,

```
stty -a < /dev/tty0p1
```

Compare the baud rate shown in the stty output and that set on the terminal. They should match.

4. **Reset the terminal.** On an HP terminal, try a soft reset of Shift-Reset. If the terminal is stuck in an unusable state, power the terminal off, wait for a few seconds, and power it back on. This will reset the terminal, though the terminal owner's manual may have information on a better way to do it. You also might need to set the tabs with the tabs command.

5. **On an HP terminal, use the menu keys to examine the modes configuration.**

- Is the terminal in Remote * mode? *It should be.*
- Is Block * mode turned ON? *If so, turn it OFF*
- Is Line * mode turned ON? *If so, turn it OFF*
- Is Modify * mode turned ON? *If so, turn it OFF*

6. **Check the physical connection of the terminal** to ensure that all cables are firmly attached and properly located, all interface cards are firmly seated, the power cord is firmly connected, and the power switch is turned on.

7. **Send a short ASCII file to the unresponsive terminal's device file.** Execute this in the background to retain the current terminal's responsiveness. For example, for an unresponsive terminal associated with the device file ttyd1p4,

```
cat /etc/motd > /dev/ttyd1p4 &
```

If you have solved the problem, you will see the contents of the file /etc/motd displayed on the terminal associated with /dev/ttyd1p4.

8. **Kill processes associated with the problem terminal.** Before killing processes use *extreme caution* to be sure you are not killing a valid process that just happens to be taking a long time to complete. First examine the system's active processes, as shown. Then, to kill all processes associated with a specific TTY device (for example, ttyd2p5), execute the kill command to force specified process IDs (PID) to terminate. Execute the kill command in the following sequence: kill -15, kill -3, kill -1, kill -9. (See *signal(5)* for definitions.) c

```
ps -ef
```

UID	PID	PPID	C	STIME	TTY	TIME	COMMAND
...							
root	94	1	0	Jul 20	tty0p5	0:00	/usr/sbin/getty -h tty0p5 9600
root	14517	1	0	Jul 21	ttyd1p4	0:01	-csh [csh]
jaz	20133	1	0	11:20:24	ttyd2p5	0:00	-csh [csh]
root	22147	1	0	13:33:45	?	0:00	/etc/getty -h ttyd2p3 9600
jaz	21234	20133	0	12:22:05	ttyd2p5	0:01	rlogin remote
jaz	21235	21234	0	12:22:12	ttyd2p5	0:04	rlogin remote

```
kill -15 21235 21234 20133
```

Once the processes terminate, init restarts a new getty process for that terminal (provided its /etc/inittab entry contains respawn).

9. **Check the parameters of the unresponsive terminal's device file.** Like all files, device special files have access permissions that must be set to allow you access. For example, permissions set to 622 (crwww-) are appropriate for a terminal. Make certain the file is a character device file.

10. **Make sure your inittab entries are active.** To force init to update its initialization tables from /etc/inittab, execute the command `init q`.
11. **Make sure the /dev/muxn and /dev/tty files are present.** The /dev/muxn is the device file associated with the interface card. The /dev/tty is a pseudo-device used in many places to refer to the login terminal.
12. **Check the functionality of your hardware.**
 - a. If the unresponsive terminal has a self-test feature, activate it. If not, power the terminal off, wait several seconds, and power the terminal back on.
 - b. Swap the unresponsive terminal with one known to be functioning. Swap *only* the terminal and keyboard. Attach the properly functioning terminal to the *same cable* the unresponsive terminal used. Plug the unresponsive terminal and keyboard to the same cable used by the properly functioning terminal and see if it works there.

If the properly functioning terminal does not work on the unresponsive terminal's cable and the unresponsive terminal works at the new location, the unresponsive terminal is not the problem.
 - c. Check the cable connecting the unresponsive terminal to the computer. Swap the suspect cable with a known good one. If this solves the problem, the cable is bad or is not wired correctly. If this does not solve the problem, your MUX, port, or interface card might be malfunctioning.
 - d. On Series 800 multiplexers, problems occur when
 - /dev/muxn is deleted or has inappropriate permissions.
 - the download firmware is deleted or has inappropriate permissions.
 - /sbin/dasetup is not run from /etc/inittab. dasetup should *only* be run from inittab. Do *not* run it in any state other than single-user mode.

Garbage Displayed on the Terminal Screen

If garbage is mixed with valid data, the problem might be:

- Noise on the data line, because
 - RS-232-C cable is too long (maximum recommended length is 50 feet or 15 meters at 9600 baud).
 - data cable is situated near electrically noisy equipment, such as motors.
 - wires are partially shorted or broken within the cable.
 - telephone connection is noisy
- Parity is incorrectly set. (See “Differences between Console and Terminal Configuration”.)
- Hardware problem with a modem, interface card, or the terminal itself
- The program performing I/O might be sending the garbage
- The Display Functns* feature of your terminal is enabled (which displays characters that would not normally print)
- You might be displaying a non-ASCII file.

If everything printed is garbage, examine these possible causes:

- Baud-rate mismatch (*most likely*)
If your terminal's speed setting differs from that read by the `stty` command, garbage will appear on your screen.

If you have not yet logged in, press the **Break** key, followed by **Return**, **Return**, to force `getty` to try the next entry in `/etc/gettydefs`. Typically, the `gettydefs` file is set up so that each time you press the **Break** key, `getty` tries the next speed setting, as defined in `/etc/gettydefs`. When `getty` matches the speed set to your terminal, you will get a readable login prompt.
- Parity generation/checking mismatch. Use `stty` to determine the proper settings for the terminal.
- The `TERM` environment variable is incorrectly set. If you have an HP terminal, try setting the `TERM` value to `hp` using your shell's `set` command.
- A running process is producing garbage output.
- The cable might be miswired or the data line might be noisy.
- You might have a hardware failure in your interface card, modem, MUX or other device.

The `TERM` environment variable is required for software compatibility with the terminal. At the time of login, HP-UX software reads the `terminfo` setting. If you have changed the configuration during a terminal session, you need to alert the software to the change by exporting the `TERM` variable. For example, in Korn shell, `export TERM=vt100`

Refer to the *terminfo*(4) manpage for further explanation.

For Further Information on Terminals and Modems

The following manpages specify terminal- and modem-related functionality:

<i>mesg</i> (1)	Permit or deny messages to a terminal
<i>pg</i> (1)	File paginator for video terminals
<i>stty</i> (1)	Set options for a terminal port
<i>tabs</i> (1)	Set tabs on a terminal
<i>telnet</i> (1)	User interface to the telnet protocol
<i>tput</i> (1)	Generate terminal-specific functions
<i>tset</i> (1)	Terminal-dependent initialization
<i>tsm</i> (1)	Terminal Session Manager
<i>tty</i> (1)	Get the name of the terminal or pseudo-terminal
<i>ttytype</i> (1)	Terminal identification program
<i>captoinfo</i> (1M)	Convert a termcap description into a terminfo description
<i>dpp</i> (1M)	Dedicated port parser, used by DDFA software
<i>getty</i> (1M)	Set terminal type, modes, speed, line discipline
<i>mksf</i> (1M)	Make special files
<i>rlogind</i> (1M)	Remote login server
<i>tic</i> (1M)	terminal escape sequence (terminfo) compiler
<i>untic</i> (1M)	terminal escape sequence (terminfo) extractor
<i>uugetty</i> (1M)	Set terminal type, modes, speed, line discipline
<i>gettydefs</i> (4)	Speed and terminal settings used by getty
<i>term</i> (4)	Format of compiled terminal file
<i>terminfo</i> (4)	Terminal capability database
<i>ttytype</i> (4)	Database of terminal types by port
<i>environ</i> (5)	User environment variables
<i>modem</i> (7)	Asynchronous serial modem line control
<i>pty</i> (7)	Pseudo-terminal driver
<i>termio</i> (7)	General terminal interface
<i>tty</i> (7)	Controlling terminal interface

The following manuals provide additional information:

- *Terminal Control User's Guide*
- *Using Serial Connections Technical Guide*
- *Terminal Session Manager User's Guide*
- *DTC Device File Access Utilities and Telnet Port Identification*

4

Configuring Disk Drives, Disk Arrays, and CD-ROM Drives

This chapter gives procedures and guidelines for configuring hard and floppy disk drives and disk arrays, to HP-IB, HP-FL, and SCSI interfaces. Procedures and guidelines are also provided for configuring CD-ROM drives to HP-IB and SCSI interfaces.

When configuring a disk drive, disk array, or CD-ROM drive, have available the following additional documentation:

- *HP-UX System Administration Tasks*
- *HP-UX Reference*
- Pertinent hardware documentation for the computer, device adapter, and peripheral device
- Record of your disk configuration

NOTE

You can use `/usr/sbin/ioscan -C disk` to identify disks configured on your system. You can use `/usr/sbin/diskinfo` to find out disk characteristics. Once you have configured a disk and are creating a file system, HP-UX uses the correct disk geometry, without requiring you to cite an explicit `/etc/disktab` entry. For backward compatibility, you can still consult `/etc/disktab` for disk geometry information on older disks.

Planning to Configure a Disk Drive

Review the material discussed in this chapter for each kind of disk drive.

Identify the device driver(s) that must be present in the kernel for the interface and disk device you are installing. You will find the device drivers listed in “Selecting Device Drivers for a Disk Device and Interface”.

Once you have planned your disk configuration, proceed to the section, “Configuring HP-UX for a New Disk Device”.

Performance

Overall system performance depends partly on how your disks are arranged on your system.

To optimize performance, consider the distribution of data on your disks. If possible, use several smaller disks instead of a single larger-capacity disk for all disk needs. Configure a mid-sized disk (for example, 677MB or 1GB) for / and /usr file systems and for any software applications. Use separate disks for user files, database files, and anything else that grows. This allows the system to perform more efficiently by distributing I/O across spindles and shortens the time for file-system integrity check.

Do not exceed HP-recommended guidelines for maximum number of disks or disk arrays per interface card. Note too that the kind of disk access (random vs. sequential), CPU overhead and total system capacity, cabling distance, disk-array configuration, and block size all affect performance.

When configuring a disk drive to an HP-IB interface, do not put it on the same interface card as a device (such as a tape drive) requiring slower access to the bus. You cannot mix HP-IB disks and disks of other interfaces in the same LVM volume group.

Consult your HP sales representative for information on performance expectations, based on your predominant system I/O workload and disk characteristics.

Considerations for Configuring a Disk Array

You *must* use SAM to configure and manage the HP A3231A and A3232A disk arrays. The configuration utilities for these devices are unavailable using a command-line interface.

If you are configuring any other disk arrays, be sure that you have loaded onto your system the C2400-UTIL fileset containing the disk array configuration tools.

Consult the hardware documentation to find out what degree of data protection is provided by the RAID level in which the disk array is shipped. If you need to modify the RAID level, use the disk array utilities provided.

If you are configuring a disk array with more than one controller, you will be using more than one target address. Be sure you choose a SCSI interface with sufficient bus addresses available.

Do not attempt to use disk space larger than 4GB without apportioning the space with LVM. HP-UX cannot address disk space in excess of 4GB; any remaining disk space would be unusable. Given this maximum-size limitation, hard partitions will work. Similarly, boot, dump, or primary swap cannot be greater than 2GB.

You can use Logical Volume Manager (LVM) to partition disk arrays into logical volumes, manage mirrored file systems, and deal with file systems on disk arrays in independent mode. See *HP-UX System Administration Tasks* for documentation on configuring and managing file systems on LVM.

Take care to terminate all busses. Keep cabling (including internal SCSI cabling) to within recommended bounds.

Considerations for Configuring a CD-ROM Drive

CD-ROM drives are configured like a standard disk using SAM or command-line interface, but because CD-ROMs hold read-only file systems,

- You cannot use a CD-ROM for swap space.
- Users cannot create a new file system on a CD-ROM disk.

Considerations for Configuring a Floppy Disk Drive

Floppy disk drives are installed as internal devices on some HP-UX systems. You might need to configure the device drivers into the system for HP-UX to be able to communicate with the media. (See *floppy(7)* in the *HP-UX Reference* and “Floppy Disk Drive Configuration Guidelines” later in this chapter for device driver information.)

- Floppy disks are not supported as boot disks.
- HP-IB floppy disks are no longer supported.
- If using SAM, choose the action, Add -> Not Using LVM. LVM functionality is not supported on floppy disks.
- Unlike HP hard disks, which are typically initialized before shipping, you must initialize floppy-disk media, using the *mediainit* command. See *mediainit(1M)* in the *HP-UX Reference* for information.
- Do not use low-density floppy disks. Supported disk formats vary by system model and are documented on the *floppy(7)* manpage.
- Floppy drives are supported on HP-UX primarily for transferring raw data. Thus, commands such as *tar* can be used effectively with floppy disks. You must know in what format your media is written.
- In some respects, using a floppy disk drive on an HP-UX system differs significantly from using a floppy disk drive on a personal computer:
 - Unlike personal-computer floppies, you can make a file system on an HP-UX floppy disk. Use *newfs* to create the file system. Consult */etc/disktab* to choose an entry (for example, *ibm1440*) appropriate for the capacity of the floppy disk.
To access a file system on a floppy disk, you must mount it first.
 - Media removal and replacement while the device is open is *not* supported. A floppy disk containing a mounted file system must not be removed prior to being unmounted. Removal of floppy disks while the device is open is likely to result in file system errors and system crashes.
 - If an application requires that you insert and remove media while the program is running, the floppy disk should work properly.

Selecting Device Drivers for a Disk Device and Interface

The following sections (covering HP-IB, HP-FL, and SCSI interfaces, and floppy disk drives) identify the device drivers that must be present in the kernel for HP-UX to communicate with your disk device. Choose the device drivers based on the interface to which you are configuring the disk device.

If you are configuring a custom-written device driver on a Series 700, consult the *Driver Development Guide* for guidelines.

Once you have identified your device drivers, proceed to “Configuring HP-UX for a New Disk Device”.

HP-IB Disk Configuration Guidelines

Series 700 does not accept HP-IB disks.

Up to four HP-IB disks can be configured for each Series 800 HP-IB interface card. Table 4-1 lists the device drivers required for configuring an HP-IB disk or CD-ROM for each supported interface.

Table 4-1

HP-IB Disk Configuration Requirements

Architecture	Interface Card	Interface and Device Drivers	Default Device File
Series 800 CIO ^a	27110B 27113B	hpib0 ^b disc1	/dev/[r]disk/c#t#d#[s#] ^c
Series 800 HP-PB ^a	28650B	hpib1 ^d disc1	(same as above)

- The following disk drives can be configured to a Series 800 high-speed HP-IB interface: (7907A), (7914CT/P), (7933H), (7935H), (7936H), (7937H), (7957A/B), (7958A/B), (7959B), (7962B), 9262B, 9263B, (97902B), (97903B), (97962B), C1707A, C2200A, C2203A. The following disk drives can be configured to a Series 800 medium-speed HP-IB interface: (7963B), (9127A). (Models shown in parenthesis are obsolete and are listed for reference only.)
- Specifying hpib0 causes cio_ca0, sio, pfail, and pa to be included automatically into the kernel.
- c#t#d#[s#] derives from ioscan output: c# is the card instance for the ext_bus class of interface card to which the disk is attached, t# is the address of the device on the interface, d# is the device unit number. s# specifies section number and is provided for backward compatibility; the entire disk (s0) is assumed when s# is unspecified. (See the *disk(7)* manpage.)
- Specifying hpib1 causes sio, pfail, and pa to be included automatically into the kernel.

HP-FL Disk Configuration Guidelines

Series 700 does not accept HP-FL disks.

Table 4-2 lists the device drivers required for configuring an HP-FL disk device for each supported architecture.

Table 4-2

HP-FL Disk Configuration Requirements

Architecture	Interface Card	Interface and Device Drivers	Default Device File
Series 800 CIO ^a	27111A	disc2 ^b	/dev/[r]dsk/c#t#d#[s#] ^c
Series 800 CIO emulation on HP-PB ^a	HP A1749A	disc2 ^b	(same as above)
Series 800 HP-PB ^d	28615A	disc4 ^e	(same as above)

- a. The following disk drives can be configured to a Series 800 CIO HP-FL interface: (7936FL), (7937FL), C2201A, C2204A, C2252B/BZ/HA/HZ, C2254B/BZ/HA/HZ. (Models shown in parenthesis are obsolete and are listed for reference only.)
- b. disc2 supports disk arrays only in striped mode; it does not support independent mode. Specifying disc2 causes cio_ca0, sio, pfail, pa, and hpfl0 to be included in the kernel.
- c. c#t#d#[s#] derives from ioscan output: c# is the card instance for the ext_bus class of interface card to which the disk is attached, t# is the address of the device on the interface, d# is the device unit number. s# specifies section number and is provided for backward compatibility; the device file addresses the entire disk (s0) when s# is unspecified. (See the *disk(7)* manpage.)
- d. The following disk drives can be configured to a Series 800 HP-PB HP-FL interface: (7936FL), (7937FL), C2201A, C2204A, C2252B/BZ/HA/HZ, C2254B/BZ/HA/HZ, C2257A, C2258B/HA, C2259B/HA. (Models shown in parenthesis are obsolete and are listed for reference only.)
- e. Specifying disc4 causes disc3, hpfl1, target, sio, pfail, and pa to be included in the kernel.

SCSI Disk Configuration Guidelines

The SCSI address of a device dictates the device's priority when arbitrating for the SCSI bus. Use SCSI address 7 for the highest priority device (usually the host), followed by subsequent addresses in descending order: 6, 5, 4, 3, 2, 1, 0, 15, 14, 13, 12, 11, 10, 9, 8.

Each fast/wide/differential SCSI-II card can support up to 15 peripherals, including up to 7 disk arrays. Due to limitations in SCSI-II, disk arrays can be connected to addresses 0 through 7 only; do not connect disk arrays to addresses 8 through 15.

HP-UX recommends UPS for powerfail protection of fast/wide/differential disk arrays.

Do not exceed 6 meters maximum cabling for single-ended SCSI and 25 meters maximum for fast/wide/differential SCSI configurations.

Make sure that every SCSI bus is properly terminated.

Table 4-3 lists the HP disk and CD-ROM devices configurable through the SCSI interface on Series 700 and 800 systems.

Note, the `c#t#d#[s#]` syntax used in default device special files derives from `ioscan` output: `c#` is the card instance for the `ext_bus` class of interface card to which the device is attached, `t#` is the target (SCSI address) of the disk device on the interface, `d#` is the device unit number. `s#` specifies section number and is provided for backward compatibility; the device file addresses the entire disk (`s0`) when `s#` is unspecified. (See the `disk(7)` manpage.)

Table 4-3 SCSI-II Disk Configuration Requirements

Architecture (SCSI-II Type)	Interface Card	Interface and Device Drivers	Default Device File
Series 700 Core I/O (Single-Ended) ^a	(internal)	sdisk ^b	/dev/[r]disk/c#t#d#[s#]]
Series 700 EISA (Fast/Narrow/Differential) ^c	25525B	eisa sdisk ^b	(same as above)
Series 700 Models 735, 755 ^d (Fast/Wide/Differential)	(internal)	sdisk ^b	(same as above)
Series 800 CIO Single-Ended) ^e	27147A	scsi2 ^f disc3 ^g	(same as above)
Series 800 HP-PB Single-Ended) ^h	28655A	scsi1 disc3 ^g	(same as above)
Series 800 HP-PB (Fast/Wide/Differential) ⁱ	25525B	scsi3 disc3 ^g	(same as above)

- a. The following disk devices can be configured to a Series 700 Single-Ended SCSI-II interface: A1999A, A2655A, 2657A, C2214B, C2216T, C2217C, C2291A, C2293A/T/U, C2295B, C2473T, C2963A, C2964A, C3020T, C3021T, C3023T, C3024T, C3027TU, C3028U, A3182A.
- b. Specifying `sdisk` causes `sctl`, `c700`, and `c720` to be included automatically in the kernel.
- c. The following disk devices can be configured to a Series 700 Fast/Narrow/Differential EISA/SCSI-II: C2425JK, C2427JK, C2435A, C2436HA/HZ, C2438A, C24239HA/HZ/JA/JZ, C2440HA/HZ/JA/JZ, C2474J, C2481A, C2482A, C2491A, C2492A.
- d. The following disk devices can be configured to a Series 700 Fast/Wide/Differential SCSI-II interface: C2435A, C2436HA/HZ, C2437HA/HZ, C2438A, C2439HA/HZ/JA/JZ, C2440HA/HZ/JA/JZ, C3032T, C3033T, C3034T, C3035T, C3036T, C3037U, C3038U, A3058A. the C2425JK and C2427JK can also be connected, but will not use the Wide SCSI capability.
- e. The following disk devices can be configured to a Series 800 CIO Single-Ended SCSI-II interface: C2462F/R, C2474F/R/S, C2476F/R, A3182A.
- f. Specifying `scsi2` causes `cio_ca0` to be included automatically in the kernel.
- g. Specifying `disc3` causes `target` to be included automatically in the kernel.

- h. The following disk devices can be configured to a Series 800 HP-PB Single-Ended SCSI-II interface: (7957B), (7958B), (7959B), A1999A, A2655A, C2212A, C2213A, C2281A, C2282A, C2290A, C2291A, C2460F/R, C2461F/R, C2470S, C2471S, C2472F/R/S, C2473F/R/S, C3020T, C3022R/T, C3023R/RZ/T, C3024R/RZ/T, C3027U, C3028U, C3040R/T, C3041R/T, C3044U, A3182A, C3560U. (Models shown in parenthesis are obsolete and are listed for reference only.)
- i. The following disk devices can be configured to a Series 800 Fast/Wide/Differential SCSI-II interface: C2435A, C2436HA/HZ, C2437HA/HZ, C2438A, C2439HA/HZ/JA/JC, C2440HA/HZ/JA/JZ, C3032R/T, C3035R/T, C3036T, C3037U, C3050R/T, C3051R/T, A3051A, A3231A, A3232A, C3550R/T, C3551R/T, C3553RZ, C3554U.

Floppy Disk Drive Configuration Guidelines

Although floppy disk drives are installed internally, the following table is included to ensure that you have the device-driver information necessary to access the drive.

Note that a PC floppy is installed on a Model 712 system, while SCSI floppy disk drives are installed on some Series 700 and E-class (Series 800) computers. HP-IB floppy disk drives are no longer supported on HP-UX.

(See also “Considerations for Configuring a Floppy Disk Drive” for information about using a floppy disk drive with HP-UX.)

Table 4-4 Floppy Disk Drive Configuration Requirements

Architecture	Interface Card	Interface and Device Drivers	Default Device File
Model 712	(internal)	pcfdc pcfloppy	/dev/[r]floppy/c#t#d# ^a
Series 700 Single-Ended SCSI	(internal)	sflop	(same as above)
Model E Single-Ended SCSI	(internal)	disc3 ^b	(same as above)

- a. c#t#d# derives from ioscan output: c# is the card instance for the ext_bus class of interface card to which the device is attached, t# is the target (SCSI address) of the disk device on the interface, d# is the device unit number. See *disk(7)*.
- b. Specifying disc3 causes target to be included automatically in the kernel.

Configuring HP-UX for a New Disk Device

The simplest way to configure a disk device (hard disk, floppy disk, disk array, or CD-ROM) is to use SAM (/usr/sbin/sam). If SAM is not loaded on your system or if you prefer to use the command-line interface, the following procedure will guide you through the task. Familiarize yourself with the instructions before getting started.

1. Invoke /usr/sbin/ioscan -fn to figure out what addresses are available on the interface card to which you will be attaching the disk.

For examples of ioscan usage, consult "Using ioscan to Display your I/O Configuration," in Appendix B of this book.

2. Consult the tables in the previous section ("Selecting Device Drivers for a Disk Device and Interface") to determine the device driver(s) needed for your disk and interface. (If you are configuring a magneto-optical device, use the table in the section, Magneto-Optical Disk Configuration Guidelines, found in the next chapter.) If any necessary device driver is absent from the kernel, you will need to rebuild the kernel to include it. Here is how to rebuild the kernel:

- a. Change directory to the build environment (/stand/build). There, execute a system preparation script, system_prep, which extracts the system file from the current kernel, as follows:

```
cd /stand/build
/usr/sbin/sysadm/system_prep -v -s system
```

The system_prep script writes a system file in your current directory (that is, it creates /stand/build/system). The -v gives verbose explanation as the script executes.

- b. Edit the /stand/build/system file to add the absent driver(s).

- c. Build the kernel by invoking the command,

```
/usr/sbin/mk_kernel -s system
```

The mk_kernel command creates /stand/build/vmunix_test, a kernel ready for testing.

- d. Save the old system file and kernel by moving them. Thus, if anything goes wrong, you still have a bootable kernel.

```
mv /stand/system /stand/system.prev
mv /stand/vmunix /stand/vmunix.prev
```

- e. Move the new system file and new kernel into place, ready to be used when you reboot the system.

```
mv /stand/build/system /stand/system
mv /stand/build/vmunix_test /stand/vmunix
```

3. Notify users that the system will be shut down to configure the disk. You can use the wall command and/or the interactive capabilities of the shutdown command to broadcast a message to users before the system goes down. See wall(1M) or shutdown(1M) in the HP-UX Reference.

4. Bring the system down to a halt, using the shutdown command.

5. Turn off the power to all peripheral devices and then to the SPU.

6. Install the hardware, following instructions provided in the hardware documentation. When attaching the disk, set the switches on the disk to an unused target address, which you will have determined from `ioscan` output. Use the cabling recommended in the hardware documentation. If installing a SCSI device make sure the last device in the SCSI chain is terminated.

7. Turn on the power to all peripheral devices. Wait for them to become "ready", *then* turn on power to the SPU.

On booting up, HP-UX detects the new disk and associates it with its device driver.

Also during boot-up, `insf` creates the character and block device special (`/dev`) files required to communicate with the disk. For a disk array in independent mode, `insf` creates device special files for each disk; in striped mode, `insf` treats the entire array as a single disk.

8. Verify the configuration by executing `ioscan`. If you are configuring a hard disk, you have finished the initial configuration.

If you are configuring a floppy disk drive, initialize the floppy disk by invoking the `mediainit` command on the character device special file.

Planning to Configure into your System a Disk Already Containing Data

When configuring a new disk onto either Series 700 or 800 system, both SAM and `insf` now treat the disk in its entirety and create a single block device special file in `/dev/dsk` and a single character device special file in `/dev/rdsk`. As of HP-UX 10.0, to apportion disk space on both Series 700 and 800 systems, use Logical Volume Manager (LVM), which is documented in the *HP-UX System Administration Tasks* manual.

Configuring a disk already containing data into HP-UX 10.0 requires some attention to detail, because the I/O system is largely converged and the HP-UX file system layout (that is, the locations of system files and directories) has changed.

Approach the task in two stages:

1. Examine the files and data on the disk for possible clashes with the HP-UX 10.0, and take the necessary precautions, as documented in “Ensuring Against Clashes with HP-UX 10.0”, the next section.
2. Configure the disk into HP 10.0.

Once 9.x Series 700 whole disks and Series 800 disks with hard partitions are successfully configured, HP-UX 10.0 accesses their data using a compatibility pseudo-driver (`cpd`).

Ensuring Against Clashes with HP-UX 10.0

Before you configure a disk containing 9.x data to a 10.0 system, it is *essential* that you make sure you will not be introducing file-system inconsistencies. This precaution is necessary because the file-system layout has changed dramatically from HP-UX 9.x to 10.0. Former system files and device files will not work in the new operating system and might cause serious problems if they are used.

The new file-system hierarchy is based on AT&T V.4 and OSF/1. The organization of files and directories are explained in a white paper entitled *HP-UX 10.0 File System Layout*.

To ensure against incompatibilities with HP-UX 10.0:

1. Examine the files on the 9.x disk to make *absolutely* sure you do not mount system directories and structural files. System directories include /usr, /dev, /etc, /system, /bin, and /lib. Structural files include files such as /etc/checklist and dfile. Never attempt to use 9.x device special files on a 10.x system. They will fail. Delete or rename any system files and directories you find.
2. Examine user scripts for occurrences of 9.x-specific path names and commands that are invalid or obsolete for 10.0. Do this *before* mounting the 9.x disk.

HP has some tools on 10.0 to help identify and correct changed or unsupported path names. These tools are shipped in the following filesets:

- Upgrade.UPG-ANALYSIS
- Upgrade.UPG-MAN

On a 10.0 system, the tools are installed in the /opt/upgrade/bin directory. The manpages are installed in /opt/upgrade/share/man. If you have obtained the filesets to be loaded onto an 9.x system, the filesets will be installed into /upgrade/bin and /usr/man.

Consult the manual, *Moving HP-UX 9.x Code and Scripts to 10.x: Using the Analysis and Conversion Tools* and the upgrade manpages for further guidance on preparing 9.x files for HP-UX 10.0.

Understanding How to Configure a Disk Already Containing Data

Accessing 9.x data might require that you configure one of the following 9.x disk types to HP-UX 10.0:

- Series 700 disks using Software Disk Striping (SDS). SDS is not supported on HP-UX 10.0. The safest way to import 9.x data from an SDS disk is as follows:
 1. Isolate the specific files of data.
 2. Examine the files for presence of system and structural files (as documented in the previous section) and remove any invalid references.
 3. Copy the information onto a 10.0-configured disk.
- Series 700 whole disks.
 1. Examine all files for the presence of system and structural files (as documented in the previous section) and remove any invalid references.
 2. Configure the disk as documented in “Configuring into your System an Unpartitioned Disk Already Containing Data”, shortly. `insf` creates the required device special files to access the whole disks. If the disk is used in its entirety (as it was on 9.x), the data will be accessed using the `cpd`.
- Series 800 disks with hard partitions/sections.
 1. Examine all files for the presence of system and structural files (as documented in the previous section) and remove any invalid references.
 2. Configure the disks with Series 800 hard partitions by following the procedure “Configuring into Your System a Partitioned Disk Already Containing Data”, later in this chapter. You will create device special files for each section using `mksf` or `mnod`. The `cpd` will enable you to access the partitioned data.
- Series 800 LVM disks.
 1. Examine all files for the presence of system and structural files (as documented in the previous section) and remove any invalid references.
 2. Add Series 800 LVM disks to a 10.0 system by importing the LVM information, as documented in “Configuring into your System an LVM Disk Already Containing Data”.

Configuring into your System an Unpartitioned Disk Already Containing Data

NOTE

This procedure is provided for configuring a Series 700 legacy disk into HP-UX 10.0. Before proceeding, make sure you have read “Planning to Configure into your System a Disk Already Containing Data” and have performed the examination documented in “Ensuring Against Clashes with HP-UX 10.0”.

1. Back up the data on the disk being configured into the system; see the backup chapter in *HP-UX System Administration Tasks*.

2. Create a record of the system's current disk configuration for later use:

```
/usr/sbin/ioscan -fun -C disk
```

Note whether the current configuration includes the device driver needed to communicate with the disk you intend to configure. Consult “Selecting Device Drivers for a Disk Device and Interface” for guidelines on compatible disks, device drivers, and interfaces.

If any necessary device driver is absent from the kernel, you will need to rebuild the kernel to include it. Here is how you rebuild the kernel:

- a. Change directory to the build environment (/stand/build). Execute a system preparation script, `system_prep`, which extracts the system file from the current kernel and writes a system file in your current directory. (That is, it creates /stand/build/system.) The `-v` gives verbose explanation as the script executes.

```
cd /stand/build
/usr/sbin/sysadm/system_prep -v -s system
```

- b. Edit the /stand/build/system file to add the absent driver(s).
- c. Build the kernel by invoking the `mk_kernel` command. This creates /stand/build/vmunix_test, a kernel ready for testing.

```
/usr/sbin/mk_kernel -s system
```

- d. Save the old system file and kernel by moving them. Thus, if anything goes wrong, you still have a bootable kernel.

```
mv /stand/system /stand/system.prev
mv /stand/vmunix /stand/vmunix.prev
```

- e. Move the new system file and new kernel into place, ready to be used when you reboot the system.

```
mv /stand/build/system /stand/system
mv /stand/build/vmunix_test /stand/vmunix
```

3. Bring the system down and physically install the disk device.

Configuring into your System an Unpartitioned Disk Already Containing Data

4. Turn on the power to all peripheral devices. Wait for them to become "ready", *then* turn on power to the SPU. On booting up, HP-UX detects the new disk and associates it with its device driver. `insf` creates the character and block device special (`/dev`) files required to communicate with the disk.
5. Execute `/usr/sbin/ioscan -fun -C disk` again, to identify the newly configured disk device and its device special files.

Configuring into Your System a Partitioned Disk Already Containing Data

NOTE

This procedure is provided for configuring a Series 800 legacy hard-partitioned disk into HP-UX 10.0. Before proceeding, make sure you have read “Planning to Configure into your System a Disk Already Containing Data” and have performed the examination documented in “Ensuring Against Clashes with HP-UX 10.0”.

1. *Before you move a disk from one system to another*, you must create a clear record of how the disk is set up on its original system. Make a record of the following output:
 - `bdf`, for information on what file systems are mounted.
 - `/etc/fstab`, for information about the file systems mounted on the disk at boot time. (If the disk is being moved from a 9.x system, the equivalent file will have been called `/etc/checklist`. If the disk being moved is partitioned, `/etc/checklist` will be your *only* source of information for what partitions (sections) are being used.)
 - `swapinfo`, for information on device and file-system swap space enabled on the disk.
 - If the disk is used for a database, make a record of the database configuration file.
2. Back up the data on the disk; see the backup chapter in *HP-UX System Administration Tasks*.
3. Create a record of your system's current disk configuration for later comparison:
`/usr/sbin/ioscan -fun -C disk`
4. Note whether the current configuration includes the device driver(s) needed to communicate with the disk you intend to configure. Consult the tables in “Selecting Device Drivers for a Disk Device and Interface” for guidelines on compatible disks, device drivers, and interfaces. If any necessary device driver is absent from the kernel, you will need to rebuild the kernel to include it. Here is how you rebuild the kernel:
 - a. Change directory to the build environment (`/stand/build`). There, execute a system preparation script, `system_prep`. `system_prep` writes a system file based on your current kernel in the current directory. (That is, it creates `/stand/build/system`.) The `-v` provides verbose explanation as the script executes.
`cd /stand/build`
`/usr/sbin/sysadm/system_prep -v -s system`
 - b. Edit the `/stand/build/system` file to add the absent driver(s).
 - c. Build the kernel by invoking the `mk_kernel` command. This creates `/stand/build/vmunix_test`, a kernel ready for testing.
`/usr/sbin/mk_kernel -s system`

Configuring into Your System a Partitioned Disk Already Containing Data

- d. Save the old system file and kernel by moving them. Thus, if anything goes wrong, you still have a bootable kernel.

```
mv /stand/system /stand/system.prev
mv /stand/vmunix /stand/vmunix.prev
```

- e. Move the new system file and new kernel into place, ready to be used when you reboot the system.

```
mv /stand/build/system /stand/system
mv /stand/build/vmunix_test /stand/vmunix
```

5. Bring the system down and physically install the disk device.

6. Turn on the power to all peripheral devices. Wait for them to become "ready", *then* turn on power to the SPU.

On booting up, HP-UX detects the new disk and associates it with its device driver. insf creates a single character device special file and a single block device special file to communicate with the entire disk.

7. Execute /usr/sbin/ioscan -fun -C disk again, to verify that the disk device configured successfully and to identify its whole-disk device special files (/dev/[r]dsk/c#t#d#).

8. Use the mksf command to create device special files for each individual section being used on the disk. (Refer to the printout of /etc/checklist to identify the sections.)

Note, as of HP-UX 10.0, sections 2 and 0 have been switched: s0 now specifies whole disk; s2 specifies the portion of the disk that was previously represented by s0. Also, since sections are only minimally supported at 10.0, consult earlier documentation or version of /etc/disktab for disk sectioning geometry.

For example,

```
/sbin/mksf -C disk [ -H hardware_path -I instance ] -s section_number
/sbin/mksf -C disk [ -H hardware_path -I instance ] -r -s section_number
```

9. Execute /usr/sbin/ioscan -fun -H hardware_path to verify that the device special files were created successfully.

Configuring into your System an LVM Disk Already Containing Data

NOTE

This procedure is provided for configuring a Series 800 legacy LVM disk into HP-UX 10.0. Before proceeding, make sure you have read “Planning to Configure into your System a Disk Already Containing Data” and have performed the examination documented in “Ensuring Against Clashes with HP-UX 10.0”.

1. Back up the data on the disk; see the backup chapter in *HP-UX System Administration Tasks*.
2. Unmount any file systems residing on the LVM disk by using the `umount` command.
3. Deactivate the disk's volume group by using the `vgchange` command.
4. Remove the volume group of the disk from its current configuration and prepare to export it using the `vgexport` command. The `-m` option creates a `mapfile` that retains the names of the logical volumes in the volume group.

```
/usr/sbin/umount /dev/vg01/lvol1
/usr/sbin/vgchange -a n /dev/vg01
/usr/sbin/vgexport -m mapfile /dev/vg01
```

5. Copy the `mapfile` to the new system on which the disk will reside. On a networked system, you can use `rcp` or `ftp`.
6. Create a record of your system's *current* disk configuration for later use.

```
/usr/sbin/ioscan -fun -C disk
```

7. Note whether the current configuration includes the device driver needed to communicate with the disk being configured. If any necessary driver is absent from the kernel, you will need to rebuild the kernel to include it. Here is how you rebuild the kernel:

- a. Change directory to the build environment (`/stand/build`). There, execute a system preparation script, `system_prep`, which extracts the system file from the current kernel and writes a `system` file in your current directory. (That is, it creates `/stand/build/system`.) The `-v` gives verbose explanation as the script executes.

```
cd /stand/build
/usr/sbin/sysadm/system_prep -v -s system
```

- b. Edit the `/stand/build/system` file to add the absent driver(s).
- c. Build the kernel by invoking the `mk_kernel` command. This creates `/stand/build/vmunix_test`, a kernel ready for testing.

```
/usr/sbin/mk_kernel -s system
```

- d. Save the old system file and kernel by moving them. Thus, if anything goes wrong, you still have a bootable kernel.

Configuring into your System an LVM Disk Already Containing Data

```
mv /stand/system /stand/system.prev
mv /stand/vmunix /stand/vmunix.prev
```

- e. Move the new system file and new kernel into place, ready to be used when you reboot the system.

```
mv /stand/build/system /stand/system
mv /stand/build/vmunix_test /stand/vmunix
```

8. Bring the system down and physically install the disk device.
9. Turn on the power to all peripheral devices. Wait for them to become "ready", *then* turn on power to the SPU.
10. Watch the bootup sequence and record the name of the block device special file created for the new LVM disk.

You can also identify the disk device by using the `ioscan` command.
`/usr/sbin/ioscan -fn -C disk` will display all disks and their device special files.
Or, you can use `/usr/sbin/ioscan -H hardware_path -fn` to identify the disk device by location.
11. Scan your current system to identify all disks by their volume groups.

```
/usr/sbin/vgscan -v
```

12. Create a directory for the volume group to which the new LVM disk will belong. For example, a new volume group might be called `vg06`.

```
mkdir /dev/vg06
```

13. Check to make sure that you are creating a unique minor number for the new group file. Then create a character device special file for the new volume group's group file. The character major number for LVM is 64. In the minor number, *n* must be in the range between 0 and 9, because the maximum number of volume groups by default allowed on a system is ten. You can increase the number by changing the operating-system parameter `maxvgs` in `/usr/conf/master.d/core-hpux` or by using SAM.

```
ll /dev/*/group
mknod /dev/vg06/group c 64 0x0n0000
```

14. Import the LVM disk to the current system, citing the the block device special file name you noted when the system booted up and the `mapfile` you created when invoking `vgexport` at the beginning of the procedure. You can preview the effect of the import by using the `-p` option.

```
vgimport -pv -m mapfile /dev/vg06 block_device_special_file
vgimport -v -m mapfile /dev/vg06 block_device_special_file
```

The `vgimport` command adds the volume group name to the `/etc/lvmtab` file. It also adds the device special files associated with the volume group's logical volumes to the system.

15. Activate the new volume group.

```
/usr/sbin/vgchange -a y /dev/vg06
```


16. Mount the logical volumes to their new mount point. For further information on mounting and unmounting, consult the *HP-UX System Administration Tasks* manual.

```
mkdir /new_locationmount /dev/vg06/lvol1 /new_location
```

Moving a Disk Drive to a Different Address

Occasionally, you might find yourself having to move a disk from one interface card to another. This procedure explains how to do so.

NOTE

Moving the root disk and moving an LVM root disk are special cases. You will find additional instructions at several points in this procedure to cover these requirements.

To move a disk drive using HP-UX commands:

1. Back up the files on the disk drive to be moved; see the backup chapter in *HP-UX System Administration Tasks*.
2. If you are moving a root LVM disk, execute the `lvlnboot -v` command to view the current configuration. Record the information. For example,


```
/usr/sbin/lvlnboot -v
Boot Definitions for Volume Group /dev/vg00:
Physical Volumes belonging in Root Volume Group:
/dev/dsk/c0t6d0 (56/52.6.0)
Boot DiskRoot: lvol1 on: /dev/dsk/c0t6d0
Swap: lvol2 on: /dev/dsk/c0t6d0
Dump: lvol3 on: /dev/dsk/c0t6d0
```
3. Notify users that the system will be shut down to move the disk. You can use the `wall` command and/or the interactive capabilities of the `shutdown` command to broadcast a message to users before the system goes down. See *wall(1M)* or *shutdown(1M)* in the *HP-UX Reference*.
4. If your system is an NFS server and file systems on the disk you are moving are exported,
 - a. Find the NFS clients by logging in to the NFS server and looking at the `/etc/exports` file. Refer to *exports(4)* in the *HP-UX Reference*.
 - b. Notify the users on the NFS client systems that data on the disk being relocated will be inaccessible temporarily (users on a diskless system will be unable to use their system at all).
 - c. Unmount the file systems from the NFS client. If you do not unmount the file systems from the client, the client will receive NFS error messages when accessing the files on the disk.

There are several methods to unmount the NFS client file systems:

- Enter the Remote Administration area of SAM on the NFS server and unmount the file systems remotely.
- Log in directly to each NFS client and unmount the file systems using either SAM or HP-UX commands.

Refer to the file systems chapter of the *HP-UX System Administration Tasks* for specific instructions on unmounting file systems. For detailed information on Network File Systems, refer to *Installing and Administering NFS Services*.

5. If you are moving an LVM disk which is *not* being used for the root file system,

- a. Execute a `vgdisplay -v` command to display the contents of the active volume groups. (When moving an LVM disk, most of your LVM commands will be based on the volume group to which the disk belongs.)
 - b. Execute `lvdisplay -v` for every logical volume in the volume group of the disk being removed to locate any logical volumes currently straddling the disk being moved and another disk. If you find any,
 - Back up the data and remove the logical volume, by executing an `lvremove` command.
 - Or, if the logical volume is mirrored,
 - Remove the mirroring, by executing an `lvreduce -m 0` command.
 - c. Execute a `vgchange` command to deactivate the volume group to which the disk is being added.
 - d. If the disk comprises an entire volume group, execute a `vgexport` command to remove it from the current configuration.
- If the disk comprises a portion of a volume group, execute a `vgreduce` command.
- The disk is now free to be used as desired.
6. Determine the hardware address for the new location. Look at the Hardware Path field of `ioscan` output to make sure you choose an unused hardware address.
 7. If you are moving a disk drive containing the *root* file system (and you want to continue to use it as root), you will need to make sure the `AUTO` file on the root disk boot area does not specify a hard-coded hardware path. To check this,
 - a. Locate the root disk by executing `mount` or `bdf` and looking for the `/` entry.
 - b. View the current contents of the `AUTO` file by executing the `lifcp` command and using `-` to display the output. For example,

bdf

Filesystem	kbytes	used	avail	%used	Mounted on
/dev/dsk/c1t6d0	1813487	467756	1164382	29%	/
hera:/users	3916236	2978782	545830	85%	/hera/home
...					

```
/usr/bin/lifcp /dev/dsk/c1t6d0:AUTO -
hpux (;0)/stand/vmunix
```

The output from `lifcp` should appear just as in this example. If instead, you see output that shows an explicit hardware path (for example, `hpux (56.6.0;0)/stand/vmunix`), you will need to update the `AUTO` file. To do so, execute the `mkboot` command with the `-a` option and verify your results:

```
/usr/sbin/mkboot -a "hpux (;0)/stand/vmunix" /dev/dsk/c1t6d0
/usr/bin/lifcp /dev/dsk/c1t6d0:AUTO -
hpux (;0)/stand/vmunix
```

- Once the hardware path is removed, the system will boot using the path selected from processor-dependent code.
- The `;0` specifies that you are dealing with the entire disk.
- `/dev/dsk/c1t6d0` is the device special file for the current location of the root disk.

CAUTION

The `mkboot` command overwrites the contents of the autoboot string.

8. If your `/stand/system` file includes (optionally) an explicit reference to the location of swap and/or dump, and these are located on the disk being moved, your kernel will have to be rebuilt for the operating system to find the new locations.

- a. Change directory to the build environment (`/stand/build`). There, execute a system preparation script, `system_prep`, which extracts the system file from the current kernel, as follows:

```
cd /stand/build  
/usr/sbin/sysadm/system_prep -v -s system
```

The `system_prep` script writes a system file in your current directory (that is, it creates `/stand/build/system`). The `-v` gives verbose explanation as the script executes.

- b. Edit the `/stand/build/system` file to reflect the new hardware path(s).
 - c. Build the kernel by invoking the command,

```
/usr/sbin/mk_kernel -s system
```

The `mk_kernel` command creates `/stand/build/vmunix_test`, a kernel ready for testing.

- d. Save the old system file and kernel by moving them. Thus, if anything goes wrong, you still have a bootable kernel.

```
mv /stand/system /stand/system.prev  
mv /stand/vmunix /stand/vmunix.prev
```

- e. Move the new system file and new kernel into place, ready to be used when you reboot the system.

```
mv /stand/build/system /stand/system  
mv /stand/build/vmunix_test /stand/vmunix
```

9. Shut down and halt your system using the shutdown command.
10. Turn off the peripheral devices (including the disk drive) and *then* your SPU.
11. Physically move the disk drive and write down its new hardware location
12. Power up all peripheral devices, wait for them to indicate "ready", and *then* power on the SPU.
13. If you are moving a disk containing the *root* file system, you must change the hardware path that is read from stable storage:
 - a. Start up your system, but *override the autoboot*. Do not boot from the primary or alternate boot path. Instead, enter Boot Administration mode. (Note, boot ROM administration is system-dependent, and thus differs for Series 700 and 800 systems. The boot ROM menus, however, are self-explanatory. Use one of the help commands (`Help` or `?`) whenever you are uncertain of what to do.
 - b. On a Series 700, boot from the new hardware address of your root disk by using the `Boot` command and proceed to the initial system loader. For example,

BOOT-ADMIN> **boot 2/0/1.4.0 is**

On a Series 800, enter the new hardware address of your root disk and boot your system. For example, if your new hardware address is 52.1, enter **b 52.1**.

Answer Y to the prompt: Interact with IPL? This will invoke the initial program loader.

- c. Set the system's primary boot path in stable storage to the new hardware address, by using the **primpath** command at the **ISL>** prompt. The system will prompt you to enter the primary boot path.
- d. Verify the contents of your AUTO file, this time, by executing the **lsautofl** command. You should see **hpux (;0)/stand/vmunix**.
- e. Boot your system by typing in the contents of the AUTO file. Note, if you have moved a root LVM disk, boot to LVM maintenance mode by using the **-lm** option.

For example,

```
ISL> hpux boot (;0)/stand/vmunix
or
ISL> hpux -lm boot (;0)/stand/vmunix
```

This command loads the kernel from the HP-UX file system and transfers control to the loaded device. On booting up, **insf** identifies all devices it finds (including the newly moved disk) and creates **/dev** files for them.

14. Log in.

15. If you have moved an LVM root disk, proceed through the following sequence of commands to gain access to the root disk at the new location:
 - a. Execute a **vgchange** command to reactivate the root volume group.
 - b. Execute an **lvolnboot** command to view the logical volumes in the volume group.
 - c. Execute an **lvrmbboot** command to remove the current definitions of root, swap, and dump from the disk's Boot Data Reserved Area.
 - d. Execute **lvolnboot** commands to redefine root, swap, and dump. Use the **-v** option for verbose output.
 - e. Execute a **vgchange** command to deactivate the root volume.
 - f. Reboot the system.

For example, if root is redefined as **lv011**, swap as **lv012**, and dump as **lv013**,

```
/usr/sbin/vgchange -a y /dev/vg00
/usr/sbin/lvolnboot -v
/usr/sbin/lvrmbboot -r /dev/vg00
/usr/sbin/lvolnboot -r /dev/vg00/lv011
/usr/sbin/lvolnboot -s /dev/vg00/lv012
/usr/sbin/lvolnboot -d /dev/vg00/lv013
/usr/sbin/vgchange -a n /dev/vg00
/usr/sbin/reboot
```

16. Identify the device files corresponding to the newly moved disk, by using **/usr/sbin/ioscan -fun -C disk** and looking for the disk's hardware path. Write down the name of the new block device special file.

Moving a Disk Drive to a Different Address

17. Create a backup copy of the `/etc/fstab` file:

```
cp /etc/fstab /etc/fstab.old
```

18. Edit `/etc/fstab` to include the block device special file of the disk at its new location.

Once edited, the `/etc/fstab` file will provide accurate information to the `mount` command. If the newly located disk is *not* the root disk, you may now mount it. (If the newly located disk *is* the root disk, it has been mounted already by other means.)

```
/usr/sbin/mount -a
```

19. If your system is an NFS server, remount the file systems on its clients. Do so by executing the `mount` command on the NFS client systems.
20. Update any software application configurations that use the relocated disk drive to make sure they use the new device files. Refer to your software application documentation for specific instructions.

Removing a Disk Drive

1. Back up the data on the disk drive; see the backup chapter of *HP-UX System Administration Tasks*.
2. If your system is an NFS server and file systems on the disk you are moving are exported,
 - a. Find the NFS clients by logging in to the NFS server and looking at the `/etc/exports` file. Refer to *exports(4)* in the *HP-UX Reference*.
 - b. Notify the users on the NFS client systems that data on the disk being relocated will be inaccessible temporarily (users on a diskless system will be unable to use their system at all).
 - c. Unmount the file systems from the NFS client. If you do not unmount the file systems from the client, the client will receive NFS error messages when accessing the files on the disk.

There are several methods to unmount the NFS client file systems:

1. Enter the Remote Administration area of SAM on the NFS server and unmount the file systems remotely.
2. Log in directly to each NFS client and unmount the file systems using either SAM or HP-UX commands.

Refer to the file systems chapter of the *HP-UX System Administration Tasks* for specific instructions on unmounting file systems. For detailed information on Network File Systems, refer to *Installing and Administering NFS Services*.

3. Create a backup copy of the `/etc/fstab` file (`cp /etc/fstab /etc/fstab.old`).
 Edit `/etc/fstab` to remove any mount entries for the disk being removed. Update the `/etc/fstab` on all NFS client systems to remove the mount entries for file systems that are on the disk drive being removed.
4. If you are removing an LVM disk,
 - a. Execute a `vgdisplay -v` command to display the contents of the active volume groups. (When moving an LVM disk, most of your LVM commands will be based on the volume group to which the disk belongs.)
 - b. Execute `lvdisplay -v` for every logical volume in the volume group of the disk being removed to locate any logical volumes currently straddling the disk being moved and another disk. If you find any,
 - Back up the data and remove the logical volume, by executing an `lvremove` command.
 - Or, if the logical volume is mirrored,
 - Remove the mirroring, by executing an `lvreduce -m 0` command.
 - c. Execute a `vgchange` command to deactivate the volume group to which the disk is being added.
 - d. If the disk comprises an entire volume group, execute a `vgexport` command to remove it from the current configuration.

Removing a Disk Drive

If the disk comprises a portion of a volume group, execute a `vgreduce` command. The disk can now free be removed.

5. Notify the users on the system about system shutdown as a result of removing the disk drive.
6. Shut down and bring your system into single-user mode using the shutdown command.
7. If you are removing the disk drive your kernel uses for primary swap and dump, reconfigure the kernel to reassign them. Refer to the file systems chapter of the *System Administration Tasks*.
8. Halt the system:

```
/usr/sbin/reboot -h
```
9. Turn off any peripherals attached to the computer system and then the SPU.
10. Turn off, unplug, and disconnect the disk drive.
11. Turn on any peripherals attached to the computer system and *then* the SPU. On booting up, `insf` identifies all devices it finds and creates `/dev` files for them.
12. Log in.
13. Update any software application configurations that use the removed disk drive. Refer to your software application documentation for specific instructions.

Finding Out the Disk Model Number and Other Information

The `diskinfo` command displays useful information about a disk. Execute it specifying the disk's character device special file. For example,

```
/usr/sbin/diskinfo /dev/rdisk/c1t2d0
```

```
SCSI describe of /dev/rdisk/c1t2d0:  
    vendor: HP  
    product id: C3010M1  
    type: direct access  
    size: 1956086 Kbytes  
bytes per sector: 512
```

SCSI disks can be further identified by the product ID field. The number displayed does not correspond to the HP model number of the disk, but rather to an "inquiry response" derived from querying the disk firmware itself using a SCSI inquiry command. The inquiry response often resembles a product number or product number family. (For example, disks C243x and C2440 all report C2430D.)

If you have a disk hardware problem and are working with an HP service engineer, reporting the inquiry response gives him or her with useful information such as firmware revision, disk mechanism, form factor, and capacity.

After Configuring HP-UX for the Disk Device

After configuring HP-UX for a disk device, you may complete the tasks required to put it to use. These include:

- Setting up powerfail capabilities for the disk or disk array.
- Setting up or modifying RAID levels for a disk array, if necessary.
- Adding a disk to an LVM volume group.
- Mirroring the disk.
- Defining logical volumes in LVM.
- Making the disk available for swapping.
- Creating or moving file systems onto the disk.
- Exporting the disk using NFS capabilities.
- Controlling access to the information on the disk.
- Controlling disk usage by implementing disk quotas.
- Integrating the disk into your backup strategy.
- Restoring data to the disk from other disks.
- Moving file systems to more equitably use your disk space.
- Arrange to mount file systems on the disk at bootup.
- Creating a recovery system for the data on the disk, particularly if this is the root disk.

For these tasks, refer to information in the hardware manuals, *HP-UX System Administration Tasks* manual and the *HP-UX Reference*.

5 Configuring Magneto-Optical Devices

Magneto-optical disks and magneto-optical disk library systems are SCSI devices used for high-capacity read-write applications. The ability of magneto-optical devices to randomly access vast amounts of data makes them best suited for fast retrieval of infrequently accessed archival data, unattended backup, and storage of large data files such as electronic images.

Data can be written to the optical disks in raw mode or as files; `cpio`, `dd`, and other HP-UX commands can access optical disks in raw or block mode. LVM can be used to configure partitions on magneto-optical devices. Note, however, that LVM is not supported for spanning disks on magneto-optical devices.

Typically, magneto-optical disk libraries require installation by an HP Service Engineer.

NOTE

Magneto-optical devices are shipped with a shipping screw in place to ensure that the product is not damaged in transit. Consult the hardware documentation for instructions on removing the shipping screw before configuring the device.

Planning to Configure a Magneto-Optical Device

Magneto-optical disk devices are configured into the operating system much like a SCSI hard disk drive. Choose the device drivers that must be present in the kernel for HP-UX to communicate with your magneto-optical device based on:

- whether you are configuring a single disk or a magneto-optical disk library
- the architecture and interface to which you are configuring the device.

Characteristics of Magneto-Optical Devices

Magneto-optical devices yield good performance if data is distributed properly within its structural framework.

The size of an individual magneto-optical disk device makes it suitable for use as a boot disk, though its performance does not match that of a standard hard disk. Series 800 systems cannot be booted from magneto-optical devices.

Magneto-optical disk libraries contain multiple optical disks and multiple optical drives. HP offers several magneto-optical disk library products, with various capacity ranges and hardware configurations.

Each magneto-optical disk has two surfaces (sides), each of which appears to HP-UX as if it were an entire disk that can be used for a mountable file system or for raw access. Optical disk surfaces may be kept on- or off-line, as use requires. You may access simultaneously *only as many autochanger surfaces as there are autochanger drives*. (This is a change in implementation.) SAM will also allow access to only as many surfaces as there are drives.

NOTE

If you exceed the number of drives, the request for the additional surface will either wait (sleep) without timeouts, or it will fail with an EBUSY error (indicating the device is currently busy). The resultant behavior depends on the specific operation. Requests to execute mount, mediainit, or newfs on surfaces will fail with an EBUSY error when all the drives are used. Other commands (such as raw access with cpio or dd) will wait (sleep) until a drive is available.

Understanding Magneto-Optical Media Capacity

Magneto-optical disk mechanisms support several different capacities:

- C17xxA and C17xxC products support 1X capacity disks.
- C17xxT and C11xxA products support 1X and 2X capacity disks.

HP-UX supports disks with 512 or 1024 bytes per sector, for both 1X and 2X capacity. Disks with 1024 bytes per sector give more storage space per disk, due to a smaller amount of sector overhead.

Table 5-1 **Magneto-Optical Media Capacity by Size**

Sector Size	Total Size 1X Capacity	Total Size 2X Capacity
512 bytes	600 MB	1.2 GB
1024 bytes	650 MB	1.3 GB

You can determine the media by executing the `diskinfo` command. `diskinfo` output for magneto-optical disks shows the information for the specific *surface* queried, not for the disk as a whole. The size in this example corresponds to the number of bytes on one surface of a 1X-capacity magneto-optical disk, with a sector size of 1024 bytes. (A 2X-capacity magneto-optical disk would show 581668 Kbytes.)

```
/usr/sbin/diskinfo /dev/rac/c0t1d0_4a
SCSI describe of /dev/rac/c0t1d0_4a:
    vendor: HP
    product id: C1716T
    type: optical memory
    size: 314568 Kbytes
    bytes per sector: 1024
```

Magneto-Optical Disk Configuration Guidelines

This section identifies the device drivers that must be configured into HP-UX for it to communicate with *single* magneto-optical disks. If you are configuring a magneto-optical disk *library* or adding an optical disk to an existing magneto-optical disk library, refer to the section, "Magneto-Optical Disk Library Configuration Guidelines."

Table 5-2 lists the device drivers required to configure a magneto-optical disk to single-ended SCSI interface for each supported architecture.

Table 5-2 Magneto-Optical Disk Configuration Requirements

Architecture	Interface Card	Interface and Device Drivers	Default Device File
Series 700 ^a (core I/O only)	(internal)	sdisk ^b	/dev/[r]disk/c#t#d#[s#] ^c
Series 800 CIO ^a	27147A	scsi2 ^d disc3 ^e	(same as above)
Series 800 HP-PB ^a	28655A	scsi1 ^f disc3 ^e	(same as above)

- a. The following optical disks [listed with their respective product ID strings returned by SCSI Inquiry] can be configured to a Series 700 single-ended SCSI interface, Series 800 CIO or HP-PB single-ended SCSI interface: C1701A [S6300.650A], C1701C [C1716C], C2550B [C1716T].
- b. Specifying `sdisk` causes `sctl`, `c700`, and `wsio` drivers to be included automatically in the kernel.
- c. `c#t#d#[s#]` derives from `ioscan` output: `c#` is the card instance for the class of interface card to which the device is attached, `t#` is the address of the device on the interface, `d#` is the device unit number. `s#` specifies section number and is shown for backward compatibility; the entire disk (`s0`) is assumed when `s#` is unspecified.
- d. Specifying `scsi2` causes `cio_ca0` to be included in the kernel.
- e. Specifying `disc3` causes `target` to be included in the kernel.
- f. Specifying `scsi1` causes `sio`, `pfail`, and `pa` drivers to be included in the kernel.

Configuring HP-UX for a Magneto-Optical Disk

This section gives instructions on configuring HP-UX for a *single* magneto-optical disk. Configuring a single magneto-optical disk is done almost identically to configuring any hard disk to a single-ended SCSI interface card:

1. Select the device drivers from the table, "Magneto-Optical Disk Configuration Guidelines," in the previous section.
2. Follow the procedure, "Configuring HP-UX for a New Disk Device," in Chapter 4, "Configuring Disk Devices, Disk Arrays, and CD-ROM Drives."
3. Unless you have purchased the disk preformatted, you may need to run `mediainit` to initialize the media. Refer to the hardware documentation or *mediainit*(1) in the *HP-UX Reference*.

If you are configuring an magneto-optical disk library, refer to the next section, "Magneto-Optical Disk Library Configuration Guidelines."

CAUTION

If you are configuring an existing 9.x magneto-optical disk to an HP-UX 10.0 system, be sure to read and follow the precautions detailed in the sections entitled "Planning to Configure into your System a Disk Already Containing Data" and "Ensuring Against Clashes with HP-UX 10.0," both located in Chapter 4, "Configuring Disk Drives, Disk Arrays, and CD-ROM Drives," of this manual.

Magneto-Optical Disk Library Configuration Guidelines

This section gives information pertinent to configuring a magneto-optical disk *library*. If you are configuring a *single* magneto-optical disk, refer to the previous section, "Magneto-Optical Disk Configuration Guidelines."

Table 5-3 lists the device drivers required to configure a magneto-optical disk library to a single-ended SCSI interface for each supported architecture.

Table 5-3 Magneto-Optical Disk Library Configuration Requirements

Architecture	Interface Card	Interface and Device Drivers	Default Device Files
Series 700 ^a (core I/O only)	(internal)	ssrfc ^b sc hgr sdisk ^c	/dev/[r]ac/c#t#d#_#[a b] ^d
Series 800 CIO ^e	27147A	scsi2 ^e ssrfc ^b au tox0disc 3 ^f	(same as above)
Series 800 HP-PB ^a	28655A	scsi1 ^g ssrfc ^b au tox0 disc3 ^f	(same as above)

- The following optical disk libraries are supported on Series 700 (core single-ended SCSI only) and Series 800 HP-PB buses: C1100A, C1150A, C1160A, C1170A, C1700C/T, C1704A/C/T, C1705A/C/T, C1708C/T.
- Disks in an optical disk library must be accessed through the ssrfc driver; they cannot be accessed directly through the SCSI disk driver (sdisk or disc3). Also see *autochanger*(7).
- Specifying schgr or sdisk causes sctl, c700, and wsio to be included in the kernel.
- c#t#d# derives from ioscan output: c# is the card instance for the class of interface card to which the device is attached, t# is the address of the device on the interface, d# is the device unit number. #[a|b] specifies disk platter number and surface.
- Specifying scsi2 causes cio_ca0 to be included automatically in the kernel.
- Specifying disc3 causes target to be included automatically in the kernel.
- Specifying scsi1 causes sio, pfail, and pa drivers to be included in the kernel.

Configuring HP-UX for a Magneto-Optical Disk Library

The simplest way to configure a magneto-optical disk library is to use SAM (/usr/sbin/sam). If SAM is not loaded on your system or if you prefer to use the command-line interface, the following procedure will guide you through the task. Understand the instructions before getting started.

1. On your host computer system, invoke /usr/sbin/ioscan -fn to figure out what addresses are available on the SCSI interface to which you'll be attaching the optical disk library.

Observe the following single-ended SCSI guidelines:

- Each host adapter card has a maximum of seven available SCSI addresses (6-0) in order of descending priority, with address seven reserved for the host adapter.
 - The optical disk library systems (C11x0A and C17xxA/C/T) use up to five SCSI addresses — one for each of the magneto-optical disk drives and one for the autochanger mechanism.
 - Observe the maximum single-ended SCSI cable length of six meters.
2. Using the hardware documentation as your primary source:
 - Physically set up the optical disk library (separate from the host system).
 - Assign unique SCSI addresses to each disk drive and autochanger mechanism and record the information.
 - Run the recommended tests.
 3. Consult Table 5-3 to determine the device drivers needed for your magneto-optical disk library and interface. If any necessary device driver is absent from the kernel, you will need to rebuild the kernel to include it. Here is how to do so:
 - a. Change directory to the build environment (/stand/build). Execute a system preparation script, system_prep, which extracts the system file from the current kernel and writes a system file in your current directory. (That is, it creates /stand/build/system.) The -v gives verbose explanation as the script executes.

```
cd /stand/build
/usr/sbin/sysadm/system_prep -v -s system
```
 - b. Edit the /stand/build/system file to add the absent driver(s).
 - c. Build the kernel by invoking the mk_kernel command. This creates /stand/build/vmunix_test, a kernel ready for testing.

```
/usr/sbin/mk_kernel -s system
```
 - d. Save the old system file and kernel by moving them. Thus, if anything goes wrong, you still have a bootable kernel.

```
mv /stand/system /stand/system.prev
mv /stand/vmunix /stand/vmunix.prev
```
 - e. Move the new system file and new kernel into place, ready to be used when you reboot the system.

```
mv /stand/build/system /stand/system
mv /stand/build/vmunix_test /stand/vmunix
```

4. Notify users that the system will be shut down to configure the optical disk library. You can use the `wall` command and/or the interactive capabilities of the `shutdown` command to broadcast a message to users before the system goes down. (See *wall(1M)* or *shutdown(1M)* in the *HP-UX Reference*.)
5. Bring the system down to a halt using the `shutdown` command.
6. Turn off the power to all peripheral devices and *then* to the SPU.
7. Attach the optical disk library to the host computer system, following the instructions and using the cabling recommended in the hardware documentation. Make sure the last device in the SCSI chain is terminated.
8. Turn on the power to all peripheral devices, including the optical disk library. Wait for the peripheral devices to become ready, *then* turn on power to the SPU.

On booting up, HP-UX detects the optical disk library and associates it with its device drivers. `insf` creates the character and block device special (`/dev`) files required to communicate with each disk surface in the optical disk library. By default, `insf` creates device special files for 32 optical disks (64 device special files for the surfaces plus a device special file for the autochanger).

If you are configuring a larger-capacity magneto-optical library system, you will need to create device files for the remaining slots, by executing the following command:

```
/usr/sbin/insf -e -p <first_optical_disk:last_optical_disk> -H <H/W_path>
```

9. Verify the configuration by invoking the `ioscan` command on the address to which the disk library was configured.

As shown in excerpted output run on a Series 700, a magneto-optical autochanger displays two entries — one for the autochanger mechanism (in this case, C1708C) and one for the disk mechanism (C1716C) — each with its own set of block and character device special files.

```
/usr/sbin/ioscan -H 2/0/1 -fn
```

Class	I	H/W Path	Driver	S/W State	H/W Type	Description
...						
ext_bus	0	2/0/1	c700	CLAIMED	INTERFACE	Built-in SCSI
target	2	2/0/1.0	target	CLAIMED	DEVICE	
autoch	0	2/0/1.0.0	schgr	CLAIMED	DEVICE	HP C1708C
			/dev/ac/c0t0d0_10a		/dev/rac/c0t0d0_10a	
			/dev/ac/c0t0d0_10b		/dev/rac/c0t0d0_10b	
			/dev/ac/c0t0d0_11a		/dev/rac/c0t0d0_11a	
			/dev/ac/c0t0d0_11b		/dev/rac/c0t0d0_11b	
			/dev/ac/c0t0d0_12a		/dev/rac/c0t0d0_12a	
...						
			/dev/ac/c0t0d0_31b		/dev/rac/c0t0d0_31b	
			/dev/ac/c0t0d0_32a		/dev/rac/c0t0d0_32a	
			/dev/ac/c0t0d0_32b		/dev/rac/c0t0d0_32b	
			/dev/rac/c0t0d0			

```
/usr/sbin/ioscan -H 2/0/1.1.0 -fn
```

Class	I	H/W Path	Driver	S/W State	H/W Type	Description
...						
disk	0	2/0/1.1.0	sdisk	CLAIMED	DEVICE	HP C1716C
			/dev/dsk/c0t1d0		/dev/rdisk/c0t1d0	
...						

After Configuring a Magneto-Optical Device

Once you have configured a magneto-optical disk, it can be used like any other disk. You will find its performance somewhat slower than a hard disk but faster than a floppy disk.

Consult the *Optical Disk Library System Administrator's Guide* that accompanied the hardware for procedures on the following:

- initializing the disk surfaces.
- creating file systems on the optical disk devices.
- mounting the optical disk surfaces.
- using the optical disk library as a boot or swap device.
- using write-once disks.
- removing the optical disk library.

Also, refer to the section, "After Configuring HP-UX for the Disk Device" for a list of potentially pertinent tasks.

6 **Configuring Tape Drives**

Several kinds of tape drives, having different recording methods and formats, can be configured to HP-UX:

- nine-track reel-to-reel tape drive
- cartridge tape drive (configured like a disk device)

- QIC tape drive
- DDS (DAT) tape drive
- 8mm Exabyte tape drive
- 3480-style cartridge tape drive

Despite their differences, any of these tape drives can be configured into HP-UX by the same basic procedure:

1. Select the device drivers, based on the interface (HP-IB or SCSI) to which the tape drive is attached, and include them in the kernel.
2. Set the tape drive to a unique address on the interface bus.
3. Follow the steps documented in this chapter to configure HP-UX for the device.

Once you reboot the system with the tape driver installed and configured, `insf` automatically creates the device special files that enable you to use the features of the specific tape drive technologies.

You will create customized device special files (using `mksf`) only for special circumstances, such as when you have to write a tape on a tape drive that supports data compression, but you intend to read it on a tape drive that does not support data compression. Examples are given in “Creating Customized Device Special Files for Tape Devices” later in this chapter.

Selecting Device Drivers for a Tape Device and Interface

The following sections will help you identify the device drivers needed to configure a tape drive. Choose the drivers based on the interface to which the tape drive is being connected.

Table 6-1 and Table 6-2 show default device special file names created for tape drives, depending on whether your HP-UX system is configured with long or short file names. Limited 9.x device-file notation is also shown for backward compatibility.

HP-IB Tape Drive Configuration Guidelines

HP-IB tape drives can be configured to a Series 800 CIO or HP-PB HP-IB interface card. Note, the EISA bus does not support HP-IB tape drivers; thus you cannot configure most tape drives to the EISA HP-IB card. (See Table 6-2 for exceptions.)

Although the HP-IB bus can accommodate as many as 30 addresses, HP tape drives use a protocol called parallel polling that requires they be configured to addresses in the range of 0 to 7. Performance might decline if more than four tape devices are connected to an HP-IB interface.

Do not install HP-IB tape drives to the same interface as the root device (main disk drive), particularly on Series 800 CIO servers. Doing so can severely degrade your disk drive's performance.

Table 6-1 lists the drivers required for configuring an HP-IB tape drive for each supported architecture. It also shows the device special files that `insf` creates when tape devices are configured.

Table 6-1 HP-IB Tape Drive Configuration Requirements

Architecture	Interface Card	Interface and Device Drivers	Default Device Special Files
Series 800 CIO ^a	27110B	hpib0 ^b tape1	/dev/rmt/c#t#d#BEST[b n nb] ^c /dev/rmt/c#t#d#[f# i#][b n nb] ^d /dev/rmt/#m[b n nb] ^e
Series 800 HP-PB ^a	28650B	hpib1 ^f tape1	(same as above)

- a. The following model tape drives are supported for HP-UX on the Series 800 CIO and HP-PB HP-IB interfaces: 7980A/XC, (C1511A). (Models shown in parenthesis are obsolete and are listed for reference only.)
- b. Specifying hpib0 causes cio_ca0, sio, pfail, and pa to be included automatically in the kernel.
- c. Naming convention for systems installed with long file names. c#t#d# derives from ioscan output: c# is the card instance for the ext_bus class of interface card to which the tape drive is attached, t# is the address of the tape device on the HP-IB bus, d# is the device number (typically d0). BEST represents the operational capabilities likely to be required, including the highest density/format and data compression, if the device supports it. [b|n|nb] designates style of tape positioning: b is Berkeley-style tape positioning; that is, after file close, the tape is not repositioned in any way. If b is not designated, AT&T-style tape closing occurs; that is the tape might be positioned after the next end-of-file (EOF) point. n designates no rewind.
- d. Naming convention for systems installed with short file names. For c#t#d#, see footnote 88. f# represents the highest density/format and data compression, if the device supports it. Or, i# represents a pointer into a tape-device property table. For [b|n|nb], see footnote 88.
- e. Syntax available for backward compatibility. # designates tape drive at # card instance. The #m, #mb, #mn, and #mnb device special files are linked to c#t#d#BEST, c#t#d#BESTb, c#t#d#BESTn, and c#t#d#BESTnb, respectively, or their equivalent short file names.
- f. Specifying hpib1 causes sio, pfail, and pa to be included automatically in the kernel.

Older-style command-set 80 (CS/80) HP-IB cartridge tape drives are supported for HP-UX on both the Series 700 and 800 HP-IB interface, using *disk* device drivers. They are shown in Table 6-2. Note, these devices have a much more limited range of capabilities than are available for tape drives configured through the stape, tape1, and tape2 drivers. See *ct(7)* in the *HP-UX Reference*.

Table 6-2 HP-IB Cartridge Tape Drive Configuration Requirements

Architecture	Interface Card	Interface and Device Drivers	Default Device Special Files
Series 700 EISA ^a	25560A	cs80 ^b	/dev/[r]ct/c#t#d# ^c
Series 800 CIO ^a	27110B	hpib0 ^d disc1 ^e	(same as above)
Series 800 HP-PB ^a	28650B	hpib1 ^f disc ^e	(same as above)

- a. The following models can be configured to EISA, CIO, and HP-PB HP-IB interfaces: (35401), (7914CT), 7946, (7974A), (7978B), 7979A, 7980A, (9144A), (9145A). (Models shown in parenthesis are obsolete and are listed for reference only.)
- b. Specifying cs80 causes hshpib, wsio, eisa, core, and eeprom to be included automatically into the kernel.
- c. c#t#d# derives from ioscan output: c# is the card instance for the ext_bus class of interface card to which the tape drive is attached, t# is the address of the tape device on the HP-IB bus, d# is the device number (d1 must be used to address cartridge tape-drive component of the disk/tape combination devices, such as 7946). For cartridge tape drives to communicate through HP-UX, minor number bit 25 of the device special file must be set. (See Appendix C for mapping of disc1 minor number bit assignments.)
- d. Specifying hpib0 causes cio_ca0, sio, pfail, and pa to be included automatically in the kernel.
- e. Specifying disc1 causes disc1_included to be configured automatically in the kernel.
- f. Specifying hpib1 causes sio, pfail, and pa to be included automatically in the kernel.

SCSI Tape Drive Configuration Guidelines

Each single-ended SCSI interface card has a maximum of eight SCSI addresses, ranging in order of decreasing priority from 7 to 0, with SCSI address 7 reserved for the host adapter card. Use 0, the lowest priority address available, for low-performance tape-drive configuration. High-performance tape drives will need a higher priority.

When using an STK 3480 tape drive, connect the device to its own external SCSI host adapter in the SPU to prevent the possibility of data corruption if the bus glitches when the tape drive is powered down. Follow manufacturer's recommendations in hardware manuals.

3480 devices are supported as "reference" devices on HP-UX; that is, they are supported to a limited degree. A third-party application is needed to read/write IBM-compatible tapes on HP-UX systems. (See *mt(7)* in the *HP-UX Reference* for additional limitations.)

Where possible, connect the 7980S/SX and C2463F/R tape devices to their own external SCSI bus, to prevent possible data corruption from controller glitches.

NOTE	By default, <code>insf</code> creates device special files that write tapes with data compression enabled if the tape drive doing the writing supports data compression. If you have to write a tape on a tape drive that supports data compression, but you need to read it on a tape drive that does not support data compression, you must create the tape using a device special file with data compression disabled, using <code>mksf</code> . See “Creating Customized Device Special Files for Tape Devices”, later in this chapter, for an example.
-------------	---

Table 6-3 shows the configuration requirements for the single-ended SCSI tape drives.

Table 6-3 SCSI Tape Drive Configuration Requirements

Architecture	Interface Card	Interface and Device Drivers	Default Device Special Files
Series 700 Core I/O ^a	(internal)	stape ^b	/dev/rmt/c#t#d#BEST[b n nb] ^c /dev/rmt/c#t#d#[f# i#][b n nb] ^d /dev/rmt/#m[b n nb] ^e
Series 700 EISA ^a	25525A/B	stape ^b	(same as above)
Series 800 CIO ^a	27147A	scsi2 ^f tape2 ^g	(same as above)
Series 800 HP-PB ^h	28655A	scsi1 ⁱ tape2 ^g	(same as above)

- a. The following tape drives are supported for HP-UX on a single-ended SCSI interface: 7980S/SX, A2311A, A2656A, A2944A, A2944A, A3024A, (C1502A), C1503A/B/C, C1504A/B/C, (C1512A), C1520A/B, C1521B, C1530B, C1533A, C1534A, C1535A, C1553A, C2292A, C2297T/U, C2298A, (C2463F/R), C2464F/R, C2465R, C2466F/R, C2467F/R, C2477F/R/S/U, C2478U, C2954A. (Obsolete models are shown in parenthesis for reference only.)
- b. Specifying stape causes sctl, c700, wsio, and core drivers to be included automatically in the kernel.
- c. Naming convention for systems installed with long file names. c#t#d# derives from ioscan output: c# is the card instance number for the ext_bus class of interface card to which the tape drive is attached, t# is the SCSI address, d# is the device number. BEST represents the operational capabilities likely to be required, including the highest density/format and data compression, if supported by the device. [b|n|nb] designates tape positioning: b is Berkeley-style; that is, after file close, the tape is not repositioned in any way. If b is not designated, AT&T-style tape closing occurs; that is the tape might be positioned after the end-of-file (EOF) point. n designates no rewind.
- d. Naming convention for systems installed with short file names. For c#t#d#, see footnote 100. f# represents the highest density/format and data compression, if the device supports it. Or, i# represents a pointer into a tape-device property table. For [b|n|nb], see footnote 100.
- e. Syntax available for backward compatibility. # designates tape drive at # card instance. The #m, #mb, #mn, and #mnb device special files are linked to c#t#d#BEST, c#t#d#BESTb, c#t#d#BESTn, and c#t#d#BESTnb, respectively.
- f. Specifying scsi2 causes cio_ca0, sio, pfail, and pa drivers to be included automatically in the kernel.
- g. Specifying tape2 causes tape2_included to be included automatically in the kernel.
- h. Tape drives listed in footnote 1 are supported on Series 800 HP-PB architecture, as are A2311A and A2312A. StorageTek models 4220 and 4280 tape drives will also configure successfully using the HP-PB single-ended SCSI device driver; however, these tape drives must be the only peripheral device on their SCSI bus.
- i. Specifying scsi1 causes sio, pfail, and pa drivers to be included automatically in the kernel.

Configuring HP-UX for a Tape Drive

The simplest way to configure a tape drive is to use SAM (/usr/sbin/sam). If SAM is not loaded on your system or if you prefer to use the command-line interface, the following procedure will guide you through the task. Understand the instructions before getting started.

1. Invoke /usr/sbin/ioscan -fn to figure out what addresses are available on the interface card to which you will be attaching the tape drive.

For examples of ioscan usage, consult "Using ioscan to Display Your I/O Configuration," in Appendix B of this book.

2. Determine the device drivers needed for your tape drive and interface by consulting ,Table 6-1,Table 6-2, or Table 6-3 in the previous section, "Selecting Device Drivers for a Tape Device and Interface". If any necessary device driver is absent from the kernel, you will need to rebuild the kernel to include it.

- a. Change directory to the build environment (/stand/build). There, execute a system preparation script, system_prep, which extracts the system file from the current kernel and writes a system file in your current directory. (That is, it creates /stand/build/system.) The -v gives verbose explanation as the script executes.

```
cd /stand/build
/usr/sbin/sysadm/system_prep -v -s system
```

- b. Edit the /stand/build/system file to add the absent driver(s).
- c. Build the kernel by invoking the mk_kernel command. This creates /stand/build/vmunix_test, a kernel ready for testing.
- d. Save the old system file and kernel by moving them. Thus, if anything goes wrong, you still have a bootable kernel.

```
/usr/sbin/mk_kernel -s system

mv /stand/system /stand/system.prev
mv /stand/vmunix /stand/vmunix.prev
```

- e. Move the new system file and new kernel into place, ready to be used when you reboot the system.

```
mv /stand/build/system /stand/system
mv /stand/build/vmunix_test /stand/vmunix
```

3. Notify users that the system will be shut down to configure the tape drive. You can use the wall command and/or the interactive capabilities of the shutdown command to broadcast a message to users before the system goes down. See *wall(1M)* or *shutdown(1M)* in the *HP-UX Reference*.
4. Bring the system to a halt, using the shutdown command.
5. Turn off the power to all peripheral devices and *then* to the SPU.

6. Install the hardware, following instructions shown in the hardware documentation. When attaching the tape drive, set the switches on the tape drive to an unused address, which you will have determined from `ioscan` output. Use the cabling recommended in the hardware documentation. If installing a SCSI device, make sure the last device in the SCSI chain is terminated.

7. Turn on the power to all peripheral devices. Wait for them to become "ready", *then* turn on power to the SPU.

On booting up, HP-UX detects the new tape drive and associates it with its device driver. `insf` creates the character device special files required to communicate with the tape drive.

8. Verify the configuration by invoking the `ioscan` command to confirm that the tape device is present and device special files have been created for it.

In the sample output shown, the tape driver at hardware path 2/0/1.3.0 can be accessed by one of eight device files.

```
/usr/sbin/ioscan -C tape -fun
```

Class	I	H/W Path	Driver	S/W State	H/W Type	Description
tape	0	2/0/1.3.0	stape	CLAIMED	DEVICE	HP35480A
			/dev/rmt/0m		/dev/rmt/c0t3d0BESTn	
			/dev/rmt/0mb		/dev/rmt/c0t3d0BEST	
			/dev/rmt/0mn		/dev/rmt/c0t3d0BESTb	
			/dev/rmt/0mnb		/dev/rmt/c0t3d0BESTnb	

9. You can also use the `tar` command to verify that you can read and write to and from the device. In the following example, the first `tar` command writes the `/etc/passwd` file to tape using a device special file shown in the `ioscan` output. The second `tar` command displays the contents of the tape.

```
/usr/bin/tar cvf /dev/rmt/c0t3d0BEST /etc/passwd
a /etc/passwd 2 blocks
```

```
/usr/bin/tar tvf /dev/rmt/c0t3d0BEST
r--r--r-- 2/2 601 June 6 16:40 1994 /etc/passwd
```

Creating Customized Device Special Files for Tape Devices

The default device special files created by `insf` handle most routine tape-drive requirements. For special circumstances, however, you can use SAM or the tape driver options of the `mksf` command to create device special files. For complete syntax information, consult the SAM online help or *mksf*(1M) manpage in the *HP-UX Reference*.

Examples

In each example, the tape device is at card instance 1 for the `ext_bus` class of interface card to which the tape device is attached, as shown by `/usr/sbin/ioscan -fn` output.

Reading a Tape on a Different Format Device

Typically, a tape written on a Wangtek QIC 1000 device cannot be read on a Wangtek QIC 525 device. This is because the default device special file `/dev/rmt/c#t#d#BEST` will write in QIC 1000 format.

To create the device file needed for writing QIC 525 format, use the following command. Also shown are the resulting device special files.

```
/usr/sbin/mksf -C tape -I 1 -b QIC_525
/dev/rmt/c#t#d#QIC525      on a system allowing long file names, or
/dev/rmt/c#t#d#f5         on a system requiring short file names
```

NOTE	In short file name notation, <code>f#</code> (or <code>i#</code> , shown in next example) denotes device-dependent values. See <i>mt</i> (7) in the <i>HP-UX Reference</i> for explanation.
------	---

NOTE	QIC tape drives are SCSI devices and are based on a different technology than older HP-IB cartridge drives. The media used by the two types of tape drives are incompatible.
------	--

Allowing for Trial and Error

If you are attempting to use a new tape device with the stape driver and you do not know exactly how to configure it, you can use the `-e` option to create a device file that will let the driver try several configurations to find one that will work.

The following shows the command line and resulting device special files:

```
/usr/sbin/mksf -C tape -I 1 -e
/dev/rmt/c#t#d#eBEST      on a system allowing long file names, or
/dev/rmt/c#t#d#i#         on a system requiring short file names
```

Avoiding Data Compression

Sometimes an operation requires use of a device special file that writes data without compression. For example,

- On HP-UX, the STK 3480 tape drive requires that if data cannot be compressed to fewer than 102,400 bytes, it must be written to tape without compression.
- A tape created on an HP35480A will have been written with data compression enabled. To read the tape on an HP35470A tape drive, you must use a device special file that does not compress data.

To accomplish this, you cannot use the default BEST density because it will automatically compress the data.

To create device special files for the STK 3480 that write data in uncompressed form, use the following sample command. Also shown are the resulting device special files.

```
/usr/sbin/mksf -C tape -I 1 -b D3480
/dev/rmt/c#t#d#D3480      on a system allowing long file names, or
/dev/rmt/c#t#d#f1         on a system requiring short file names
```

To create device special files for the HP35480A to write a tape in uncompressed form, use the following sample command. Also shown are the resulting device special files.

```
/usr/sbin/mksf -I 8 -C tape -b DDS1
/dev/rmt/c#t#d#DDS1       on a system allowing long file names, or
/dev/rmt/c#t#d#f1         on a system requiring short file names
```

This tape can now be read on a tape drive, regardless of whether or not it supports data compression.

After Configuring a Tape Drive

The following manpages, found in the *HP-UX Reference* give specifications related to typical tape drive tasks and capabilities:

<i>cpio</i> (1)	Copy file archives in and out (<i>cpio</i> is not recommended for use with 3480 products.)
<i>dd</i> (1)	Convert, reblock, translate, and copy a file
<i>ftio</i> (1)	Faster tape I/O
<i>mediainit</i> (1)	Initialize disk or cartridge tape media; partition DDS
<i>mt</i> (1)	Magnetic tape manipulating program
<i>nohup</i> (1)	Run a command immune to hangups, logouts, and quits
<i>pax</i> (1)	Portable archive exchange
<i>tar</i> (1)	tape file archiver
<i>tcio</i> (1)	Command set/80 (CS/80) cartridge tape utility
<i>backup</i> (1M)	Backup or archive file system
<i>cstm</i> (1M)	Command-line interface to the Support Tool Manager
<i>dump</i> (1M)	Incremental file-system dump, local or across network
<i>fbackup</i> (1M)	Selectively back up files
<i>frecover</i> (1M)	Selectively recover files
<i>install</i> (1M)	Install commands
<i>ioscan</i> (1M)	Scan I/O system
<i>lssf</i> (1M)	List a special file
<i>mk_kernel</i> (1M)	Build a bootable HP-UX kernel
<i>mkrs</i> (1M)	Construct a recovery system
<i>mksf</i> (1M)	Make a special file
<i>restore</i> (1M)	Restore file-system incrementally, local or across network
<i>rmt</i> (1M)	Remote magnetic-tape protocol module
<i>savecore</i> (1M)	Save a core dump of the operating system
<i>scsictl</i> (1M)	Control a SCSI device
<i>swinstall</i> (1M)	Install HP-UX software
<i>tar</i> (4)	Format of tar tape archive
<i>ct</i> (7)	Command set/80 (CS/80) cartridge tape access
<i>mt</i> (7)	Magnetic tape interface and controls
<i>scsi</i> (7)	Small Computer System Interface device drivers

scsi_ctl(7) SCSI device control device driver

scsi_tape(7) SCSI sequential access (stape) device driver

Other sources you may wish to consult include:

- *HP-UX System Administration Tasks*
- *Managing HP-UX Software*
- *HP OpenView Software Distributor Administrator's Guide*
- HP OmniBack, Turbo-Store documentation
- Documentation for any products you intend to install from tape media.

7

Configuring Printers and Plotters

Because they are output-only devices, printers and plotters are configured somewhat differently than other peripheral devices.

There are three basic steps to printer and plotter configuration:

- physically installing the printer or plotter (documented in the hardware manual shipped with the device).
- configuring the HP-UX kernel for the device drivers to communicate with the printer or plotter.
- setting up the HP-UX LP spooler to send print jobs to the printer or plotter and to recognize the printer or plotter's features.

Printers and plotters are most easily configured for local, remote, or network access using SAM (/usr/sbin/sam). SAM creates the appropriate device files when adding a local printer and helps identify missing drivers if it cannot find a particular interface.

If you configure a printer or plotter using the HP-UX command-line approach, you can use this chapter for the kernel configuration and then refer to the *HP-UX System Administration Tasks* manual for instructions on setting up the LP spooler.


If you are using something other than the default HP-UX spooler, consult the documentation accompanying that application for instructions on setting it up.

Familiarize yourself with the various pieces of documentation *before* proceeding with the installation and configuration.

Preparing to Configure HP-UX for a Printer or Plotter

Choosing Means of Access

Printers and plotters can be connected to the system to be accessed locally, remotely, or through the network. In the following example, the printer basil is physically connected to a system named primrose.

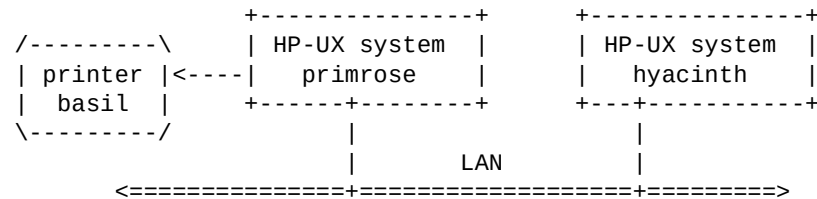


The physical connection might be serial (RS-232-C), parallel, SCSI, or HP-IB, depending on the system interface and printer. Basil is connected as a local printer to primrose. The LP spooler on primrose is configured to include the local printer basil. Print requests generated on primrose are spooled directly to basil.

Users on a system called hyacinth can also access printer basil as a remote printer, provided the LP spooler on hyacinth is so configured. (The remote printer can be named anything for users on hyacinth, but consistency in naming simplifies the configuration.)

If you use the HP-UX command-line interface, the complexities of setting up remote access are accomplished using the *lpadmin(1M)* and *rlpdaemon(1M)* commands.

In the following example, the printer basil is accessed by both primrose and hyacinth as a network printer. Basil is connected directly to the LAN and has its own IP address. There is no direct connection (RS-232-C, parallel, HP-IB, or SCSI) between the printer and any HP-UX system (primrose or hyacinth).

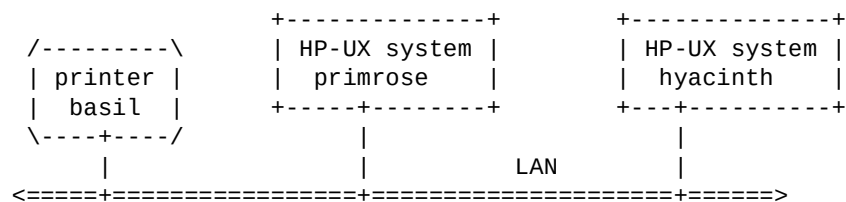


Configuring access to a network printer is more complex than configuring access to a local printer; HP recommends using the HP JetDirect Network Interface, an optional product. SAM requires JetDirect configuration and hides any additional complexities.

When a user generates a request to a configured network printer, the LP spooler on the system from which the request is generated sends the print request over the LAN to the printer.

If printer basil is configured to a terminal using Terminal Session Manager (TSM) as shown in the following example, only the user logged into that terminal has access to the printer.

Preparing to Configure HP-UX for a Printer or Plotter

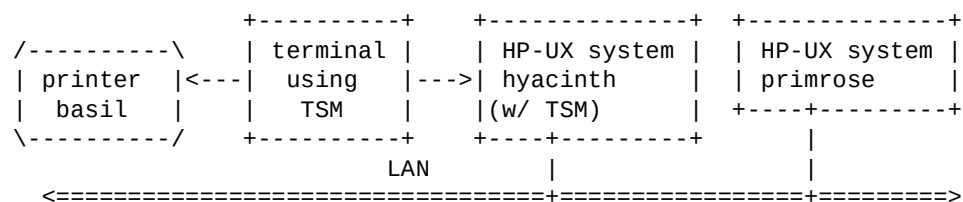

This chapter discusses configuration of local and remote printers and plotters only. For network configuration, use SAM and HP JetDirect. For TSM configuration, use the *Terminal Session Manager User's Guide*. Consult the *X Station User's Guide for the HP 700/RX* or *HP VUE 3.0 User's Guide* for information on configuring a printer into an X or VUE environment.

Hardware Concerns

- Some plotters (particularly electrostatic plotters with vector-to-raster converters) are *not* customer installable. Attempting to install them might introduce defects which will invalidate your warranty. These prohibitions should be clearly noted in the documentation accompanying the plotter. Call your local HP Sales and Support Office for a certified representative to install and set up the HP plotter properly. A list of worldwide HP offices is included in the accessories package accompanying the plotter.
- As shipped from the factory, the printer is likely to be set up to operate in parallel mode; if you intend to connect the printer to any other interface (that is, serial, SCSI, HP-IB, or using the network), you may need to reset hardware switches. Consult the printer hardware manual for information.
- Follow any interface-specific recommendations given in the hardware documentation regarding setting device address.

Software Concerns

- Consult the tables in “Selecting Device Drivers for Your Printer or Plotter” to identify the drivers compatible with the printer or plotter and interface to which it is being connected.
- Once you have determined all of these items, proceed to the sections, “Configuring a Printer Using HP-UX Commands” and “Configuring a Plotter or other Non-Automatically Configurable Output Devices Using HP-UX Commands”.

Selecting Device Drivers for Your Printer or Plotter

Use this section to identify the device drivers required for your printer configuration, based on the model of printer or plotter and the interface to which it is attached.

Guidelines for Configuring a Printer or Plotter to an HP-IB Interface

- Determine which HP-IB address(es) are being used by other devices on the HP-IB card. Use the worksheet at the end of this book to keep track of addresses.
- You are limited to eight devices per HP-IB card, addresses 0 through 7.
- Do *not* place a plotter on the same HP-IB interface used by your disk or tape drives; it will substantially diminish the disk or tape's performance. A dedicated HP-IB interface is recommended for a plotter.
- On Series 800 CIO systems, HP-IB printers default to Ciper and Amigo protocol, although some devices can be configured using the `instr0` device driver. Other options are to consider converting the printer to a parallel interface or configuring the printer to the LAN via an HP JetDirect card.
- On Series 700 systems, printers attached to an HP-IB EISA interface do not have their device files created automatically by `insf`. If not using SAM, you will need to create the device special files using `mknod`. Since `hpib` is the driver that actually controls the printer, use the `hpib` driver as the basis for the device special file. A sample procedure, "Creating a Device Special File for an HP-IB Printer", is provided later in this chapter.

Table 7-1 HP-IB Printer Configuration Requirements

Architecture	Interface Card	Interface and Device Drivers	Default Device File
Series 700 EISA	25560A ^a	cs80 hshpib hpib ^b	(see note) ^c
Series 800 CIO	27110B ^d	hpib0 lpr0 or lpr1 ^e	/dev/c#t#d#_lp ^f

- a. The following models can be configured to the HP 25560A Series 700 EISA HP-IB interface card: C1602A, 3630A. eisa_config identifies the card as HWP0C70.
- b. When these drivers are specified, the following additional drivers are also included in the kernel: wsio, core, eisa, eeprom.
- c. insf does not create a default device file for the Series 700 hpib driver. Use /usr/sbin/mknod or /usr/sbin/sam to create the printer's device special file. (See Appendix C for a mknod example.)
- d. The following models can be configured to 27110B, the Series 800 CIO HP-IB interface card: 2227B, 2235B/C/D, 2354A, 2562C, 2563C, 2564B/C, 2565A, 2566B/C, (2567B), 2567C, 2932A, 2934A, C1202A, C1602A, C2010A. (Obsolete models are shown in parenthesis and are listed for reference only.)
- e. lpr0 is required for CIPER protocol printers, models 256x. lpr1 is required for AMIGO protocol printers, models 2235, 2602, 2673A, 2931B/G, 2932A, 2933/34A, 3630A. Specifying the drivers listed here also cause the following additional drivers to be included in the kernel: cio_ca0, sio, pfail, pa.
- f. c#t#d# derives from the hardware path, as shown in ioscan output: c# is the card instance for the ext_bus class of interface card to which the device is attached, t# is the HP-IB unit number, d# is the device number.

NOTE Series 800 HP-PB architecture does not support HP-IB printer configuration.

Table 7-2 HP-IB Plotter Configuration Requirements

Architecture	Interface Card	Interface and Device Drivers	Default Device Files
Series 700 EISA	25560A (HWP0C70) ^a	hshpib hpib	(see note) ^b
Series 800 CIO	27110B ^c	cio_ca0 hpib0 instr0	/dev/hpib/c#t#d0 /dev/hpib/c# ^d
Series 800 HP-PB	28650A/B ^c	hpib1 instr0	(same as CIO)

- a. The following model plotters can be configured to HP 25560A, the Series 700 EISA HP-IB interface card: 7596A/C, C1620A, C1625A, C1627A. Note, `eisa_config` identifies the 25560A card as HWP0C70.
- b. `insf` does not create a default device file for the Series 700 hpib driver. Use `/usr/sbin/mknod` or `/usr/sbin/sam` to create the plotter's device special file.
- c. The following model plotters can be configured to HP 27110B, the Series 800 CIO HP-IB interface card, and to Series 800 HP-PB interface cards 28650A/B and 28651A: 7440A, 7475A, (7550A), 7550B, (7586B), (7595A/B), (7596A/B), (7599A), (C1600A), (C1601A), C1620A, C1625A, C1627A. (Obsolete models are shown in parenthesis and are listed for reference only.)
- d. `insf` produces 31 device special files for `instr0` in the first syntax shown, where `c#` represents the card instance for the `instr` class of interface card and `t#` represents HP-IB addresses 0 to 31. The device number `d` is always zero. A 32nd device file has the second syntax shown, encoding only the card instance of `instr` class.

Guidelines for Configuring a Printer or Plotter to a Serial Interface

- Check `/etc/inittab` to make sure you do *not* have a `getty` (for a terminal) spawned on the same serial port to which you are configuring a printer or plotter.
- Configure the printer or plotter's RS-232-C data transmission values to be consistent with your computer's requirements. (These requirements are documented in the printer/plotter manual.)
 - baud rate
 - parity
 - data length
 - handshake
 - symbol or character set
- Additional steps may be required when configuring a printer or plotter to communicate through an HP Datacommunications and Terminal Controller (DTC) or `telnet` port access. (Such asynchronous communication is useful when connecting a printer to an X terminal, for example.)

Refer to the chapter "Setting up Printers Using the HP-UX Spooler," in the *DTC Device File Access Utilities and Telnet Port Identification* manual.

- Once you have configured a printer or plotter to a serial port, follow the procedure "Creating a Device Special File for a Printer or Plotter Configured to a Serial Port".

Table 7-3 Serial Printer Configuration Requirements

Architecture	Interface Card	Interface and Device Drivers	Default Device File
Series 700	(internal) ^a	asio0	/dev/tty#p# ^b
Series 800 CIO	98196A ^c 98190A	mux ^d	(same as above)
Series 800 HP-PB	40299B ^c J2092 A J2093A J2094A J2096A A1703-60022	mux2 ^e	(same as above)
Series 800 HP-PB	A1703-60003 ^f 28639-60001	mux4 ^g	(same as above)

- a. The following model printers can be configured to the Series 700 serial interface: 2562C, 2563C, 2566B/C, 2567C, 33449A, 33459A, C1645A, C1676A, C2001A, C2010A, C2106A, C2113A, C2354A, C2356A.
- b. By default, `insf` creates the standard `tty` device file shown. For ease in system administration, HP recommends that you create the line-printer device file `/dev/c#p#_lp`, using `/usr/sbin/mksf`, as explained in “Creating a Device Special File for a Printer or Plotter Configured to a Serial Port”. The device naming convention derives from `ioscan` output: `c#` is the card instance for the `tty` class of interface card to which the device is attached and `p#` is the port to which the printer is attached.
- c. The following printer models can be configured to the Series 800 serial interfaces: 2225D, 2227A, 2228A, 2235A/B/C/D, 2276A, 2277A, 2562A/C, 2563A/B/C, 2564B/C, 2565A, (2566A), 2566B/C, (2567B), 2567C, 2684A, 2686A/D, (2932A), 2934A, (33440A), 33447A, 33449A, 33459A, 33471A, 3630A, 41063A, C1200A, C1602A, C2001A, C2106A, C2354A. (Obsolete models are shown in parenthesis and are listed for reference only.)
- d. Specifying `mux0` causes `cio_ca0`, `sio`, `pfail`, and `pa` to be included in the kernel.
- e. Specifying `mux2` causes `sio`, `pfail`, and `pa` to be included in the kernel.
- f. These cards are typically used for console and remote console. If the second port is not being used for remote console, a printer may be attached.
- g. Specifying `mux4` causes `lanmux0`, `lantty0`, `lan3`, `sio`, `pfail`, and `pa` to be included in the kernel.

Table 7-4 Serial Plotter Configuration Requirements

Architecture	Interface Card	Interface and Device Drivers	Default Device File
Series 700	(internal) ^a	asio0	/dev/tty#p# ^b
Series 800 CIO	98196A ^c 98190A	mux0 ^d	(same as above)
Series 800 HP-PB	40299B ^c J2092 A J2093A J2094A J2096A A1703-60022	mux2 ^e	(same as above)
Series 800 HP-PB	A1703-60003 ^f 28639-60001	mux4 ^g	(same as above)

- a. The following model plotters can be configured to the Series 700 serial interface: 7440A, 7475A, 7550A, 7558, 7570A, 7576A, 7596C, C1620A, C1625A, C1627A, C1629A, C2847A, C2848A, C2858A, C2859A, C3170A, C3171A, C3180A, C3181A.
- b. The device file created by default is the standard /dev/ttyinstance#pport#. For ease of system administration, HP recommends that you create a line-printer device file (/dev/c#p#_lp) using mksf, as explained in “Creating a Device Special File for a Printer or Plotter Configured to a Serial Port”. The device naming convention derives from ioscan output: c# is the card instance for the tty class of interface card to which the device is attached and p# is the port to which the plotter is attached.
- c. The following plotter models can be configured to the Series 800 RS-232-C serial interface: 7440A, 7475A, 7550A/B, 7558, 7586B, 7595A, 7595B, 7596A, 7596B, 7599A, C1620A, C1625A, C1627A. HP plotter models 7595A and 7596A can also be configured to an RS-422 interface.
- d. Specifying mux0 causes cio_ca0, sio, pfail, and pa to be included in the kernel.
- e. Specifying mux2 causes sio, pfail, and pa to be included in the kernel.
- f. These cards are typically used for console and remote console. If the second port is not being used for remote console, a plotter may be attached.
- g. Specifying mux4 causes lanmux0, lan3, lantty0, sio, pfail, and pa to be included in the kernel.

Guidelines for Configuring a Printer or Plotter to a Parallel (Centronics) Interface

Table 7-5 **Parallel Printer Configuration Requirements**

Architecture	Interface Card	Interface and Device Drivers	Default Device File
Series 700 Core I/O	(internal) ^a	CentIf ^b	/dev/c#t#d0_lp ^c
Series 800 HP-PB	28655A ^d	lpr2 ^e	(same as above)

- a. The following printer models can be configured to the Series 700 parallel interface: 2562C, 2563C, 2566C, 2567C, 33449A, 33459A, C1645A, C1656A, C1686A, C2010A, C2011A, C2021A, C2040A, C2106A, C2113A, C2114A, C2121A, C2356A
- b. Specifying CentIf causes CharDrv to be included in the kernel.
- c. c#t#d# derives from the hardware path, as shown in ioscan output: c# is the card instance for the ext_bus class of interface card to which the printer is attached, t# is the target number, d# is the device number.
- d. The following printer models can be configured to the Series 800 HP-PB parallel interface: 2225C/P, 2227A, 2228A, 2235A, (2276A), (2277A), 2562C, (2563A/B/C), (2564B/C), (2565A), (2566B), 2566C, (2567B), 2567C, (2684A/P), (2686A/D), 2932A, 2934A, (33438P), (33440A), (33447A), 33449A, 33459A, 33471A, 3630A, C1202A, C1602A, C2106A. (Obsolete models are shown in parenthesis and are listed for reference only.)
- e. Specifying lpr2 causes sio, pfail, and pa to be included in the kernel.

NOTE Neither Series 700 EISA nor Series 800 CIO architectures support a parallel interface.

Table 7-6 Parallel Plotter Configuration Requirements

Architecture	Interface Card	Interface and Device Drivers	Default Device File
Series 700 Core I/O	(internal) ^a	CentIf ^b	/dev/c#t#d0_lp ^c
Series 800 HP-PB	28655A ^d	lpr2 ^e	(same as above)

- a. The following plotter models can be configured to the Series 700 parallel interface: 7440A, C1631A, C2859A, C1620A, C1633A, C3170A, C1625A, C2847A, C3171A, C1627A, C2848A, C3180A, C1629A, C2858A, C3181A
- b. Specifying CentIf causes CharDrv to be included in the kernel.
- c. c#t#d# derives from the hardware path, as shown in ioscanner output: c# is the card instance of the ext_bus class of interface card to which the plotter is attached, t# is the target number, d# is the device number.
- d. The following plotter models can be configured to the Series 800 HP-PB parallel interface: 7550B, C1600A, C1601A, C1620A, C1625A, C1627A
- e. Specifying lpr2 causes sio, pfail, and pa to be included in the kernel.

NOTE Neither Series 700 EISA nor Series 800 CIO architectures support a parallel interface.

Guidelines for Configuring a Printer to a SCSI Interface

Table 7-7 SCSI Printer Configuration Requirements

Architecture	Interface Card	Interface and Device Drivers	Default Device Files
Series 800 CIO	27147-60002 ^a	scsi2 ^b lpr3 ^c	/dev/c#t#d#_lp ^d
Series 800 HP-PB	28655A ^a	scsi1 ^e lpr3 ^c	(same as above)

- a. The following printer models can be configured to the Series 800 SCSI interface: C2001A, C2106A, C2114A, C2753A, C2754A, C2755A, C2756A, C2772A, C2773A, C2776A, C2777A
- b. Specifying scsi2 causes cio_ca0, sio, pfail, and pa to be included in the kernel.
- c. Specifying lpr3 causes target, sio, pfail, and pa to be included in the kernel.
- d. c#t#d# derives from the hardware path, as shown in ioscan output: c# is the card instance of the ext_bus class of interface card to which the printer is attached, t# is the SCSI ID number, d# is the device number.
- e. Specifying scsi1 causes sio, pfail, and pa to be included in the kernel.

NOTE There is no SCSI printer driver for Series 700. Also, SAM does not support SCSI printers.

Configuring a Printer Using HP-UX Commands

First configure the software for the operating system. Then, if necessary, bring down the system to install hardware. When you reboot, HP-UX will automatically bind the drivers to the peripherals it finds.

1. Consult the tables in "Selecting Device Drivers for Your Printer or Plotter" to identify which drivers need to be present in your kernel for HP-UX to communicate through the intended interface with the printer.
2. Execute `/usr/sbin/lsdev -d printer_driver` to see whether the driver is already in the kernel. If it is, you might see output resembling the following (shown for a Series 700 parallel interface):

```
/usr/sbin/lsdev -d CentIf
```

Character	Block	Driver	Class
216	-1	CentIf	ext_bus

For a Series 800 parallel interface, executing `/usr/sbin/lsdev -d lpr2` might show similar output, but the character major number is 181. In both Series 700 and 800 systems, the interface class is `ext_bus`.

3. Determine how much additional configuration is needed for the printer by invoking the command, `/usr/sbin/ioscan -fn -d printer_driver`.

- **If the necessary drivers are already present in the kernel**, the `ioscan` output of a Series 700 might resemble this:

```
/usr/sbin/ioscan -fn -d CentIf
```

Class	I	H/W	Path	Driver	S/W	State	H/W	Type	Description
=====									
ext_bus	1	2/0/6		CentIf	CLAIMED		INTERFACE	Built-in Parallel Interface	
								/dev/c1t0d0_lp	

Similarly, the `ioscan` output for a Series 800 might resemble this:

```
/usr/sbin/ioscan -fn -d lpr2
```

Class	I	H/W	Path	Driver	S/W	State	H/W	Type	Description
=====									
ext_bus	2	56/53		lpr2	CLAIMED		INTERFACE	HP28655A-Paralle Interface	
								/dev/c2t0d0_lp	

Both cases show that the drivers and device special files are present, allowing HP-UX to communicate with the printer.

You can attach your printer without further operating-system configuration and without bringing down the system.

Your next task is to configure the LP spooler, to enable you to send print jobs to the printer or plotter. To do so, see "Managing Printers and Printer Output," in *HP-UX System Administration Tasks*.

- **If any necessary driver is absent from the kernel** (for example, if configuring the printer also involves adding an interface card, or if you are configuring the printer to an interface not previously used for a printer), the `ioscan` output of a Series 800 might resemble this:

```
/usr/sbin/ioscan -fn
```

```
Class   I H/W Path Driver   S/W State   H/W Type   Description
=====
ext_bus -1 56/53          UNCLAIMED   UNKNOWN    HP28655A-Parallel Interface
```

Notice in this example, the Driver field for the parallel interface is blank, the class and hardware type are unknown and no device special file is displayed.

If the printer driver is absent, you will need to rebuild the kernel to include it.

Here is how to do so:

- Change directory to the build environment (`/stand/build`). There, execute a system preparation script, `system_prep`. `system_prep` writes a system file based on your current kernel in the current directory. (That is, it creates `/stand/build/system`.) The `-v` provides verbose explanation as the script executes.

```
cd /stand/build
/usr/sbin/sysadm/system_prep -v -s system
```

- Edit the `/stand/build/system` file to add any absent driver(s). (If you are adding an interface card also, make sure to add the interface driver, as documented in Chapter 2.)
- Build the kernel by invoking the `mk_kernel` command. This creates `/stand/build/vmunix_test`, a kernel ready for testing.

```
/usr/sbin/mk_kernel -s system
```

- Save the old system file and kernel by moving them. Thus, if anything goes wrong, you still have a bootable kernel.

```
mv /stand/system /stand/system.prev
mv /stand/vmunix /stand/vmunix.prev
```

- Move the new system file and new kernel into place, ready to be used when you reboot the system.

```
mv /stand/build/system /stand/system
mv /stand/build/vmunix_test /stand/vmunix
```

- If your printer installation also requires that you install an E/ISA card, you need to run `eisa_config` at this time to configure the EISA or ISA bus. Consult "Appendix A, EISA Configuration" of this manual for tutorial and procedures and `eisa_config(1M)` in the *HP-UX Reference*.

- Once the software configuration is complete, bring down the system with sufficient grace period to allow users to exit their files. You can execute `/usr/sbin/shutdown -r` or `/usr/sbin/reboot`.

If you have to install an interface card, bring the system to a complete halt (that is, use `/usr/sbin/shutdown -h` or `/usr/sbin/reboot -h`). See `shutdown(1M)` or `reboot(1M)` in the *HP-UX Reference*.

- a. Power off and unplug all peripherals, *then* the SPU.
- b. Install the hardware, as described in the manual accompanying the (card and) printer.
- c. Connect the printer to the card.
- d. Plug in and power up the printer.
- e. Set the hardware switches for the printer address.
- f. Plug in and power on any other peripherals and *then* the SPU.

When the system reboots from the new kernel, HP-UX detects the printer and associates it with its driver.

In most instances, `insf` automatically creates the device special files necessary to communicate with the printer, although in some cases you will need to create the device special files as a separate operation. (Two cases — configuring a printer to a serial port and guidelines for configuring a non-HP printer to a parallel port — are documented following this procedure.) Also refer to Appendix C, Major and Minor Numbers, for instructions on using `mknod` to create a custom device special file, if needed.

5. Invoke `/usr/sbin/ioscan -fn -dprinter_driver` again to confirm that the I/O subsystem finds the printer and has created the necessary device special files. Your output should now resemble that shown in step 3.

Your next task is to configure the LP spooler to enable you to send print jobs to the printer or plotter. See "Managing Printers and Printer Output," in *HP-UX System Administration Tasks*.

Creating a Device Special File for a Printer or Plotter Configured to a Serial Port

By default, `insf` creates device special files for parallel, HP-IB, and SCSI ports that can be easily associated with a printer or plotter.

However, the device special files `insf` creates for serial ports (ports controlled by `asio0`, `mux0`, `mux2`, and `mux4`) are named to accommodate terminals more intuitively than printers or plotters. To use the serial port for a line printer, you should create a new device special file with a line printer name.

1. Execute `ioscan -fn -C tty` to identify the device file currently associated with the port. Note in the following excerpted output, the sample device special file representing port 3 has a name consistent with the device-file format used by terminals and modems.

```
/usr/sbin/ioscan -fn -C tty
```

Class	I	H/W Path	Driver	S/W State	H/W Type	Description
===== tty	0	56/56	mux2	CLAIMED	INTERFACE	MUX
			/dev/tty0p3			

2. Create a new device special for the port to which you are attaching the printer by invoking `/usr/sbin/mksf` and specifying the device driver (`-d`), hardware path (`-H`), and serial port (`-p`). Use `-l` to create a device special file with a line-printer name and `-v` for verbose output.

For example, the following command line creates a new device special file for port 3 with a line-printer name.

```
/usr/sbin/mksf -d mux2 -H 56/56 -p3 -l -v  
making c0p3_lp c 193 0x000300
```

If your manual states that your printer uses hardware flow control (RTS/CTS) and you wish to employ it, you can execute `mksf` with the `-f` option to enable the feature.

```
/usr/sbin/mksf -d mux2 -H 56/56 -p3 -f -l -v  
making c0p3_lp c 193 0x000310
```

3. Invoke `/sbin/ioscan -fn` again to display the new device special file, whose name will now be consistent with other line printer device special files.

Class	I	H/W Path	Driver	S/W State	H/W Type	Description
===== ...						
tty	0	56/56	mux2	CLAIMED	INTERFACE	MUX
...						
			/dev/c0p3_lp			

You can also confirm the file's characteristics by invoking `/usr/sbin/lssf` on the new file or viewing the long listing (`ll`).

```
/usr/sbin/lssf /dev/c0p3_lp  
mux2 card instance 0 port 3 hardwired at address 56/56 /dev/c0p3_lp
```

```
ll /dev/c0p3_lp
crw-rw-rw-  1 bin      bin      193 0x000300 Mar 16 18:29 /dev/c0p3_lp
```

In the minor number (0x000300, shown in the long listing), you can see that the 3 corresponds to the port number for the mux2 card at card instance 0.

If you have enabled hardware flow control, your output will resemble the following:

```
/usr/sbin/lssf /dev/c0p3_lp
mux2 card instance 0 port 3 hardwired HW flow control
  at address 56/56 /dev/c0p3_lp
```

```
ll /dev/c0p3_lp
crw-rw-rw-  1 bin      bin      193 0x000310 Mar 16 18:29 /dev/c0p3_lp
```

In the minor number (0x000310, shown in the long listing), you can see that the 3 corresponds to the port number for the mux2 card at card instance 0 and that bit 27 is set. (For minor number bit assignments, see Appendix C, "Major and Minor Numbers.")

Your next task will be to configure the LP spooler to enable you to send print jobs to the printer or plotter. See "Managing Printers and Printer Output," in *HP-UX System Administration Tasks*.

Creating a Device Special File for an HP-IB Printer

When the system boots, `insf` is unable to create default device special files for any printer attached to an EISA HP-IB interface. You will need to create a character device file using `mknod`.

To do so,

1. Change directory to `/dev`.
2. Determine the major number by invoking the `lsdev` command. You will see that `hpib` has a character major number of 21.
3. Construct a minor number for the device by using the bit assignments for the `hpib` device driver, found in Appendix C.
4. Create the device special file using `mknod`, which has the following syntax:

```
/usr/sbin/mknod file_name b|c major# minor#
```

- Name the file something easily associated with the device.
- Use `c` for character device special file.
- Use the character major number reported by `lsdev`.
- Use the minor number constructed from the bit assignment tables.

The minor number for `hpib` has the syntax `0xABC000`, where

- `0x` is the prefix indicating hexadecimal format.
- `AB` is the card instance number.
- `C` is the HP-IB device.

Execute `ioscan -f` to identify the card instance number for the EISA HP-IB card. In the following sample output, the card instance number is 3.

```
/usr/sbin/ioscan -f -d hpib
Class      I  H/W Path  Driver  S/W State  H/W Type  Description
=====
ext_bus    3  4/0/3    hpib    CLAIMED    INTERFACE  EISA card HWP0C70
```

Set the HP-IB printer device number on the printer itself. Assuming for this example that the HP-IB device is set to 2, the command line for a device special file called `/dev/hpib_printer` would be as follows:

```
/usr/sbin/mknod /dev/hpib_printer c 21 0x032000
```

5. Once you create the device special file, HP-UX will be able to communicate with the printer. Plug in the printer, turn it on, and send it a short file. It should print.

Guidelines for Configuring a Non-HP Printer to a Parallel Port

Compatibility problems typical when configuring non-HP peripherals to the parallel interface usually involve the handshake mode. The CentIf driver provides six handshake modes that can be accessed for different implementations. To use them, create a custom device special file using specific bits in the minor number.

When a peripheral is unable to communicate via the parallel port, be sure to use the `cat` command and not `lp` as a starting point. This eliminates problems with model scripts and `lpsched`. If this fails, and the peripheral is known to work, substitute an HP LaserJet or DeskJet printer and test again. If the HP product works, the problem may be in the handshake method. (Be sure that the problem is communication and not the text going to the printer — a PostScript printer will always report an error if an ASCII file is sent to it.)

Table C-4 of Appendix C shows the the bit assignments for the CentIf driver. Bits 28-31 encode the handshake mode, as follows:

- | | |
|---|--|
| 1 | Handshake using nACK and BUSY lines. |
| 2 | Handshake using BUSY line only. |
| 3 | Bidirectional read/write for ScanJet support. |
| 4 | Streaming mode. Setup = 1 usec, hold = 1 usec. This mode is commonly used by Tektronix (Phasor and others) printers. |
| 5 | Pulsed mode. Similar to mode 1, but nSTROBE is 1 usec. |
| 6 | Pulsed mode. Similar to mode 2, but nSTROBE is 1 usec. |

Modes 5 and 6 are used to resolve deadlock situations that may occur in modes 1 and 2. Products that work well with modes 5 and 6 are the HP 293x family of printers, and some printers from NEC and Qume.

Note, these modes are for *reference use only*. No support (beyond mode 2 for HP LaserJets) is implied; however, the user may test these modes for possible success with other vendor devices. For more information on the Centronics interface, consult the `cent(7)` manpage.

Configuring a Plotter or other Non-Automatically Configurable Output Devices Using HP-UX Commands

NOTE

Although this procedure refers explicitly to plotters, it can be used to configure other devices that need the `instr0` device driver on a Series 800 computer.

Unlike printers, plotters cannot be automatically configured by the kernel. Instead, you must manually ensure that the driver is associated with the hardware path by using the capabilities of `ioscan`.

1. Connect your plotter, noting the hardware address to which you are connecting it and the HP-IB address to which you are setting the plotter. In this example, we are configuring an HP 7596A Draftmaster II to an HP-IB interface located in card-cage slot 12 in a Model 806 computer. The HP-IB address is set to 5.
2. Identify the hardware path to the plotter by invoking `ioscan`. An excerpt of the output might resemble the following:

```
/usr/sbin/ioscan -f
```

Class	I	H/W Path	Driver	S/W State	H/W Type	Description
bc	0		root	CLAIMED	BUS_NEXUS	
bc	1	56	bc	CLAIMED	BUS_NEXUS	Bus Converter
ext_bus	1	56/40	hpfl1	CLAIMED	INTERFACE	HP 28615A - HP-FL Interface
lanmux	0	56/44	lanmux0	CLAIMED	INTERFACE	HP J2146A - 802.3 LAN
lan	1	56/44.1	lan3	CLAIMED	INTERFACE	
ext_bus	2	56/48	hpib1	CLAIMED	INTERFACE	HP 28650B - HP-IB Interface

The interface driver is `hpib1` and the hardware path of interface card to which the plotter is connected is `56/48` (hardware path equals slot number times four; the bus converter is in slot 14, the interface card is in slot 12). Neither the HP-IB address of the plotter nor the `instr0` device driver is shown.

3. Rebuild the kernel to include the `instr0` driver. Here is how to do so:
 - a. Change directory to the build environment (`/stand/build`). There, execute a system preparation script, `system_prep`, which extracts the system file from the current kernel and writes a `system` file in your current directory. (That is, it creates `/stand/build/system`.) The `-v` provides verbose explanation as the script executes.


```
cd /stand/build
/usr/sbin/sysadm/system_prep -v -s system
```
 - b. Edit the `/stand/build/system` file to add the absent driver(s).
 - c. Build the kernel by invoking the `mk_kernel` command, which compiles the kernel and loads it. `mk_kernel` creates `/stand/build/vmunix_test`, a kernel ready for testing.


```
/usr/sbin/mk_kernel -s system
```
 - d. Save the old system file and kernel by moving them. Thus, if anything goes wrong, you still have a bootable kernel.

Configuring a Plotter or other Non-Automatically Configurable Output Devices Using HP-UX Commands

```
mv /stand/system /stand/system.prev
mv /stand/vmunix /stand/vmunix.prev
```

- e. Move the new system file and new kernel into place, ready to be used when you reboot the system.

```
mv /stand/build/system /stand/system
mv /stand/build/vmunix_test /stand/vmunix
```

4. Reboot the system by invoking the shutdown command with sufficient grace period to allow users to exit their files before the system goes down. See *shutdown(1M)* in the *HP-UX Reference*.
5. Bind the software driver used by the plotter (instr0) to the plotter's full hardware path (56/48.5) by executing `/usr/sbin/ioscan` with the `-M` and `-H` options. Then verify the results by executing `ioscan` again.

As shown in the following sequence of commands and `ioscan` output, the device driver (instr0) associates with a peripheral device at address 56/48.5. The instr0 driver cannot identify any more specifically what instrument is attached, but it can communicate with it.

```
/usr/sbin/ioscan -M instr0 -H 56/48.5/usr/sbin/ioscan -kf
```

Class	I	H/W Path	Driver	S/W State	H/W Type	Description
bc	0		root	CLAIMED	BUS_NEXUS	
bc	1	56	bc	CLAIMED	BUS_NEXUS	Bus Converter
ext_bus	1	56/40	hpfl1	CLAIMED	INTERFACE	HP 28615A - HP-FL Interface
lanmux	0	56/44	lanmux0	CLAIMED	INTERFACE	HP J2146A - 802.3 LAN
lan	1	56/44.1	lan3	CLAIMED	INTERFACE	
ext_bus	2	56/48	hpib1	CLAIMED	INTERFACE	HP 28650B - HP-IB Interface
instr	0	56/48.5	instr0	NO_HW	DEVICE	HP-IB Instrument

6. Create a device special file for the plotter by invoking `/usr/sbin/insf` with the `-H` (hardware path) option; for example:

```
/usr/sbin/insf -H 56/48.5
```

This installs the device special file for the hardware path and instr0. You can verify this by executing `ioscan -H 56/48.5 -fn` to see the file name and then `ls -l filename` to see the device file's attributes.

Your next step will be to configure the LP spooler to enable you to send print jobs to the plotter; for procedure, see "Managing Printers and Printer Output" of the *HP-UX System Administration Tasks* manual.

Moving a Printer or Plotter

To move a printer or plotter, first remove it and then add it to your configuration. This sample procedure demonstrates attaching a printer to a different interface card.

1. Notify users that you are moving the printer or plotter.
2. If you have customized it, copy the `/etc/lp/interface/printer_name` to a temporary location.

```
cp /etc/lp/interface/laserjet /etc/lp/interface/laserjet_old
```
3. Remove the printer or plotter from the LP spooler by following the procedure for "Removing a Printer or Printer Class using HP-UX Commands" detailed in the chapter, "Managing Printers and Printer Output" of the *HP-UX System Administration Tasks* manual.
4. Execute `/usr/sbin/ioscan` to identify the printer or plotter's hardware address, which you are going to change. For example, in the following output an HP 2564B HP-IB printer was set with an HP-IB address of 7.

```
/usr/sbin/ioscan -fn -H 2/8
Class      I  H/W Path  Driver      S/W State H/W Type  Description
=====
...
cio         1  2/8      cio_ca0     CLAIMED   INTERFACE CIO Adapter
ext_bus     8  2/8.0    hpib0       CLAIMED   INTERFACE
printer     1  2/8.0.7  lpr0        CLAIMED   DEVICE     HP 256x HP-IB Ciper Printer
              /dev/diag/c8t7d0_lp /dev/c8t7d0_lp
```

5. Turn off, unplug, and disconnect the printer or plotter.
6. Reset the switches on the printer or plotter, if necessary, and attach the device to the new hardware location.
7. Execute `ioscan` again. In this example, the HP-IB address was changed from 7 to 5. `ioscan` reports the new address and indicates under S/W State that no hardware is present at the old printer address.

```
/usr/sbin/ioscan -fn
Class      I  H/W Path  Driver      S/W State H/W Type  Description
=====
...
cio         1  2/8      cio_ca0     CLAIMED   INTERFACE CIO Adapter
ext_bus     8  2/8.0    hpib0       CLAIMED   INTERFACE
printer     1  2/8.0.5  lpr0        CLAIMED   DEVICE     HP 256x HP-IB Ciper Printer
              /dev/diag/c8t5d0_lp /dev/c8t5d0_lp
printer     0  2/8.0.7  lpr0        NO_HW     DEVICE     HP 256x HP-IB Ciper Printer
              /dev/diag/c8t7d0_lp /dev/c8t7d0_lp
```

HP-UX automatically creates a device file to access the printer *except*:

- If you are configuring a printer to a serial port: Create the device special file by following the instructions in the section "Creating a Device Special File for a Printer or Plotter Configured to a Serial Port".

- If you are configuring a plotter: Force HP-UX to recognize the plotter at the new address by following the instructions in “Configuring a Plotter or other Non-Automatically Configurable Output Devices Using HP-UX Commands”.

Next, configure the LP spooler to recognize the printer or plotter at its new location by consulting the chapter, "Managing Printers and Printer Output" in the *HP-UX System Administration Tasks* manual.

For Further Information on Printer-Related Tasks

- *HP-UX System Administration Tasks*, "Managing Printers and Printer Output," to set up the LP spooler.
- *SharedPrint / UX User and Administrator's Guide*
- *HP MPower 1.2 Installation and Configuration*
- *HP JetDirect Network Interface Configuration Guide*
- HP OpenView OpenSpool documentation
- The following manpages in the *HP-UX Reference*:

<i>enable, disable(1)</i>	Enable or disable LP printers
<i>lp(1)</i>	Send, cancel, or alter LP requests
<i>lpstat(1)</i>	Print LP status information
<i>pr(1)</i>	Print files
<i>slp(1)</i>	Set printing options for non-serial printer
<i>accept, reject(1M)</i>	Allow or prevent LP requests
<i>bootpd(1M)</i>	Internet boot protocol server
<i>eisa_config(1M)</i>	EISA configuration tool
<i>insf(1M)</i>	Install special files
<i>ioscan(1M)</i>	Scan I/O system
<i>lpadmin(1M)</i>	Configure the LP spooling system
<i>lpana(1M)</i>	Print LP spooler performance analysis information
<i>lpsched, lpshut(1M)</i>	Start or stop LP request scheduler
<i>mk_kernel(1M)</i>	Build a bootable HP-UX kernel
<i>rcancel(1M)</i>	Remove requests from LP queue
<i>rlp(1M)</i>	Send requests to a remote system
<i>rlpdaemon(1M)</i>	Remote spooling LP daemon
<i>rlpstat(1M)</i>	Print status of remote LP spooler requests
<i>shutdown(1M)</i>	Terminate all processing
<i>tsm.lpadmin(1M)</i>	Manage printers using Terminal Session Manager
<i>x29printd(1M)</i>	Remote PAD printer server for LP requests
<i>dp(4)</i>	Dedicated ports file, used by DDFA and DTC
<i>pcf(4)</i>	Port configuration file, used by DDFA software

cent(7)

Parallel (centronics) interface

ddfa(7)

DTC device file access software

lp(7)

Line printer

For Further Information on Plotter-Related Tasks

- *Starbase Graphics Techniques*
- *SharedPrint / UX User and Administrator's Guide*
- *Managing SwitchOver / UX*
- In addition to the manpages listed in the previous section, the following manpages may be helpful:

lpfilter(1M) (plotdvr) HP-GL plotter filter

8

Configuring Uninterruptible Power Systems

Installing a PowerTrust Uninterruptible Power System (UPS) to an HP-UX computer ensures that power is maintained to your computer system for up to fifteen minutes after an AC power failure, preventing problems such as networking timeouts and tape rewinds.

The PowerTrust UPS can be configured to bring the system down with a graceful shutdown before its batteries deplete, thus maintaining data integrity and ensuring a clean reboot and reasonable systemwide fsck.

PowerTrust UPS is configured as a serial device. This chapter details the configuration guidelines.

Planning to Configure a UPS

Hardware Considerations

Choose your UPS based on its rated load capabilities.

Determine which pieces of hardware besides the server require coverage by a UPS. For example,

- If users in another building rely on the server, or several servers in a building require LAN traffic to shut down cleanly, you might need to ensure that the LAN interface is protected by the UPS.
- If you need to call in to the UPS-based servers, the dialback and DTC to which it is attached may need to be on the UPS.


Calculate the voltage/amperage (VA) capacity to ensure that your UPS unit is properly rated for the expected load. Detailed instructions for calculating how many systems and/or devices can be powered by an HP PowerTrust UPS are found in the HP Configuration Guide.

When adding disks or other peripherals to any computer covered by a UPS, recalculate the voltage/amperage (VA) load to ensure that the new current draw remains within the UPS coverage.

Prepare the site before installing the UPS, following the recommendations provided in the UPS hardware installation manual and *PowerTrust System Guide* (HP part number 5961-8383) for your UPS model.

Figure 8-1 illustrates a sample UPS configuration. (Note, the RS-232-C cabling from the console to SPU is not shown.) All protected components derive their electrical power through the UPS, which is plugged into the power source.

Figure 8-1 **Sample Configuration of an Uninterruptible Power System (UPS)**

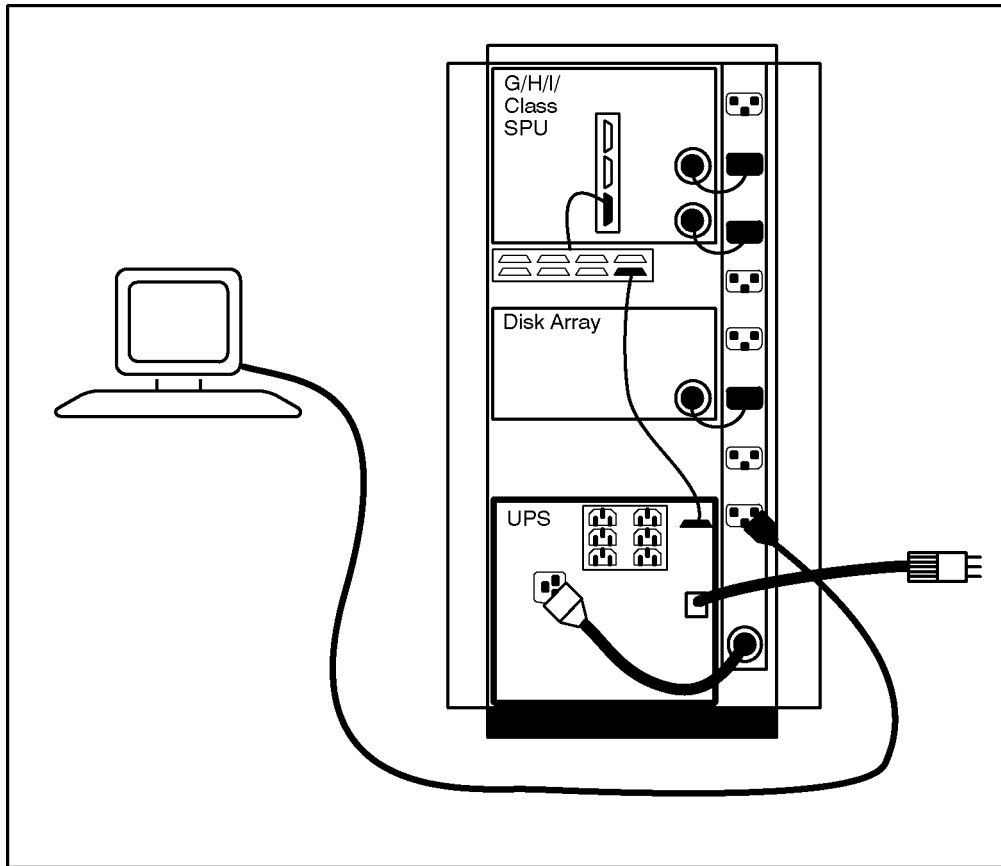

Cabling Guidelines

To communicate with the host, each PowerTrust UPS comes with an RS-232-C serial connector, HP part number 5061-2569 (pinouts shown in Table 8-1). The cable has a male DB-9 connector on the UPS end and a male DB-25 connector on the MUX end, and is 2 meters (6.5 feet) long. If this length is insufficient, you can extend it by using a straight-through 25-wire RS-232-C extender cable (3062C, 25 feet long) from the MUX port to the DB-25 connector end of the cable supplied with the UPS, and then the UPS cable to the DB-9 connector of the UPS. Total RS-232-C cable length should be no more than ten meters maximum.

NOTE

Do *not* use a standard terminal cable to connect a UPS to the serial port. The pinouts are different.

Table 8-1 UPS Cable Pin-Outs

	UPS	MUX
	9 pins(M)	25 pins(M)
Receive	1	3
Transmit	2	2
Gnd	9	7

The computer should have one *dedicated* MUX port for UPS communication for each UPS configured. Additional UPS units must be connected to additional dedicated MUX ports.

Hewlett Packard supports only 25-pin MUX ports for UPS operation. The modem port on the MFIO (Console LAN pca), RJ45, 3-pin RS-232 and 5-pin RS-422 MUX ports are not supported for UPS operation.

For each UPS on the system, you are connecting the supplied RS-232-C cable from the UPS to a port on a Modem Distribution Panel (MDP). The computer console must be configured to **port 0**. You can connect the UPS to **port 1** on the MDP.

Software Considerations

Be sure that you have loaded the PowerTrust UPS fileset, UPS-T00LS. You can do this using the `swinstall` command. Consult the *HP OpenView Software Distributor Administrator's Guide* for procedures on loading filesets.

Note, since the connections to the UPS are through power cords and MUX ports, `ioscan` will not explicitly display a UPS in its configuration; only the MUX port is displayed.

Selecting Drivers for a UPS

Uninterruptible power systems use a serial interface and multiplexer drivers. Table 8-2 shows the interfaces, device drivers, and device special files used for each supported architecture.

Table 8-2 **UPS Configuration Requirements**

Architecture	Interface Card	Driver	Default Device Special Files
Series 800 HP-PB ^a	40299B J2092A J2093A J2094A J2096A A1703-60022	mux2 ^b	/dev/mux# /dev/tty#p# ^c

- a. HP-UX supports the following HP PowerTrust UPS models: A2941A, A2994A, A2996A, A2997A, A2998A. The following third-party UPS models can be used with HP computers, but do not provide the software capabilities of HP PowerTrust models: APPCC-600UX, APPCC-1250UX, DELT-2326/C2, DELT-2336/C2. Not all supported models are appropriate for all computer systems.
- b. Specifying mux2 causes sio, pfail, and pa to be included in the kernel.
- c. tty#p# derives from ioscan output: The numeral after tty is the card instance for the tty class of interface card to which the device is attached; the numeral after p is the port number of the serial interface.

Configuring a PowerTrust UPS

The simplest way to configure a uninterruptible power system is to use SAM (/usr/sbin/sam). If SAM is not loaded on your system or if you prefer to use the command-line interface, the following procedure will guide you through the task. Familiarize yourself with the instructions before getting started.

1. Examine Table 8-2 to identify the driver and interface card associated with the specific platform to which you are configuring the UPS. Under virtually all circumstances, the interface driver used by the UPS is already present in the kernel.
2. Invoke `ioscan` for the `tty` class to display the hardware path, driver, and device special file(s) available for the UPS. Your output might resemble the following:

```
/usr/sbin/ioscan -fun -C tty
```

Class	I	H/W Path	Driver	S/W State	H/W Type	Description
tty	0	56.0	mux4	CLAIMED	INTERFACE	
		/dev/tty0p0		/dev/tty0p1		

In this (simplified) example from a Model 887, the multiplexer card is installed in slot 14 (H/W Path divided by 4) and bound with the `mux4` device driver. Device special files `/dev/tty0p0` and `/dev/tty0p1` are available. If an MDP or DDP is installed at the MUX port, `ioscan` will show device special files for all the ports available.

As shipped, the console is configured to be plugged in at port 0. The `/dev/console` file is equivalent to `/dev/tty0p0`. Thus, in this example, Port 1 (represented by `/dev/tty0p1`) can be used for the UPS.

3. Edit the `/etc/inittab` file to activate the UPS monitoring daemon when the system boots up. To do so,
 - a. Remove the comment sign (`#`) from the UPS entry. Be sure the `ups` entry appears *after* the `/sbin/rc` entry, so that the `ups_mond` is started after the system logging daemon (`syslogd`). Note, the UPS is started with real-time priority so that it does not get "starved" on a busy system.
4. Edit the `/etc/ups_conf` file to customize the UPS configuration for your system. The `etc/ups_conf` file informs the monitoring daemon (`/usr/sbin/ups_mond`) which ports to monitor and how to react to UPS status. The *ups_conf(4)* manpage documents the required format and available options. Also, read carefully the guidelines for setting shutdown options just ahead.

```
ups :respawn:rtprio 0 /usr/sbin/ups_mond -f /etc/ups_conf

#tty1:2:respawn:/usr/sbin/getty -h tty0p1 9600

shutdown_delay_mins:1
shutdown_timeout_mins:5
upstty:/dev/tty0p1
upstty:/dev/tty0p2:MSG_ONLY
```

Configuring a PowerTrust UPS

- a. To ensure that the UPS operates appropriately to your system, review carefully the guidelines listed below concerning how to set `shutdown_delay_mins` and `shutdown_timeout_mins` in the `/etc/ups_conf` file:
 - `shutdown_delay_mins` (one minute, by default) is the number of minutes after loss of AC power is detected before HP-UX invokes `shutdown -h`. Increase this value if the site commonly experiences momentary power interruptions greater than one minute for which recovery of power is expected.
 - On a large system, do not set the `shutdown_delay_mins` to a value larger than *nine* minutes. HP guarantees the UPS to provide output power for up to fifteen minutes. Large systems may take as long as five minutes to complete shutdown plus one minute for the shutdown grace period. Thus, to ensure that the UPS provides power for the entire operation, figure maximum `shutdown_delay_mins` as fifteen minus six, or a difference of nine minutes.
 - `shutdown_timeout_mins` (five minutes, by default) is the number of minutes `shutdown -h` is expected to take. UPS terminates power supply one minute after this value elapses. If shutdown does not complete in the time specified, the UPS monitor initiates a `reboot -h` to halt the system.
 - Increase `shutdown_timeout_mins` if shutdown takes longer than five minutes, including the one minute grace period.
 - Decrease `shutdown_timeout_mins` if shutdown takes less than five minutes. Small systems can take advantage of this.

CAUTION

You *must wait* the full duration of `shutdown_timeout_mins` before cycling power to the SPU, regardless of whether AC power has been restored. Once activated, the UPS will turn off after that period of time.

- b. If you are configuring more than one UPS, list their device special files on separate lines in priority order. Make sure the most important UPS (that is, for the SPUs) is the first one listed.
 - c. If a UPS governs peripheral devices and external bus extenders, it should be configured to send and log messages, but not to initiate a system shutdown. To use this option, set `upstty` for that UPS to `MSG_ONLY`. (If you are using SAM, `MSG_ONLY` is referred to as noncritical operation.)
 - d. Print a copy of your `/etc/ups_conf` file so that you can refer to it when cabling the UPS hardware. You will want to verify that the device special file associated with `upstty` matches that used by the UPS. For example, `upstty:/dev/ttyop1` specifies that the UPS is plugged into the second port (p1) of an RS-232 MDP connected to an interface card at card instance 0.
5. Bring the system down to a halt (`shutdown -h`), then turn power off. Install the UPS hardware, following instructions provided in the hardware documentation. Also see the cabling information provided in “Cabling Guidelines”, earlier in this chapter.
 6. Power up the peripherals, PowerTrust, then SPU. On rebooting, HP-UX will configure all connected components. Everything connected to the UPS will be protected against sudden power failure.

Configuring UPS to Cycle Power During Non-Work Hours

In work environments where energy savings is crucial, you can use your UPS to cycle power on and off according to a specified schedule. You can set this up with two commands: Instruct `cron` to implement the `power_onoff` command, unattended, as part of a routine schedule. Consult the *cron*(1M) and *power_onoff*(1M) manpages for information on using this feature.

The following procedure causes the system to shut down at 5:30pm and start up at 7:30am each weekday. Saturday and Sunday, the system remains powered off.

1. Create a crontab file containing the following entries. The first entry applies to Monday through Thursday and the second entry applies to Friday.

```
30 17 * * 1-4 power_onoff 7:30 tomorrow
30 17 * * 5 power_onoff 7:30 Monday
```

This tells `cron` to execute `power_onoff` at 5:30pm Monday through Friday. `power_onoff` executes `shutdown -h 60` immediately. The arguments to `power_onoff` tell `ups_mond` when to cycle power back on.

You can specify an increment to `power_onoff` of up to four days (99.9 hours) in advance.

2. Once running, `ups_mond` logs status messages using `syslogd`, the system logging daemon. You can configure `syslogd` to redirect these messages where appropriate. Refer to the *syslogd*(1M) manpage for details.

For example, you can add these lines to `/etc/syslog.conf`:

```
# Log/report messages from the ups_mond

daemon.info      /usr/adm/daemon_log
daemon.err       /usr/adm/daemon_log
daemon.emerg     /dev/console
daemon.emerg     hostname

# Log messages from power_onoff

user.err         /usr/adm/user_log
```

Once these lines are added to `/etc/syslog.conf`, `syslogd` must be set to accept the changes. Execute `kill -HUP `cat /etc/syslog.pid`` and restart `ups_mond`.

3. Verify that HP-UX has been properly configured for the PowerTrust UPS as follows:

- Check to make sure the UPS monitor daemon, `ups_mond` is running, by executing `ps -ef | grep ups`. This process is started at bootup by `/etc/inittab` and can be manually started by executing `/usr/lbin/ups_mond -f /etc/ups_conf`.
- Make sure that the UPS messages are displayed on the console.
- Check for UPS messages in `/usr/adm/syslog` or the files to which they are redirected.

Although the PowerTrust UPS is hardware, it displays in `iocan` output only as a terminal port. Its monitoring daemon, `ups_mond`, is a program that reads and writes through that port.

After Configuring the PowerTrust UPS

If adding any card or peripheral to a unit monitored by a UPS, you need to recalculate the voltage/amperage (VA) draw.

Regardless of how many PowerTrust UPS devices are installed, only one instance of the `ups_mond` daemon should be running at any time.

If you are running SupportWatch, you should include `/usr/adm/syslog` among those files it monitors, in addition to `/usr/bin/dmesg` and `/usr/adm/diag`.

A special circumstance should be noted for systems with external bus extenders covered by a PowerTrust UPS. If for any reason, a disk in an external bus extender loses power but the SPU to which it is configured does not, you must wait the length of time for `shutdown_timeout_mins` before cycling power to the SPU.

Troubleshooting the UPS

Error messages generated by the UPS are documented on the `ups_mond(1M)` manpage.

A EISA Board Configuration

Before you can make use of EISA and ISA I/O boards on Hewlett-Packard workstations, you must configure them using the `/sbin/eisa_config` program. `eisa_config` allocates resources (such as interrupt lines, memory, and DMA channels) to all the boards on the E/ISA backplane, by reading the boards' corresponding CFG files.

Depending on the type of board, you run `eisa_config` in one of two modes:

- **automatic mode**, which executes automatically each time you reboot the system. EISA boards can usually be configured automatically.
- **interactive mode**, which you can execute from the command line. ISA boards require that you run `eisa_config` in interactive mode.

This appendix covers

- A sample `eisa_config` session to add an E/ISA board.
- Procedures for moving and removing an E/ISA board, as well as changing choices for board functions.
- Troubleshooting E/ISA board configuration problems.

For further discussion of E/ISA specifications, see *eisa_config*(1M) in the *HP-UX Reference*. If you are configuring a custom driver or writing your own device driver, refer to *HP-UX Driver Development Guide* (part number 98577-90001) and *HP-UX Driver Development Reference* (part number 98577-90602).

E/ISA Boards and CFG Files

ISA boards have physical **switches** or **jumpers** for setting the board's characteristics. Set the switches and jumpers using documentation provided by the board manufacturer, and alter the settings if `eisa_config` reports conflict.

EISA boards lack physical switches or jumpers but instead use a configuration (CFG) file provided by the manufacturer to specify board resources.

The `eisa_config` program requires a CFG file for *every* ISA and EISA board, to allocate resources throughout the E/ISA bus. The CFG file enables `eisa_config` to assess all E/ISA resources, and in the case of an EISA board, configure it automatically. Although it cannot configure an ISA board automatically, `eisa_config` can report likely switch or jumper settings for conflict-free configuration. (Note, however, that some configurations are simply not possible, as when two boards from different manufacturers require the same resource. If this happens, only one of the boards can be used.)

Each board connected to the workstation on the E/ISA bus must have a CFG file present in the `/sbin/lib/eisa` directory. These files are read by `/sbin/bcheckrc` each time you reboot the system.

CFG files are named with the following syntax:

`rXXXnnnN.CFG`

where:

<code>r</code>	is either <code>!</code> or a hexadecimal digit.
<code>XXX</code>	abbreviates the board manufacturer's name.
<code>nnn</code>	represents the product ID.
<code>N</code>	represents the revision level.

The following example shows an excerpted EISA configuration file named `!HWP0C80.CFG`, which contains blocks of board-specific information, functions, and choices within the functions. The `eisa_config` program selects a choice for each function. If the first (default) choice conflicts with that of another board on the bus, `eisa_config` selects another choice, or suggests switch settings to resolve the conflict.

```
BOARD
  ID = "HWP0C80"
  NAME = "HP EISA SCSI host adapter 25525A"
  MFR = "Hewlett-Packard Co."
  ...
  IOCHECK = INVALID
  DISABLE = SUPPORTED
  COMMENTS = " This init file performs the following
    - Sets the ABRT to 1 in 0zc85.
    - Sets the RIEN to 0 in 0zc85.
  ...
  FUNCTION = "BOOT ROM ENABLE/RELOCATION"
  CHOICE = "ENABLED"
  LINK
    MEMORY = 32K
  ADDRESS = 0D8000h | 0C8000h | 0D0000h
  MEMTYPE = 0TH
  WRITABLE = NO
```

```
        . . .
        INIT = IOPORT(6)LOC(7-6) 00 | 10 | 01
CHOICE = "DISABLED"
FREE
        INIT = IOPORT(6)LOC(7-6) 11FUNCTION = "Host Adapter SCSI ID
Selection"
CHOICE = "SCSI ID = 7"
FREE
        INIT = IOPORT(7) 10000000
CHOICE = "SCSI ID = 6"
FREE
        INIT = IOPORT(7) 01000000
```

If the default function must be changed, refer to “Changing Choices for Board Functions” later in this appendix for selecting a board function.

/sbin/eisa_config writes its configuration to non-volatile memory (NVM) and to a system.sci file, which can be used to create identical configurations. For the procedure, see “Creating Identical E/ISA Configurations on Other Workstations”, later in this appendix.

Configuring the Software Required by the E/ISA Board

You install an E/ISA interface board much like installing any other board, by following the procedures detailed in Chapter 3, "Configuring Interface Cards."

However, several additional software elements need to be present for proper configuration:

- A CFG file must reside in the `/sbin/lib/eisa` directory for every EISA board.
- The `eisa` interface driver must be part of the kernel before you can run `eisa_config` for all (HP and other) E/ISA boards.

If you are configuring a board by a different manufacturer, the manufacturer must provide a device driver for the board, information for a CFG file, and any additional information required to create valid device files.

In addition to the `eisa` driver, the interface driver used by the specific card (such as SCSI, HP-IB, or LAN) must also be part of the kernel. If you are connecting a peripheral device (such as a printer or tape drive) to the card, the peripheral's device driver must be part of the kernel. The interface and device drivers can be added at the same time, thus enabling you to regenerate the kernel and reboot your system only once.

In the simplest case, when you reboot, `eisa_config` runs and automatically configures your E/ISA cards, based on the switch settings or information it finds in the CFG files.

In more complex cases, `eisa_config` runs and discovers configuration conflicts, requiring you to set switches and jumpers on the board, or to run the command in interactive mode to resolve the conflicts. (See sections further in this chapter and `eisa_config(1M)` in the *HP-UX Reference*, and the on-line help within the `eisa_config` program.)

Configuring E/ISA Boards Using Interactive Mode

You might need to run `eisa_config` interactively for the following reasons:

- You need to add, remove, or move an ISA board, which do not have readable ID registers and thus are not automatically recognized by `eisa_config`.
- `eisa_config` exited from automatic mode with an error message requiring you to change the choice for a function. See “Changing Choices for Board Functions” shortly.
- You want to change the choice that `eisa_config` automatically selected for a function.
- `eisa_config` exited from automatic mode with an error message requiring you to add a board interactively.
- You might want to view your E/ISA configuration for planning purposes.

NOTE	Always run <code>eisa_config</code> interactively <i>before</i> physically changing the configuration.
-------------	--

Sample Interactive Session to Add an E/ISA Card

Starting eisa_config

Invoke eisa_config, which begins by displaying the current board configuration.

/sbin/eisa_config

HP-UX E/ISA CONFIGURATION UTILITY

Type q or quit to leave eisa_config.
Type ? or help for help on eisa_config commands.

Slot	CFG File	Contents
0	!HWPC010	HP Series 700 EISA System Board
1	!XYZ1401	XYZ SCSI Controller
2		** EMPTY **
3	!XYZ1702	XYZ Centronics Interface
4		** EMPTY **

On-Line Help

Note that eisa_config has self-explanatory on-line help. Type ? or help at an EISA prompt and read the entries to acquaint yourself with the program.

Displaying CFG Files

Type the `cfgfiles` command to display the CFG files currently in the `/sbin/lib/eisa` directory. The `cfgtypes` command lists and explains each board type. For example, `NET` is a network board.

EISA: **cfgfiles**

Filename	Board Type	Board Name
!HWPC010	SYS	HP Series 700 EISA System Board
!XYZ1401	MSD	XYZ SCSI Controller
!XYZ1702	PAR	XYZ Centronics Interface
!XYZ1802	NET	XYZ Networking Board
!XYZ2276	VID	XYZ Video Board

Adding a Board

Make sure the CFG file is present in the /sbin/lib/eisa directory. If it is absent, check the documentation supplied with the card. (CFG files are required for EISA cards, but advisory only for ISA cards.)

Type a `show slot` command to see in which slots the !XYZ1802 board can be installed. Then type the `add` command to add the board to slot 2. `eisa_config` displays the new configuration.

```
EISA: show slot !XYZ1802
```

```
Valid slots for this board: 2 4
```

```
EISA: add !XYZ1802 2
```

```
Added board: XYZ Networking Board
Comments:    The XYZ Networking board is an IEEE 802.3 local area networking
              board for use with twisted-pair cabling.
```

Slot	CFG File	Contents
0	!HWPC010	HP Series 700 EISA System Board
1	!XYZ1401	XYZ SCSI Controller
2	!XYZ1802	XYZ Networking Board
3	!XYZ1702	XYZ Centronics Interface
4		** EMPTY **

You can use the `comment` command to display help or comments provided by the manufacturer about the board and its switches, the interface functions and choices.

Correcting a Mistake While Using `eisa_config`

If you have made changes in the configuration that you want to undo, you can return to the current session's initial configuration by using the `init` command.

Type the following command:

```
[init [system.sci ] ]
```

If you specify `system.sci`, `eisa_config` retrieves the configuration from that file; otherwise, it retrieves it from non-volatile memory (NVM).

Displaying Board Information

Type a `show` command to ask for information on the board in slot 2. `eisa_config` displays the board's basic attributes and indicates the currently selected choice for each function.

EISA: **show board 2**

XYZ Networking Board

CFG file: !XYZ1802.CFG

Slot 2

The XYZ Networking board is an IEEE 802.3 local area networking board for use with twisted-pair cabling.

Manufacturer XYZ Computer Corp.

ID XYZ1802

Board type NET (Network Board)

Board slot type ISA 8 Bit

Readable ID No

Skirt No

Length 330 millimeters

Function names and possible choices:

StarLAN 10 PC LAN Adapter

F1: I/O Base Address

CH1: 300h [** current **]

CH2: 340h

CH3: 240h

F2: Loopback Mode

CH1: Normal operation [** current **]

CH2: Test mode

F3: Interrupt Channel (IRQ)

CH1: 3

CH2: 4

CH3: 5 [** current **]

CH4: 7

Changing Choices for Board Functions

If `eisa_config` cannot automatically generate a new configuration with the choices currently selected, you can use the `change` command to specify an alternative choice for a particular function on a board. A board must *already* be part of the configuration before you can use the `change` command on it.

Use the `change` command cautiously, because it overrides any choice `eisa_config` might make, even to resolve a conflict.

To change a choice for a given function, issue the `change` command, specifying the slot number, function number (F#), and the new choice number (CH#), as shown by the `show board slot#` command.

EISA: **change slot# function# choice#**

After making all desired changes within `eisa_config`, exit the program, as explained in the next section.

Exiting eisa_config

Once you have changed the configuration, `eisa_config` prompts you to

- save the changes and exit,
- exit without saving changes, or
- abort the exit.

When you save the changes, `eisa_config` displays a list of subsequent steps.

EISA: quit

A description of the configuration was saved in `/var/adm/eisa/config.log`. If `eisa_config` was run per the instructions of a specific product installation manual, refer to that manual for specifics on device file creation and I/O drivers.

Step 4 may apply if other cards were affected.

Otherwise, the following is a list of generally required steps:

- (1) Make any necessary device files. If you have moved a board you may also need to make new device files.
- (2) Ensure that all appropriate software I/O drivers are present in the kernel.
- (3) Shut down the system with the `"/usr/sbin/shutdown -h"` command.
- (4) Once the system is shut down, turn the power off. Then set any physical switches and jumpers correctly. The switches and jumpers that have changed since `eisa_config` was invoked are listed below. The file `/var/adm/eisa/config.log` contains a summary of the new configuration, including required switch and jumper settings.
- (5) Physically add, move, or remove boards as needed.
- (6) Turn the power on and boot the system.

Displaying Switch and Jumper Settings

Once you exit, eisa_config displays the switch and jumper settings that have changed since the program was invoked. For example,

```
Slot 2
XYZ Networking Board
Switch Name: I/O Base Address
Switches 1 through 3 select the I/O Base Address,
switch 4 is not applicable.
NOTE: 'off' in the diagram below corresponds to 'OPEN' on board switches.
Default setting
    1  0  0  1
Required setting
    1  0  0  1
    +-x-+---+---+x-on
    |  |  |  |  |
    +---+x-+-x-+---+off
        1  2  3  4
```

Slot 2 XYZ Networking Board		Switch Name:	Loopback Mode
Default	Required	on off	
		+---+	
0	0	x	4
		+---+	
0	0	x	3
		+---+	
0	0	x	2
		+---+	
0	0	x	1
		+---+	

```
Exiting eisa_config.
$
```

Saving the Configuration and Exiting `eisa_config`

You can save the current configuration without exiting `eisa_config` by using the `save system.sci` command.

If the current configuration is not conflict-free, `eisa_config` notifies you and does not save the configuration.

By default, `save` records the new configuration in non-volatile memory (NVM). If you use `system.sci`, `save` does not record the new configuration in NVM, but instead, records it in the `system.sci` file. This file can be used to configure subsequent workstations. See “Creating Identical E/ISA Configurations on Other Workstations” later in this chapter.

When you quit `eisa_config`, it creates the `/etc/eisa/config.log` file, which contains information on all currently configured boards and their attributes.

Your next task will be to bring down the system, set the physical switches and jumpers to match the new `eisa_config` specifications, and reboot.

Setting Switches and Jumpers on an E/ISA Interface Board

When you exit `eisa_config` or use the `show switch changed` command, you see a graphical representation of the switch and jumper settings that have changed during the `eisa_config` session. The `/etc/eisa/config.log` file also contains all required switch and jumper settings for each board in your working configuration. To set the switch and jumper settings,

1. Print the `/etc/eisa/config.log` file as a record of all switch and jumper settings that have changed during the `eisa_config` session.
2. Warn all users that you will be shutting down the system to configure the E/ISA board. Then shut down the system and turn the power off.
3. Set the switches and jumpers to their required settings, as determined by `eisa_config`. If you are installing a new board, add it at this time. If you are installing a peripheral device with this board, connect the device.
4. Turn on all peripheral devices, *then* the SPU, and reboot the system.

When the system boots, the E/ISA board settings are written to non-volatile memory (NVM), making the boards fully accessible by HP-UX.

Moving an E/ISA Board

To move a currently configured E/ISA board,

1. Invoke `/sbin/eisa_config` and at the EISA: prompt, issue the move command, specifying the board's current and new slot numbers.

EISA: `move current_slot# new_slot#`

2. After moving all desired boards within `eisa_config`, exit the program.

`eisa_config` will display any switch and jumper settings that may have changed during the session. Refer to the `/etc/eisa/config.log` file for a record of the new configuration, including the required settings.

3. Remove the old device file for the board with the `rmsf` command.
4. Warn all users that the system will be brought down. Halt the system with the shutdown command and turn off the power.
5. Set any physical switches and jumpers according to `eisa_config` requirements. Refer to “Setting Switches and Jumpers on an E/ISA Interface Board”.
6. Physically move the boards.
7. Turn the power on and reboot the system. As the system boots, the new configuration is written to NVM and `/etc/eisa/system.sci`.

If the devices attached to the board use drivers known to `insf` (for example, SCSI devices), `insf` creates device special files for them at their new location. If the driver is not known to `insf` (for example, if you are installing a custom board), use `mknod` to create any required device special files. Consult the documentation accompanying the board and/or device for guidance.

NOTE

If you are moving a network board, you need to boot the computer a second time. Use `shutdown -r`.

Removing an E/ISA Board

To remove a currently configured E/ISA board,

1. Invoke `/sbin/eisa_config` and at the EISA: prompt, issue the `remove` command, specifying the slot number from which you are removing a board.

EISA: **remove** *slot#*

2. After removing all boards desired within `eisa_config`, exit the program.
3. Remove the old device file for the board with the `rmsf` command.
4. Warn all users that the system will be brought down. Halt the system with the `shutdown` command and turn off the power.
5. Physically remove the boards.
6. Turn the power on and reboot the system. As the system boots, the new configuration is recorded in NVM.

Creating Identical E/ISA Configurations on Other Workstations

If you have several workstations with identical E/ISA boards, you can streamline the configuration task as follows:

1. Invoke `/sbin/eisa_config` on the first system and configure the E/ISA boards to your satisfaction.
2. Save the configuration in a `system.sci` file instead of to NVM.

```
EISA: save system.sci
```

3. Complete the configuration task for the first workstation, by exiting `eisa_config`, making any necessary physical changes to the boards, and rebooting the system.
4. When you are ready to configure other workstations, copy the `CFG` and `system.sci` files from the first workstation to those systems. (Note, if the workstations share a file system, you might not need to copy the files at all.)
5. On each of the other workstations, invoke `eisa_config` using the `-n` option, which initializes the E/ISA configuration from `system.sci`.

```
eisa_config -n system.sci
```

6. Save the new E/ISA configuration using the `save` command.

By default, `eisa_config` records the configuration in the NVM and to `/etc/eisa/system.sci`. Optionally, if you specify a file (for example, `tmp.sci`) as an argument to the `save` command, `eisa_config` records the configuration to the specified file.

```
EISA: save [tmp.sci]
```

```
Successfully saved configuration in tmp.sci.
```

You can copy the `tmp.sci` file to the systems for which you are duplicating the original configuration. Then, from `eisa_config` on the new system, use the `init` command to write the configuration to NVM and `/etc/eisa/system.sci` of the new system.

7. Complete the configuration task by exiting `eisa_config`, making any necessary physical changes to the boards, and rebooting the system.

Troubleshooting E/ISA Board Configuration

Begin by reading the system messages displayed by the `dmesg` command. Then consult this section and “E/ISA Board Power-Up Messages” shortly for possible causes and recommended actions.

Verifying the Syntax of a CFG File

If an E/ISA board is not configuring properly, check the CFG file syntax, using the `-c` option.

Note, the `eisa_config -c` option is useful *only* for diagnosing errors in a particular CFG file, *not* for changing the configuration.

```
# eisa_config -c HWPC051
```

```
Checking this CFG File for correctness:  
/sbin/lib/eisa/HWPC051.CFG
```

```
Successful syntax verification
```

Board Stops Working or No Non-Volatile Memory (NVM) Driver

If a board that was working suddenly stops working or the system reports that the NVM driver cannot be used, the kernel might have been altered and now lacks the required device drivers. If so, you will need to relink the E/ISA board drivers to the kernel.

See “Configuring the Software Required by the E/ISA Board” or board documentation supplied by the manufacturer.

Added or Moved Board Does Not Work

If you added or moved an E/ISA board that is not working, check the following:

1. If you added the board using automatic mode, check `/etc/eisa/config.err` for error messages.
2. Did you add the required drivers to the HP-UX kernel? If not, see “Configuring the Software Required by the E/ISA Board”.
3. If you added the board interactively, did you save the new configuration before exiting `eisa_config`? If not, run `eisa_config` again, add the board again, and then save the configuration. See "Saving the Configuration and Exiting `eisa_config`."
4. Did you change any switch and jumper settings to match the settings specified in `/etc/eisa/config.log`? If so, verify that you did so accurately.
5. Did you reboot the system after changing the configuration interactively? If not, reboot the system, taking care to warn users first.
6. Did you create the necessary device special files correctly? For HP-supplied boards, `insf` will have created the necessary device special files for any attached devices on rebooting. For boards supplied by a different manufacturer, refer to the documentation shipped with your board. If the driver is not known to `insf`, use `mknod` to create any required device special files.

Board Configuration Conflicts

E/ISA boards use four types of resources: interrupt lines, DMA channels, register addresses, and memory. If the automatic mode of `eisa_config` cannot configure a board due to resource conflicts, you may still be able to use `eisa_config` interactively to add a board that had a conflict or to change choices for a new board. Refer to “Changing Choices for Board Functions”.

If your desired board configuration still causes conflicts, you may not be able to use certain boards together. Some configurations are simply not possible; for example, two boards from different manufacturers may both require the same resource. If this happens, only one of the boards can be used.

Two CFG Files Have the Same Name

If you want to load a CFG file into the `/sbin/lib/eisa` directory that has the same name as a file already in that directory, follow these steps:

1. Load the new CFG file from media into a temporary directory.
2. Rename the CFG file, using the same syntax as described in “E/ISA Boards and CFG Files”, at the beginning of this appendix. In the temporary directory, type the following command:

```
mv oldname newname
```

3. Move the renamed CFG file to the `/sbin/lib/eisa` directory. Type the following command:

```
mv -i newname /sbin/lib/eisa
```

Boards that have duplicate CFG file names must be added using `eisa_config` interactively (see “Configuring E/ISA Boards Using Interactive Mode”) earlier.

E/ISA Board Power-Up Messages

This section contains a listing of E/ISA board power up messages, their potential cause, and action you can take to correct the problem.

Several messages displayed are informational only. They indicate that configuration completed successfully.

Message:	No EEPROM Data -> EISA Card ID: <i>eisa_id</i>
Cause:	An EISA card identified itself, but non-volatile memory (NVM) has no configuration data for the slot.
Action:	Run <i>eisa_config</i> to update NVM.
Message:	Cannot read EISA card ID
Cause:	NVM recognizes that the card exists, but cannot read its ID.
Action:	If a card is present, there is a hardware problem. Replace the card. If a card is not present, ignore the message.
Message:	Board ID: <i>eisa_id</i> inconsistent with NVM ID: <i>eisa_id</i>
Cause:	The ID read from the card does not match the card ID information stored in NVM.
Action:	If board has been moved, run <i>eisa_config</i> in automatic mode. If this message persists after running <i>eisa_config</i> and updating NVM, replace the board. If board has been removed, ignore the message.
Message:	Bad eeprom data for board <i>eisa_id</i>
Cause:	An attempt to read the NVM configuration information failed. This represents a system problem.
Action:	Call your HP representative.
Message:	Error initializing board <i>eisa_id</i>
Cause:	An attempt to initialize the card with the stored NVM initialization data failed.
Action:	Check CFG file for inaccuracies. Suspect a hardware problem.
Message:	EISA Board ID: <i>eisa_id</i> ignored Board not present or driver not configured into kernel
Cause:	The ID displayed was obtained from NVM, not the card. Either an ISA card is present, but not its driver or the driver is present, but not the card. (Since ISA cards do not identify themselves, only the card's driver can verify its existence.)
Action:	Ensure the card is installed and verify that the driver is configured into the kernel.
Message:	EISA Board ID: <i>eisa_id</i> ignoredDriver not configured into kernel
Cause:	The system found the EISA card, but not its driver.

Action:	Verify that the driver is configured into the kernel.
Message:	EISA Board ID: <i>eisa_id</i> ignored, error initializing board
Cause:	A driver accepted this card, but failed to initialize it.
Action:	This is probably a defective card.
Message:	EISA: <i>eisa_last_attach</i> not called, bad driver in kernel
Cause:	If a driver does return correctly from its attach routine, this will panic the kernel. Assuming that the drivers installed are working, this message should never appear.
Action:	If you are using a non-HP card and driver, remove both the card and driver and try again. If error does not recur, the non-HP driver is bad. If the error recurs, call your HP representative.
Messages:	EISA WARNING: mapping in system board failed EISA WARNING: mapping in I/O map entries failed
Causes:	System encountered problems either in creating virtual-to-physical mappings of the EISA system board registers or in attempting to initialize a system board resource. If either of these messages appear while booting from EISA SCSI, the system will fail to boot. If booting from other than EISA SCSI, the EISA cards will not be recognized.
Action:	Call your HP representative.
Message:	<i>slot_num</i> Slot EISA Expander Initialized: <i>eisa_id</i>
Cause:	This informational message indicates that the bus adapter located between the EISA bus and the host system bus initialized properly. It also indicates how many slots the kernel is configured to recognize.
Action:	None.
Message:	EISA SLOT <i>slot_num</i>
Cause:	This informational message indicates which slot is currently being initialized. When successful, each driver displays its own initialization message. For example: EISA SLOT 1: <i>driver_specific_message</i>
Action:	None.
Message:	Successfully Initialized EISA Boot Device
Cause:	The system recognized a special case. If the system boots from EISA SCSI <i>before</i> EISA SCSI configuration information is stored in NVM, the processor-dependent code uses default configuration data that might conflict with other EISA cards in the system. To handle this, the system ignores all cards except the boot EISA SCSI during the first power-up and continues a limited boot. If <i>eisa_config</i> (run in <i>/sbin/bcheckrc</i>) can create a valid configuration, it records it in NVM and the <i>system.sci</i> file, and the system is automatically rebooted. If a valid configuration cannot be

created, `eisa_config` issues an error message, the system comes up with the other cards unusable. In this case, you can run `eisa_config` interactively to fix the configuration and to reboot manually.

Action: None.

Message: Skipping

Cause: Either the slot is empty, or NVM reports the slot is empty, or the slot has an ISA card but no EEPROM data, or the slot was skipped because of an already cited circumstance.

Action: None.

Message: EISA card id `eisa_id` in slot `slot_num` had fatal error

Cause: An EISA card asserted the IOCHK line indicating a fatal error. An expansion card might do this if there was a parity error on a memory card. (Not all cards assert IOCHK.)

Action: Replace the card.

Messages: EISA_WARNING: unable to allocate `eeeprom_geninfo`
EISA_WARNING: unable to allocate `eeeprom_slot_info` for slot 0
EISA_WARNING: unable to allocate `eeeprom_slot_info`
EISA_WARNING: unable to allocate: `func_data`
EISA_WARNING: unable to allocate `eeeprom_cfg_header`
EISA_WARNING: unable to allocate `eeeprom`
WARNING: unable to map `eeeprom` registers
EISA_WARNING: unable to map `eeeprom`

Cause: These warnings indicate system problems when attempting to allocate resources necessary for EISA initialization. If booting from an EISA device, the system will not boot up. If not booting from an EISA device, the system will boot up but EISA will not be initialized.

Action: Call your HP representative.

Message: EISA_WARNING: NVM checksum invalid, clearing `eeeprom`

Cause: A checksum failed when performed on NVM at power-up, causing the system to erase the contents of non-volatile memory. As EISA comes up, it will complain that NVM data is missing for cards that identify themselves. `eisa_config` running from `/etc/bcheckrc` will automatically generate data for and reconfigure the EISA cards that are present. You will need to reconfigure ISA cards, by running `eisa_config` interactively.

Action: Follow instructions in “Configuring E/ISA Boards Using Interactive Mode”.

B **Bus Architectures**

This Appendix contains a sampling of HP bus architecture diagrams. In some cases, ioscan output is provided to help you associate the hardware configuration and the software display.

Addressing on a typical multi-function (personality) card is also explained.

Series 700 Bus Architecture

Since its initial introduction, the Series 700 has grown enormously in breadth and configurability. The figures shown illustrate the Series 700 configured as a workstation, although Model 735 can be configured to support additional 735 or 755 workstations as a cluster server. The Model 770 features multiple GSC+ buses, for versatility and I/O efficiency.


Model 712

Figure B-1 shows the Model 712 bus diagram, which has capability for up to 2 graphics cards and 2 graphics monitors (which show up on iSCAN as 0 and 1). Core I/O descends from slot 2 off the system bus, and optional cards show up as slots 5 or 6. Optional cards include support for IBM TokenRing, LAN, X.25, serial, and telephony. A third-party card is also configurable for video and multimedia capabilities.

Sample Addresses

A parallel printer is likely to have a hardware address of 2/0/6.0. A disk might have an address of 2/0/1.5.0, if the SCSI address on the device itself were set to 5.

Figure B-1 **Model 712 Bus Relationships**

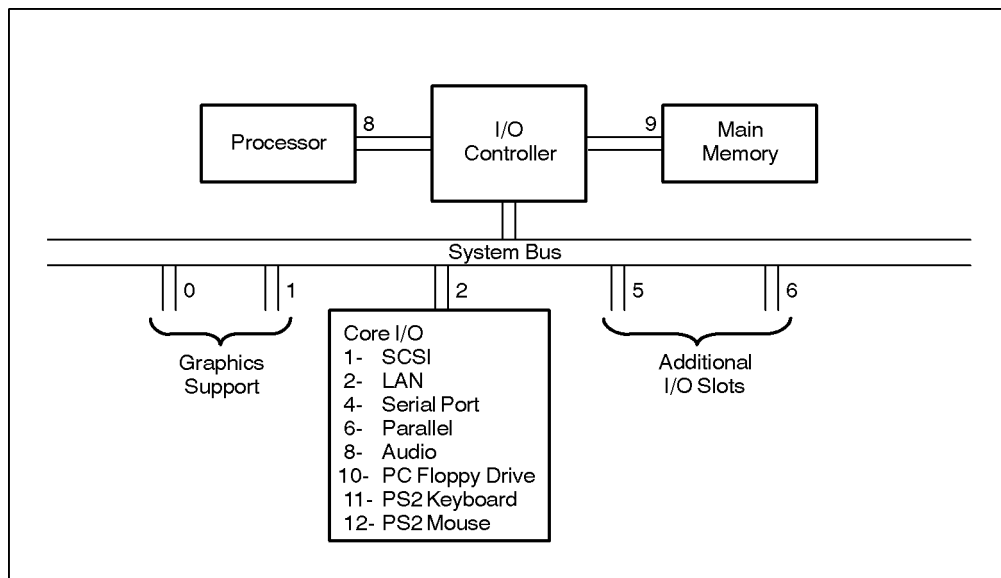

Model 725/100


Figure B-2 shows a sample layout for a Model 725/100, and the example that follows it shows its `ioscan -fn` output.

The 725 has capability for up to 4 graphics monitors. Core I/O descends from slot 2 off the system bus, and optionally at slot 5. E/ISA interface cards configure at slot 4, and additional I/O cards (such as multiple fast/wide SCSI interfaces and graphics accelerators) can be installed at slots which show up in `ioscan` as 10 and 11.

Sample Addresses

Audio capabilities are accessed through hardware address 2/0/8. Access to the FDDI network would be addressed through 2/0/9. If a Fast/Wide SCSI interface were plugged into slot 10 and a disk whose SCSI address is set to 6 were attached to that interface, the disk would be addressed through 10/0/0.6.

Figure B-2 Model 725/100 Bus Relationships

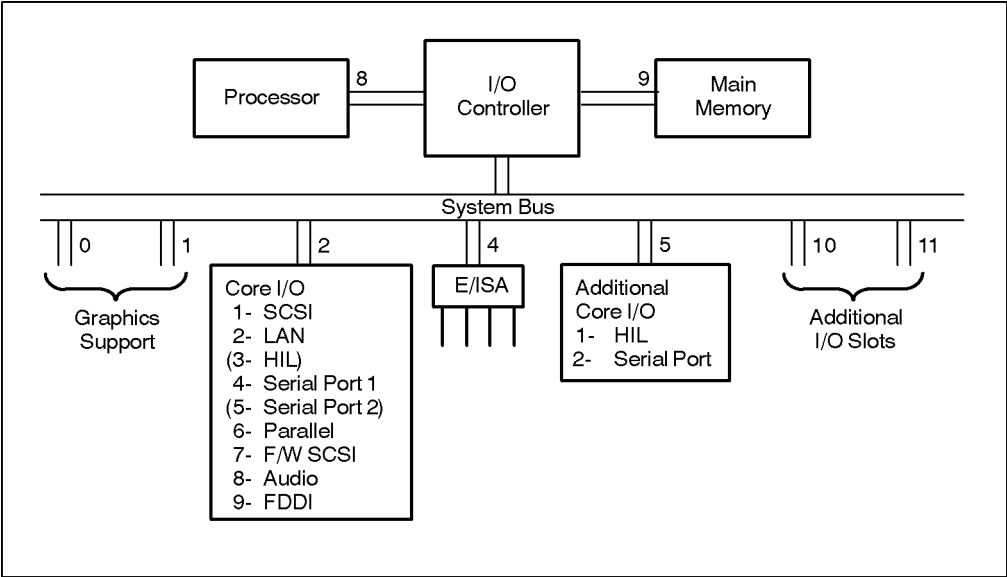


Class	I	H/W Path	Driver	S/W State	H/W Type	Description
=====						
bc	0		root	CLAIMED	BUS_NEXUS	
graphics	0	0	graph3	CLAIMED	INTERFACE	Graphics
ba	0	2	bus_adapter	CLAIMED	BUS_NEXUS	Core I/O Adapter
ext_bus	0	2/0.1	c700	CLAIMED	INTERFACE	Built-in SCSI
target	0	2/0.1.3	target	CLAIMED	DEVICE	
tape	0	2/0.1.3.0	stape	CLAIMED	DEVICE	HP HP35480A
			/dev/rmt/c0t3d0BEST		/dev/rmt/c0t3d0NOMODn	
			/dev/rmt/c0t3d0BESTb		/dev/rmt/c0t3d0NOMODnb	
			/dev/rmt/c0t3d0BESTn		/dev/rmt/c0t3d0NOMOD	
			/dev/rmt/c0t3d0BESTnb		/dev/rmt/c0t3d0NOMOD	
btarget	1	2/0.1.4	target	CLAIMED	DEVICE	
disk	0	2/0.1.4.0	sdisk	CLAIMED	DEVICE	HP 97560
			/dev/dsk/c0t4d0		/dev/rdisk/c0t4d0	
target	2	2/0.1.5	target	CLAIMED	DEVICE	
disk	1	2/0.1.5.0	sdisk	CLAIMED	DEVICE	SEAGATE ST3600N
			/dev/dsk/c0t5d0		/dev/rdisk/c0t5d0	
target	3	2/0.1.6	target	CLAIMED	DEVICE	
disk	2	2/0.1.6.0	sdisk	CLAIMED	DEVICE	SEAGATE ST3600N
			/dev/dsk/c0t6d0		/dev/rdisk/c0t6d0	
lan	0	2/0.2	lan2	CLAIMED	INTERFACE	Built-in LAN
			/dev/ether0		/dev/lan0	
hil	0	2/0.3	hil	CLAIMED	INTERFACE	Built-in HIL
			/dev/hil1		/dev/hil7	/dev/hil_0.6
			/dev/hil2		/dev/hil_0.1	/dev/hil_0.7
			/dev/hil3		/dev/hil_0.2	/dev/hilkbd
...						
tty	0	2/0.4	asio0	CLAIMED	INTERFACE	Built-in RS-232C
			/dev/diag/mux0		/dev/mux0	/dev/tty0p0
...						
ext_bus	1	2/0.6	CentIf	CLAIMED	INTERFACE	Centronics Interface
audio	0	2/0.8	audio	CLAIMED	INTERFACE	
			/dev/audioBA		/dev/audioEL_0	/dev/audioLL
			/dev/audioBA_0		/dev/audioEU	/dev/audioLL_0
...						
ba	1	4	eisa	CLAIMED	BUS_NEXUS	EISA Adapter
processor	0	62	processor	CLAIMED	PROCESSOR	Processor
memory	0	63	memory	CLAIMED	MEMORY	Memory

Model 770 (J Series)

The Model 770 features increased expandability on dual GSC buses. ioscan output for this system is found in several examples in Chapter 1, "Getting Started."

Figure B-3 Model 770 J Series Bus Relationships

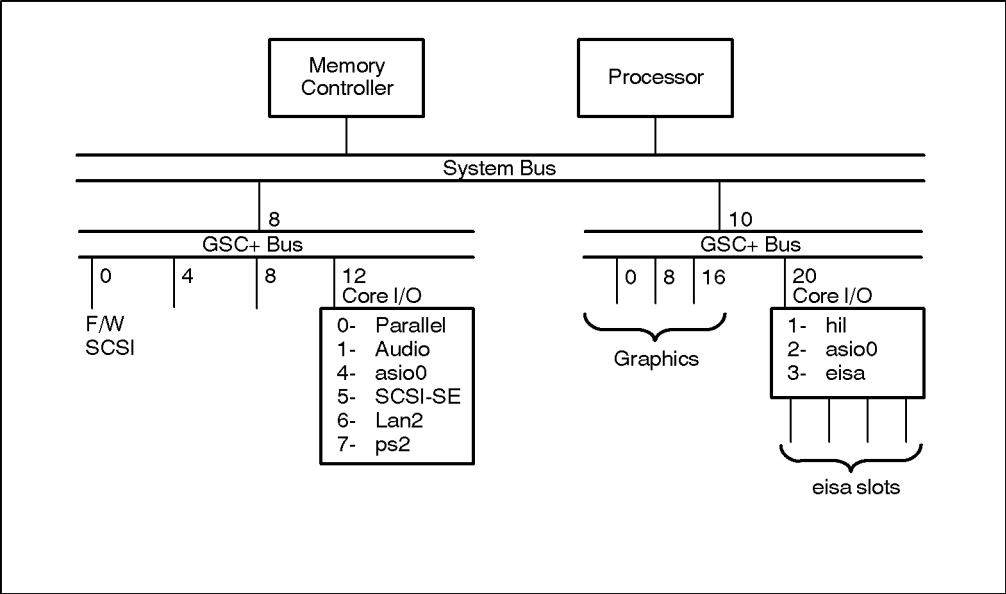


Series 800 Bus Architecture

Model E Systems

Model E computers report 806 when queried with `uname -a`. Slots 9 through 12 (addresses 56/36.x to 56/48.x) support HP-PB cards, as shown in Figure B-4.

Figure B-4 HP 9000 Model E Bus Relationships

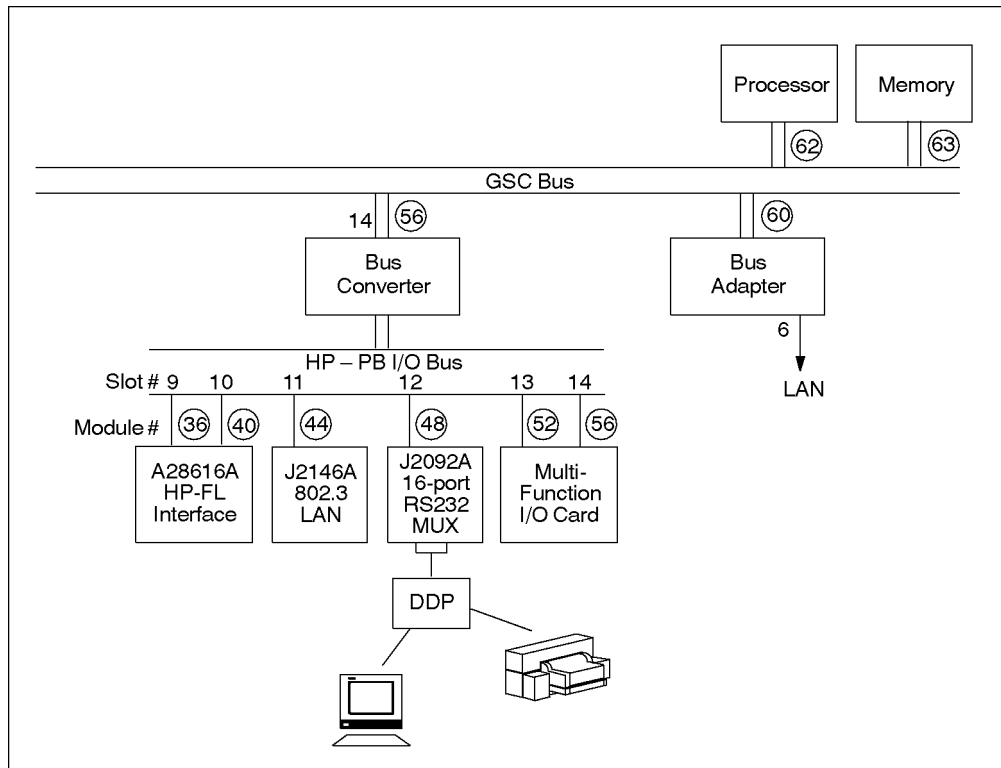

Addressing on Multi-Function Cards (Model E Example)

Slots 13 and 14 (addresses 56/52.x to 56/56.x) of Model E systems are reserved for one of two multi-function (personality) cards.

- MUX-based multi-function I/O card, containing single-ended SCSI, parallel port, and 8 or 16 RS-232-C ports for console, access port for remote console, and other serial devices.
- LAN-based multi-function I/O card containing 802.3 LAN, serial connection for PowerTrust UPS, and remote modem access port with security option to defeat inadvertent system resets (control-B MUX defeat switch).


Table B-1 shows the hardware addresses for a sample Model E multi-function card.

Figure B-5 shows how multiple functions on Model E map to the bus architecture. (Note, this figure shows a detail of Figure B-4.)

Table B-1 Hardware Addresses of Multi-Function I/O Cards

Slot Number	Hardware Path	Peripheral Device
13	56/52.SCSI_ID	SCSI device
13	56/53.0.device_address	Parallel printer
14	56/56.0	Console
14	56/56 port 7	Remote console
14	56/56 port 1	UPS PowerTrust
14	60.6	LAN

Figure B-5 Typical I/O Addressing for a MUX/SCSI Multi-Function Card

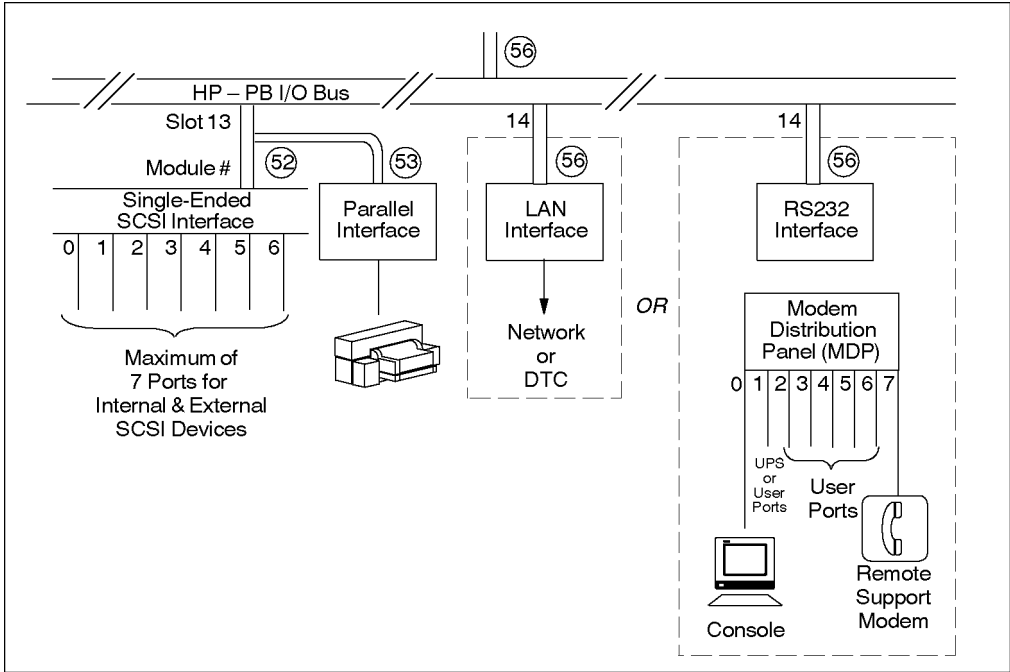

The following excerpted terse `iocscan` output shows only the entries for the interfaces represented by a sample multifunction card.

```
H/W Path      Class      Description
=====
...
56/52         ext_bus    HP 28655A - SCSI Interface
...
56/53         ext_bus    HP 28655A - Parallel Interface
56/56         tty        MUX
...
```

Models F/G/H/I and 8x7 Systems


All I/O occurs through the HP Precision Bus (HP-PB) on Models F/G/H/I and 8x7. Figure B-6 illustrates the bus relationships in simplified form, for addressing purposes. Two multi-function (personality) cards can be configured on HP-PB:

- LAN-based multi-function I/O card (standard) containing an 802.3 Thin LAN interface, two serial interfaces (RS-232-C console port via circular DIN connector and access port for remote console), and a single-ended SCSI interface.
- MUX-based multi-function I/O card (optional) containing 8 modem (or 8 modem and 8 direct-connect) RS-232-C ports, a single-ended SCSI interface, and a parallel port.

Sample Addresses

The three SCSI disks shown would have addresses of 52.6, 52.5, and 52.4. A 802.3 LAN card plugged into slot 4, has LAN access through address 16.1.

Figure B-6 Basic Addressing on Models F/G/H/I and 8x7 Systems

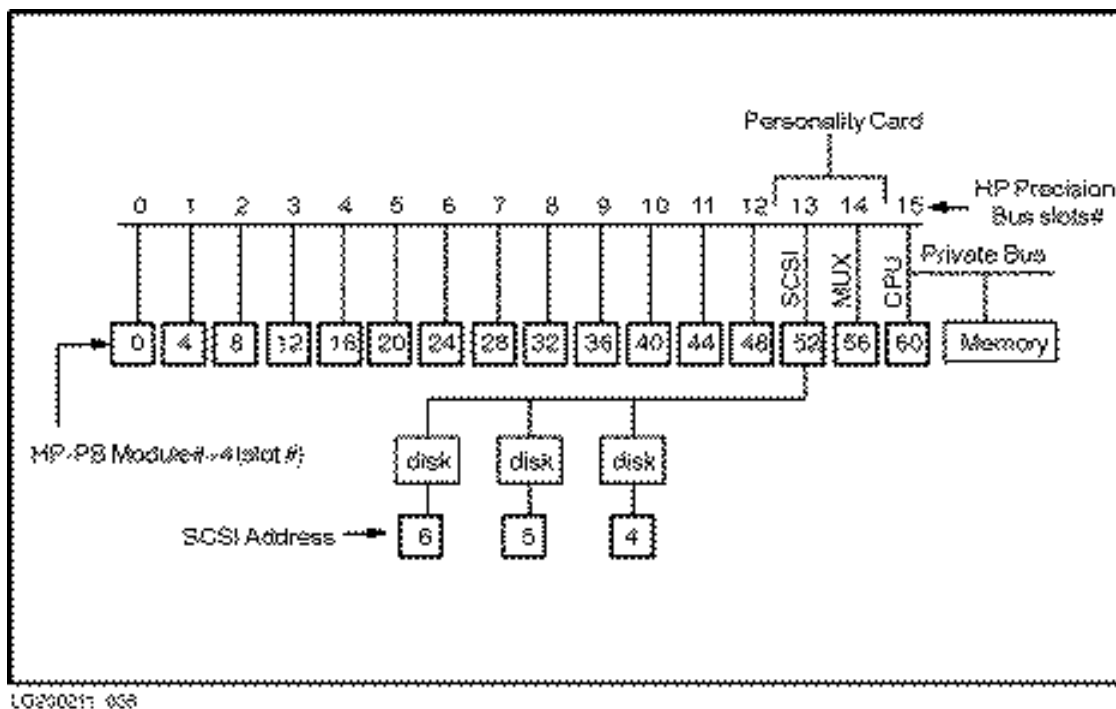


Models 890 and T500 Systems

Figure B-7 shows the configuration of a T500 system, a large system with enormous expandability; also included is excerpted ioscan output

Sample Addresses

The console is likely to have an address of 0/44.0. A disk array containing four disks might show several addresses (for example, 2/52.2.0, 2/52.3.0, 2/52.4.0, and 2/52.5.0) if attached to a SCSI card at slot 13 in an expansion cabinet (bus converter 2/) and configured in RAID Independent mode, which treats each spindle separately.

Figure B-7 HP 9000 T500 Configuration and Bus Relationships

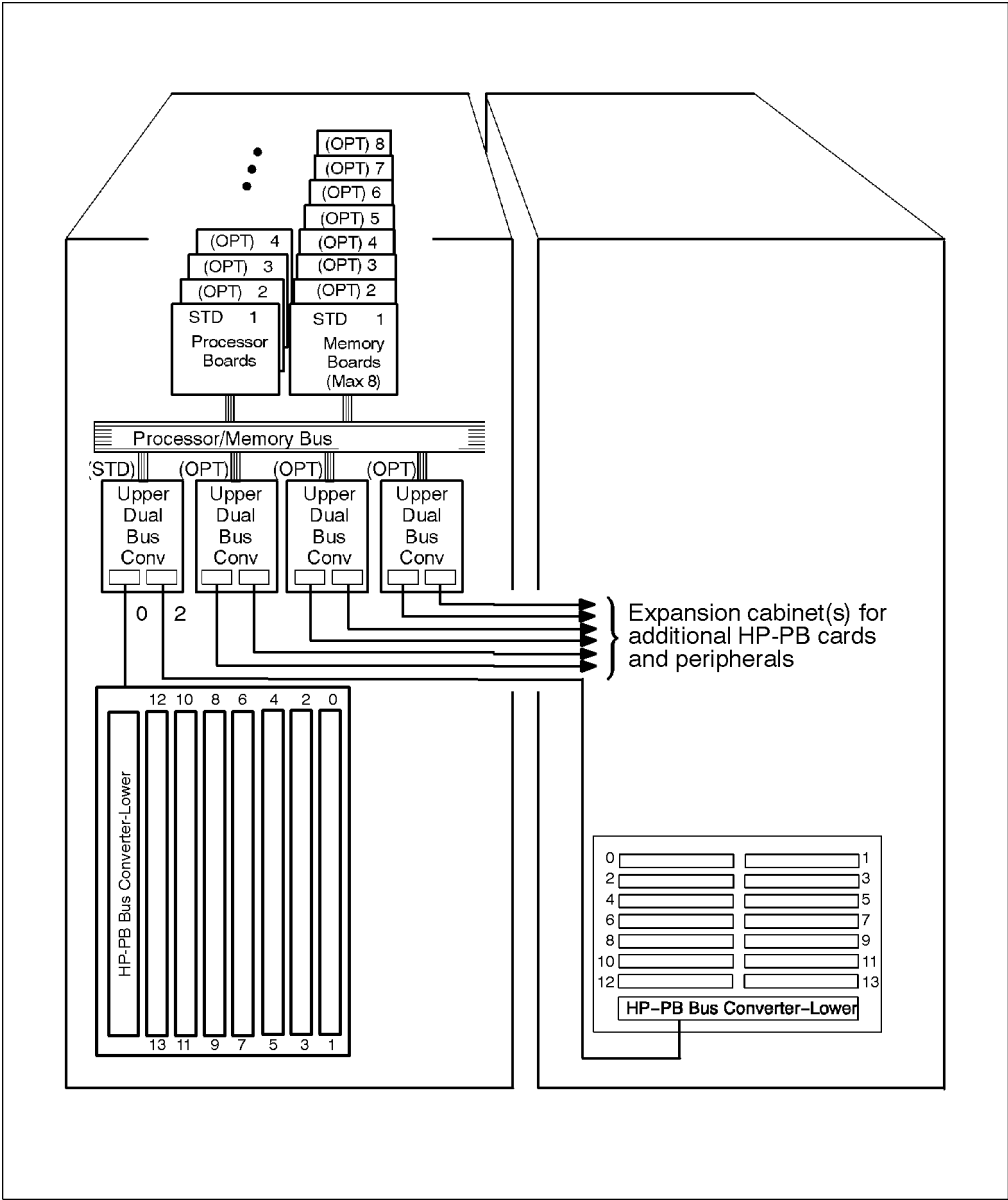


Class	I	H/W Path	Driver	S/W State	H/W Type	Description
=====						
bc	1	0	bc	CLAIMED	BUS_NEXUS	Bus Converter
tty	0	0/16	mux2	CLAIMED	INTERFACE	HP J2092A - 16 RS-232 MUX
ext_bus	2	0/28	scsi3	CLAIMED	INTERFACE	HP Fast/Wide SCSI Interface
disk	12	0/28.0.0	disc3	CLAIMED	DEVICE	HP C2430D - SCSI Disk
disk	13	0/28.1.0	disc3	CLAIMED	DEVICE	HP C2430D - SCSI Disk
ext_bus	3	0/36	hpfl1	CLAIMED	INTERFACE	HP 28615A - HP-FL Interface
disk	0	0/36.0.0	disc4	CLAIMED	DEVICE	HP-FL Disk
disk	1	0/36.1.0	disc4	CLAIMED	DEVICE	HP 2251 - HP-FL Disk
disk	2	0/36.1.1	disc4	CLAIMED	DEVICE	HP 2251 - HP-FL Disk
disk	3	0/36.1.4	disc4	CLAIMED	DEVICE	HP 2251 - HP-FL Disk
lanmux	0	0/44	lanmux0	CLAIMED	INTERFACE	LAN/Console
tty	2	0/44.0	mux4	CLAIMED	INTERFACE	
lan	0	0/44.1	lan3	CLAIMED	INTERFACE	
lantty	0	0/44.2	lantty0	CLAIMED	INTERFACE	
ext_bus	5	0/52	scsi1	CLAIMED	INTERFACE	HP 28655A - SCSI Interface
disk	14	0/52.0.0	disc3	CLAIMED	DEVICE	HP C1716C - SCSI Disk
disk	5	0/52.1.0	disc3	CLAIMED	DEVICE	HP C2247 - SCSI Disk
disk	6	0/52.2.0	disc3	CLAIMED	DEVICE	HP C2247 - SCSI Disk
disk	7	0/52.3.0	disc3	CLAIMED	DEVICE	TOSHIBA CD-ROM ...
tape	0	0/52.4.0	tape2	CLAIMED	DEVICE	SCSI Tape
disk	15	0/52.5.0	disc3	CLAIMED	DEVICE	HP C2247 - SCSI Disk
disk	16	0/52.6.0	disc3	CLAIMED	DEVICE	HP C2247 - SCSI Disk
ext_bus	8	0/53	lpr2	CLAIMED	INTERFACE	HP 28655A - Parallel
Interface						
bc	2	2	bc	CLAIMED	BUS_NEXUS	Bus Converter
lanmux	1	2/36	lanmux0	CLAIMED	INTERFACE	HP J2146A - 802.3 LAN
lan	1	2/36.1	lan3	CLAIMED	INTERFACE	
ext_bus	6	2/52	scsi3	CLAIMED	INTERFACE	HP Fast/Wide SCSI Interface
disk	19	2/52.2.0	disc3	CLAIMED	DEVICE	HP C2247WD - SCSI Disk
disk	20	2/52.3.0	disc3	CLAIMED	DEVICE	HP C2247WD - SCSI Disk
disk	21	2/52.4.0	disc3	CLAIMED	DEVICE	HP C2247WD - SCSI Disk
disk	22	2/52.5.0	disc3	CLAIMED	DEVICE	HP C2247WD - SCSI Disk
memory	0	16	memory	CLAIMED	MEMORY	Memory
console	0	18	boot_console	CLAIMED	BUS_NEXUS	Console
memory	1	24	memory	CLAIMED	MEMORY	Memory
memory	2	32	memory	CLAIMED	MEMORY	Memory
memory	3	36	memory	CLAIMED	MEMORY	Memory
processor	0	48	processor	CLAIMED	PROCESSOR	Processor
processor	1	49	processor	CLAIMED	PROCESSOR	Processor
processor	2	52	processor	CLAIMED	PROCESSOR	Processor
processor	3	53	processor	CLAIMED	PROCESSOR	Processor
processor	4	56	processor	CLAIMED	PROCESSOR	Processor
processor	5	57	processor	CLAIMED	PROCESSOR	Processor

Models 8x9 (K Series)

Models 8x9 share features in common with the Model 770 (J Series) — dual GSC+ buses and multiple graphics capability. In addition, the K Series systems also provide HP-PB buses. This allows for both WSIO and SIO functionality on the same computer.

Figure B-8 illustrates the bus relationships; also included is excerpted ioscan output.

Figure B-8 Model 8x9 K Series Bus Relationships

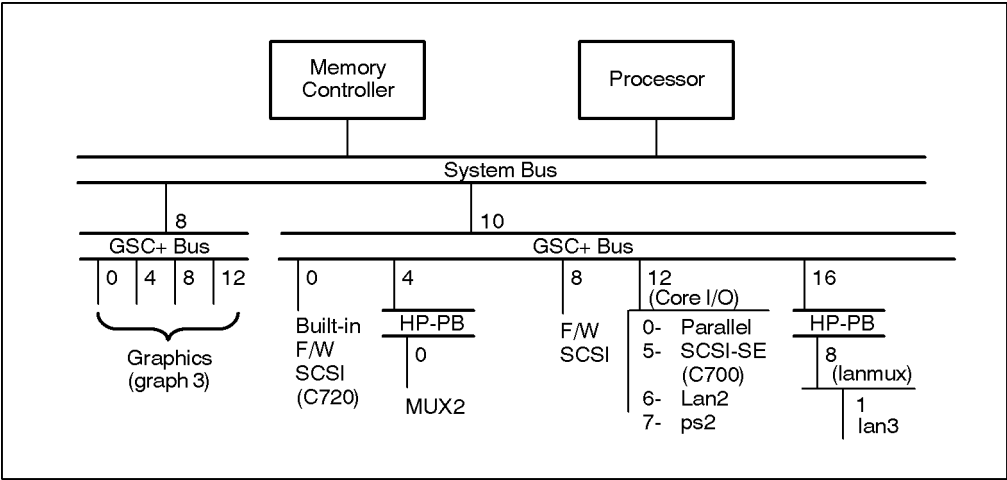

H/W Path	Class	Description
...		
8	bc	I/O Adapter
10	bc	I/O Adapter
10/0	ext_bus	GSC built-in Fast/Wide SCSI Interface
10/0.6	target	
10/0.6.0	disk	HP C2247WD
10/4	bc	Bus Converter
10/4/0	tty	MUX
10/8	ext_bus	GSC add-on Fast/Wide SCSI Interface
10/12	ba	Core I/O Adapter
10/12/0	ext_bus	Built-in Parallel Interface
10/12/5	ext_bus	Built-in SCSI
10/12/6	lan	Built-in LAN
10/12/7	ps2	Built-in Keyboard/Mouse
10/16	bc	Bus Converter
...		
32	processor	Processor
38	processor	Processor
49	memory	Memory

C Major and Minor Numbers

This appendix addresses special situations in which HP-UX does not configure a driver automatically or create the required device special files. For example, you might need to configure a custom driver for black-box or instrumentation applications.

If the proper code is present in the driver, `insf` can create device special files automatically and HP-UX can recognize the device, but you might still have to create a customized device special file for the instrument to work properly.

To configure HP-UX for non-standard device drivers or devices, you may need to:

1. Configure the custom driver into the kernel.
2. Create device special files for the device using either `mksf` or `mknod` commands.

Tables in this Appendix provide you with the information to construct a minor number for any HP device driver. You should also consult the manpages in Section 7 of the *HP-UX Reference* for the type of device driver you are configuring. For non-HP drivers, consult the documentation provided with the device.


Understanding how the Kernel Associates Drivers to Device

The kernel communicates with the hardware by associating the driver name with a hardware address. The kernel identifies the drivers it needs from the `/stand/system` file and finds them using the files in the `/usr/conf/master.d` directory.

All standard HP-UX interface and device drivers shipped are located in the library `/usr/conf/lib/libhp-ux.a`.

The kernel recognizes interface and device drivers (and by extension, peripheral devices) by major and minor numbers encoded into the device special files.

Figure C-1 **Device Special Files Contain Major and Minor Numbers**

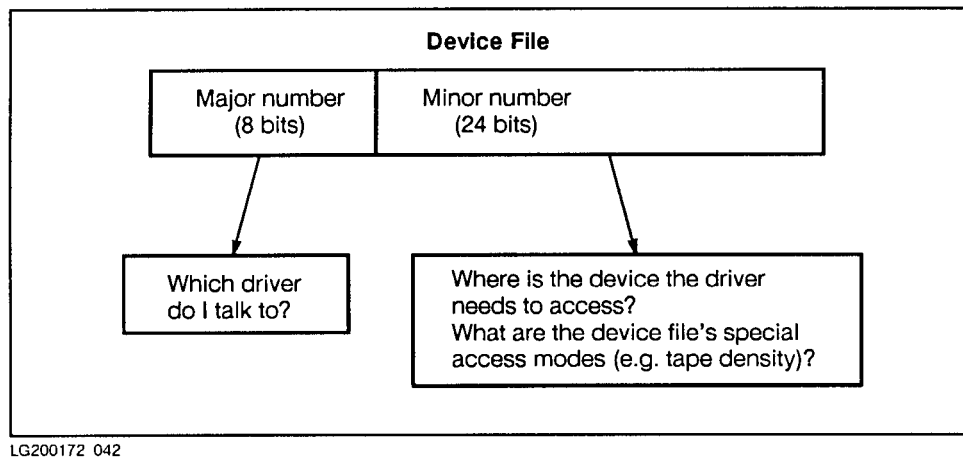

LG200172_042

Each device driver in the system is assigned a major number, which the kernel uses to locate the driver routine to service an I/O request.

The driver uses the minor number to locate the specific device and for information regarding how to handle data.

Major Numbers

The major number is an index for the device driver into one of two kernel tables — `bdevsw`, the block device switch table and `cdevsw`, the character device switch table.

Drivers that support both block and character I/O (such as SCSI disk driver and optical autochanger) have both a block major number and a character major number. Devices that support only character-mode access have only a character major number.

The `core-hpux` file in `/usr/conf/master.d` contains a `Driver install` table, which lists major numbers *for reference only*.

To identify valid major numbers for devices configured on your system, you can execute the `lsdev` command.

`lsdev` reads the driver headers and lists the drivers configured into the kernel with their block and character major numbers. If the driver is designed to use a dynamically assigned major number, `lsdev` displays the assigned major number.

Major numbers are displayed in decimal form. The `-1` designation in either character or block major number field of `lsdev` output can mean:

- The device might be a module that is not a driver.
- No driver is configured.
- Driver is not supported in that block or character mode.

Minor Numbers

Minor numbers represent two kinds of information: the location of the interface to which a device is attached and driver-dependent characteristics. This information is organized by specific bit assignments.

The tables later in this Appendix show the bit assignments for many HP-UX device drivers. You can also consult the device driver manpage in section 7 of the *HP-UX Reference*. For non-HP drivers, consult the documentation provided with the driver.

Understanding the Construction of Device Special Files


A long listing (`ls -l`) of a typical device special file might look like this:

```
crw- 2 bin  bin  193 0x010200 Jul 12 02:19 tty1p2
```

The two shaded fields are the major (193, decimal) and minor (0x010200, hexadecimal) numbers.

Both major and minor number are encoded into a numerical designation of the device driver, called the `dev_t` format. This is shown in Figure C-2. (Note, PA-RISC uses "Big-Endian" byte ordering; that is, the bit labelled 0 is the most significant (high-order) bit.)

Figure C-2 **Driver Number (`dev_t`) Format**

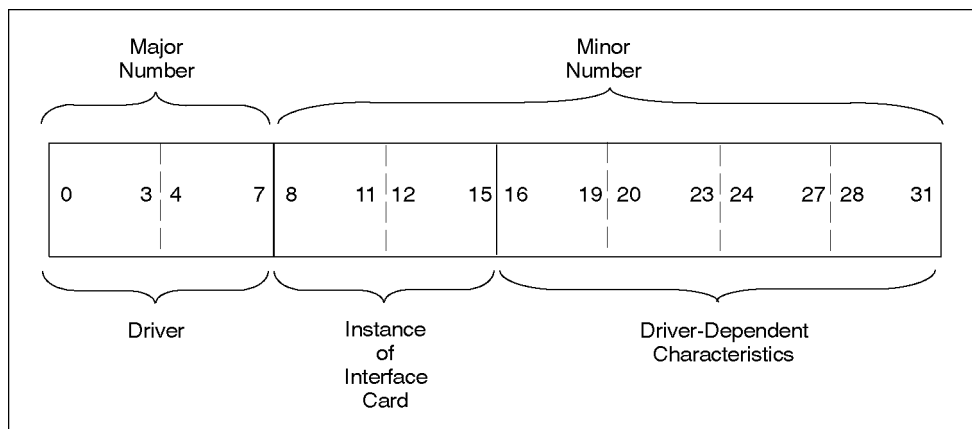

Bits 0 through 7 of an HP-UX device special file are used to encode the major number.

Bits 8 through 31 are used to encode the minor number. The hexadecimal notation for the minor number follows the format `0xNNNNNN`, in which each four bits (shown as N or "nibble") is represented by a hexadecimal digit (0 through F, in which 0 means no bits are set, F means all bits are set).

Bits 8 through 15 encode the card instance of the interface card, that is, the number representing the order that HP-UX encounters the specific class of the interface card when binding it into the system. This number is displayed (in decimal notation) in the `I` column of `ioscan` output.

Bits 16 through 31 encode driver-dependent characteristics, which are documented in Table C-2, Table C-3, Table C-4, and Table C-5. You can use these tables to construct custom minor numbers, when you require a driver to recognize or use specific or non-standard features of a device.

Table C-1 may be useful for translating bit assignments into hexadecimal digits.

Table C-1 Decimal, Binary, and Hexadecimal Equivalents

Decimal	Binary	Hex
0	0000	0
1	0001	1
2	0010	2
3	0011	3
4	0100	4
5	0101	5
6	0110	6
7	0111	7
8	1000	8
9	1001	9
10	1010	A
11	1011	B
12	1100	C
13	1101	D
14	1110	E
15	1111	F

Examples of Minor Number Creation

A Minor Number for a MUX Driver

The minor number 0x010200 shown earlier for the mux2 driver can be represented as follows:

bits	8-11	12-15	16-19	20-23	24-27	28-31
binary	0000	0001	0000	0010	0000	0000
hex (0x)	0	1	0	2	0	0

0000 0001 The eight bits of the card instance number is 1 (tty1 in the device special file name).

0000 0010 The port address is 2 (p2 in the device special file name).

0000 0000 The remaining bits are set to zero.

A Minor Number for a SCSI Disk Device

The minor number 0x023000 represents a SCSI disk device set with a SCSI address of 3, connected to a SCSI interface at card instance 2, and might be shown as follows:

bits	8-11	12-15	16-19	20-23	24-27	28-31
binary	0000	0010	0011	0000	0000	0000
hex (0x)	0	2	3	0	0	0

0000 0010 The eight bits of the card instance number is 2 (c2 in a device special file name).

0011 The SCSI address (target) set on the device is 3 (t3 in a device special file name).

0000 0000 0000 The remaining bits are set to zero. (d0 in a device special file name).

Adjusting Bits to Read a Floppy Disk

Media used by tape drives and floppy disk drives have different densities. There might be times when you need to read a floppy disk that was written on older technology.

For example, a Series 800 Model E computer has a built-in SCSI floppy disk drive whose typical minor number is 0x005000. However, when attempting to read a floppy disk originally created on a 2.88MB drive, you might want to create minor numbers 0x005004 and 0x005005. As shown in Table C-3, both minor numbers adjust bits in the range 28-31 to accommodate the 2.88MB drive, and allow you to try to read the diskette with or without a set geometry determined.

Minor Number Bit Assignments

The tables on the following pages show the bit assignments for bits 16 through 31 for the principal HP device drivers. In all cases, bits 8 through 15 (that is NN in hexadecimal 0xNN0000) encode the card instance of the interface card through which the device communicates.

Table C-2 Bit Assignments for Tape Devices

	bits 16-19	20-23	24-27	28-31
stape tape2	SCSI target	SCSI LUN	24 - BSD behavior at close 25 - No rewind 26 - Configuration method ^a 27-31 - Index/Density ^b	
tape1	HP-IB device	HP-IB unit	24 - BSD behavior at close 25 - No rewind 26 - Configuration method ^a 27-31 - Index/Density ^b	

- a. If 1, bits 27-31 mean Index. If 0, bits 27-31 mean Density.
 b. Index and Density are generated as needed by *mksf(1M)*.
 Density is encoded as a field in the minor number, using a constant of the form DEN_M_*, as defined in /usr/include/sys/mtio.h. Index refers to an index into the property table used to specify extended configuration options (using the mt_property_type data structure defined in /usr/include/sys/mtio.h.) For further discussion, see *mt(7)* in the *HP-UX Reference*.

Table C-3 Bit Assignments for Disk and agneto-Optical Devices

	bits 16-19	20-23	24-27	28-31
disc1	16 - Reserved (0) 17-19 - HP-IB address	CS80 unit	24 - Diagnostic access 25 - Cartridge tape 26-27 - Reserved	Section number (0=whole disk)
disc2	16 - Reserved 17-19 - HP-FL device	HP-FL unit (always 0)	24 - Diagnostic access 25-26 - Reserved	Section number
disc3	SCSI target	SCSI LUN	Reserved	Section number
disc4	SCSI target or HP-FL device	SCSI LUN or HP-FL unit (always 0)	Reserved	Section number
sdisk	SCSI target	SCSI LUN	Reserved	Disk partition number
sflop	SCSI target	SCSI LUN	Reserved	0=3.5in 1.44MB drive, geom determined (default) 1=3.5in 1.44MB drive, no geom determined (SoftPC) 2=3.5in 720KB drive, geom determined 3=3.5in 720KB drive, no geom determined 4=3.5in 2.88MB drive, geom determined 5=3.5in 2.88MB drive, no geom determined 6=not supported 7=not supported 8=5.25in 1.2MB drive, geom determined 8=5.25in 360KB drive, geom determined 9=5.25in 1.2MB drive, no geom determined 9=5.25in 360KB drive, no geom determined
schgr autox0	SCSI target	20-22 - SCSI LUN 23-31 - Surface		

Table C-4 Bit Assignments for Serial, Network, and Line Printer Devices

	bits 16-19	20-23	24-27	28-31
asio0	16-17 - Receive fifo trigger level 18-19 - Transmit fifo limit	Reserved	24 - Card diagnostic bit 25 - Reserved 26 - Reserved 27 - Hardware flow control enable	28 - Reserved 29 - Protocol 0=Bell, 1=CCITT 30-31 - Access mode 00=Direct 01=Dial-out modem 10=Dial-in modem
mux0 mux2 mux4	16-23 - Port number		24 - Card diagnostic bit 25 - Port diagnostic bit 26 - Reserved 27 - Hardware flow control enable	28 - Reserved 29 - Protocol 0=Bell, 1=CCITT 30-31 - Access mode 00=Direct 01=Dial-out modem 10=Dial-in modem
lan0 lan1 lan2 lan3	16-23 - Reserved		24 - Diagnostic access 25-30 - Reserved 31 - Protocol 1=IEEE, 2=Ethernet	
osi0	16-31 - Reserved			
CentIf	16-27 - Reserved			Handshake mode: 1=Automatic, using ACK, BUSY 2=Automatic, using BUSY only 3=Bidirectional read/write (for ScanJet) 4=Stream mode 5=Pulsed mode, using ACK, BUSY 6=Pulsed mode, using BUSY only
lpr0 lpr1 lpr2 lpr3	HP-IB device or SCSI target	HP-IB unit or SCSI LUN	24 - Diagnostic access 25 - Reserved 26 - Auto form feed 27 - Case fold	28 - Raw mode 29 - No wait 30 - Old paper-out behavior 31 - Eject page during paper-out recovery
hpib	HP-IB device	Unused	Unused	Unused

Table C-5 Bit Assignments for Miscellaneous Devices

	bits 16-19	20-23	24-27	28-31
sctl	SCSI target	SCSI LUN	Reserved	0=Select with ATN enabled (default) 1=Select with ATN controlled by scsi_cmd_parms ^a 2=Inhibit inquiry at open >2 - Not supported
instr0	16-20 - Instrument address 21-23 - Reserved		24 - Diagnostic access 25-31 - Reserved	
pty0 pty1	Bits 8-31 - Unique hex value for pty			
pdn0	Bits 16-23=2 (type)		24 - Diagnostic bit 25-31 - unused	
psi0 psi1	16-23 - Reserved		24 - diagnostic 25-31(psi0) - Reserved 25-31(psi1) - PDA Index	
graph3	16-23 - Bus specifier		Unused	0=Image planes 1=Overlay planes
ps2	b (hexadecimal) ^b	Reserved	Port number	28 - Autosearch 0=Off, 1=On. If 28 is On, 29 used as follows: 0=Mouse 1=Keyboard 30-31=0
audio	Instance Number	0=Read/write device 1=control only device	Output destination (Ignored if bits 28-31=0.) 0=Headphone, internal speaker, line out for Audio II 1=Headphone only 2=Int. speaker only 3=No output 4=Line output only (Audio II)	Output format (Ignored if bits 20-23=1) 0=No change 1=Mu-law 2=A-law 3=16-bit linear

a. See /usr/include/sys/scsi.h.

b. Corresponds to bits 1011, for the function number of the PS2 device.

Associating a Custom Driver with a Peripheral

If you are configuring HP peripherals and standard HP drivers, HP-UX configures the elements automatically, provided the drivers have been included in the kernel input file.

Consider, however, the scenario of having a peripheral device for which you need to use a custom driver. Perhaps you have received the driver on a tape, which you have loaded onto your system. If you want to associate a driver with only a specific hardware path, you must include the driver and the peripheral address in a "driver statement" of the /stand/system file. You must make sure the driver can be found by the kernel-build utility, and you must rebuild the kernel.

NOTE

You can use this technique to load any sio-style driver or wsio-style device driver. You *cannot* force-configure wsio-style interface drivers at a specific address using this technique. However, you can configure wsio-style interface drivers as long as the driver is included in the system file and no other interface driver in the /stand/system file can claim the card in question. For further information, refer to the *Driver Development Guide*.

1. Rebuild the kernel to include the added device driver, by following these steps:

- a. Change directory to the build environment (/stand/build). There, execute a system preparation script, system_prep. system_prep writes a system file based on your current kernel in the current directory. (That is, it creates /stand/build/system.) The -v provides verbose explanation as the script executes.

```
cd /stand/build
/usr/sbin/sysadm/system_prep -v -s system
```

- b. Edit the /stand/build/system file *in two places* to add the custom driver:

1. List the driver in the upper portion of the system file, with other similar drivers. For example, the following figure shows the upper portion of a system file with a custom SCSI driver, disco added.

```
*****
* Bus-Dependent subsystems
*****
* ccio = Cache Coherent I/O
ccio
*****
* SCSI drivers
*****
disco
sdisk
sflop
stape
...
```

2. Add a driver statement at the end of the file, if you intend to force-load the driver at only a certain hardware path.

The driver statement tells HP-UX to associate the driver at a specified hardware address and has the following format:

```
driver <hardware_path> <driver_name>
```

For example, a driver statement to associate a custom driver named `disco` with an interface card at address `2/0/7.6.0` on a Model 755 resembles this:

```
driver 2/0/7.6.0 disco
```

Note, although an HP-UX disk device driver (such as `sdisk`) may be present in the kernel, this driver statement instructs HP-UX to use `disco` for the disk at address `2/0/7.6.0`, *only*. HP-UX continues to use its standard disk device drivers for any other disks. If `disco` should replace *all* instances of `sdisk` in the kernel, you could simply remove `sdisk` from the system file and replace it with `disco`. You only need to add a driver statement if you want to force-configure the driver to a specific path(s).

- c. Create a small file in the `/usr/conf/master.d` directory to be cross-referenced by the `/stand/system` file entry when the kernel is rebuilt. The file can be given any name, but should have the following format (which resembles that of the `Driver_Install` portion of `/usr/conf/master.d/core-hpux`):

```
$Driver_Install
<driver_name> -1 -1
$$$
```

For example, here is a file for the `disco` driver.

```
$Driver_Install
disco -1 -1
$$$
```

- d. Verify that the driver you are installing has been built into a library that can be found by the `mk_kernel` utility.

If you have been provided this driver from a third-party company, their engineers are likely to have compiled the driver into a library which you will have loaded into `/usr/conf/lib` when you loaded their tape onto your system.

To examine an archive, run the `ar` command with the `-t` option, giving the library as an argument. Hopefully, you will see the file (such as `disco.o`, or whatever file name the driver is stored in) among the files included in the output from the command.

```
/usr/ccs/bin/ar -t /usr/conf/lib/libdisco.a
```

If you do not find the file, you will need to add the driver into a library in `/usr/conf/lib`. Do this with the `-r` option of the `ar` command. For example, to add `disco.o` to `/usr/conf/lib/libhp-ux.a`, execute the following:

```
/usr/ccs/bin/ar -r /usr/conf/lib/libhp-ux.a disco.o
```

Once you have verified that the `.o` file is present in a library accessible to `mk_kernel`, you are ready to build your kernel to include the new driver.

- e. Make sure you returned to the `/stand/build` directory. Build the kernel by invoking the `mk_kernel` command. This creates `/stand/build/vmunix_test`, a kernel ready for testing.

```
/usr/sbin/mk_kernel -s system
```

- f. Verify that everything built correctly by executing the `nm` command and grepping for the driver name. The command string should return at least one entry, such as that shown below.

```
/usr/ccs/bin/nm vmunix_test | grep disco
disco_install | 524264|extern|entry |$CODE$
```

- g. Save the old system file and kernel by moving them. Thus, if anything goes wrong, you still have a bootable kernel.

```
mv /stand/system /stand/system.prev
mv /stand/vmunix /stand/vmunix.prev
```

- h. Move the new system file and new kernel into place, ready to be used when you reboot the system.

```
mv /stand/build/system /stand/system
mv /stand/build/vmunix_test /stand/vmunix
```

2. Notify users that the system must be rebooted.
3. Shut down and halt the system using the `/usr/sbin/shutdown -h` command.
4. Turn off power to the SPU.
5. Install the peripheral device. Make sure the peripheral's hardware address is set to the hardware path specified in the driver statement of the `/stand/system` file.
6. Power up the peripheral device and *then* the SPU.

When the kernel reboots, you can verify that the custom driver was configured into the kernel by executing `/usr/sbin/iocscan -f`. You should see the driver associated with its intended device at the hardware path you specified in step 2.

For further information on driver statements and other customizations of the `/stand/system` file, consult the *config(1M)* manpage. The `config` program is used by `mk_kernel` when you build a kernel.

Under most circumstances, `insf` creates useful device special files when the system boots up. However, for some special circumstances, it may be necessary to create these files using `mknod`.

Creating Device Special Files using mknod

To create device special files for any driver other than those listed on the `insf` and `mksf` manpages, use `mknod`.

1. Change directory to `/dev`.
2. Determine the major number by invoking the `lsdev` command.
3. Construct a minor number for the device by using the bit assignments for the device driver. For HP devices, the bit assignments are found in tables earlier in this Appendix. For custom device drivers, consult documentation supplied with the driver.
4. Create the device special files for the device using the following syntax:

```
/usr/sbin/mknod <file_name> b|c <major#> <minor#>
```

- Name the file something easily associated with the device.
- Use `b` for block device special file or `c` for character device special file.
- Make files for both block and character if driver supports both.
- Use the block or character major number reported by `lsdev`.
- Use the minor number constructed from the bit assignment tables.

For example, the `scope` device driver has block and character major numbers of 65 and 234 respectively. Its minor number of `0x026000` is constructed like `instr0` (see Table C-5). Bits 8 through 15 encode 2 as the card instance of the interface card and bits 16 through 19 encode 6 as the instrument address.

```
/usr/sbin/mknod /dev/scope b 65 0x026000  
/usr/sbin/mknod /dev/c_scope c 234 0x026000
```

5. Verify the configuration by invoking `ioscan` with the `-fun` or `fkn` option. If created properly, the new device special files will be displayed with the configured device.

D Worksheets

Copy these worksheets as many times as you need for the devices on your system.

Keep a current copy of `/usr/sbin/ioscan -fk` output as an aid in configuring and troubleshooting your system.

Interface Cards

Part name and number:	
Version and date:	
Serial number:	
Firmware revision:	
Station address (LANIC ID) ^a :	
Hardware address:	
Dip switch settings:	

a. Use /usr/sbin/lanscan or /usr/sbin/lanadmin to identify the station address.

Part name and number:	
Version and date:	
Serial number:	
Firmware revision:	
Station address (LANIC ID):	
Hardware address:	
Dip switch settings:	

Terminals and Modems

Part name and number:	
Serial number:	
Cabling:	
Interface card, port number ^a :	
Hardware address:	
Dip switch settings ^b :	
Driver, device file, minor number:	
Modem use, baud rate, protocol:	

a. Note if configured via DTC or distribution panel.

b. Note if configured as console or serial terminal.

Part name and number:	
Serial number:	
Cabling:	
Interface card, port number:	
Hardware address:	
Dip switch settings:	
Driver, device file, minor number:	
Modem use, baud rate, protocol:	

Disk Drives

Part name and number:	
Serial number:	
Firmware Revision:	
Number of disks, capacity:	
Interface card, port number:	
Hardware address:	
Dip switch settings:	
Drivers, device special files, minor numbers:	
LVM physical volume, volume group:	
RAID level, use ^a :	

a. For example, file system, boot, dump, swap, raw data.

Part name and number:	
Serial number:	
Firmware Revision:	
Number of disks, capacity:	
Interface card, port number:	
Hardware address:	
Dip switch settings:	
Drivers, device special files, minor numbers:	
LVM physical volume, volume group:	
RAID level, use:	

Disk Drives

Part name and number:	
Serial number:	
Firmware Revision:	
Number of disks, capacity:	
Interface card, port number:	
Hardware address:	
Dip switch settings:	
Drivers, device special files, minor numbers:	
LVM physical volume, volume group:	
RAID level, use ^a :	

a. For example, file system, boot, dump, swap, raw data.

Part name and number:	
Serial number:	
Firmware Revision:	
Number of disks, capacity:	
Interface card, port number:	
Hardware address:	
Dip switch settings:	
Drivers, device special files, minor numbers:	
LVM physical volume, volume group:	
RAID level, use:	

Tape Drives

Part name, number, type of tape drive:	
Serial number:	
Firmware Revision:	
Capacity:	
Interface card, port number:	
Hardware address:	
Cabling:	
Dip switch settings:	
Drivers, device special files, minor numbers:	
Use	

Part name, number, type of tape drive:	
Serial number:	
Firmware Revision:	
Capacity:	
Interface card, port number:	
Hardware address:	
Cabling:	
Dip switch settings:	
Drivers, device special files, minor numbers:	
Use	

Printers and Plotters

Part name, number:	
Serial number:	
Firmware Revision:	
Capacity:	
Interface card, port number:	
Hardware address:	
Cabling:	
Dip switch settings:	
Drivers, device special files, minor numbers:	
Means of access:	

Part name, number:	
Serial number:	
Firmware Revision:	
Capacity:	
Interface card, port number:	
Hardware address:	
Cabling:	
Dip switch settings:	
Drivers, device special files, minor numbers:	
Means of access:	

Uninterruptible Power Systems (UPS)

Part name, number:	
Serial number:	
Firmware Revision:	
Rated load capability:	
Interface card, port number:	
Hardware address:	
Cabling:	
Dip switch settings:	
Drivers, device special files, minor numbers:	
Hardware coverage:	

Part name, number:	
Serial number:	
Firmware Revision:	
Rated load capability:	
Interface card, port number:	
Hardware address:	
Cabling:	
Dip switch settings:	
Drivers, device special files, minor numbers:	
Hardware coverage:	

Symbols

/dev/cua#p#, 81
/dev/cul#p#, 81
/dev/mux#, 64
/dev/tty#p#, 64, 65
/dev/ttyd#p#, 81
/etc/checklist, 109
/etc/eisa/config.log file, 200
/etc/exports, 114
/etc/fstab, 109, 118
/etc/gettydefs, 89
/etc/inittab, 87, 155
/etc/ioconfig, 22
/etc/lp/interface, 170
/etc/lvmtab, 111, 112
/etc/syslog.conf
 redirecting log messages, 183
/etc/ups_conf, 181
/sbin/dasetup, 88
/sbin/lib/eisa directory, 189
/sbin/rc, 181
/stand/build, 25, 55, 66, 102, 107, 109, 111,
 116, 130, 140, 162, 168, 235
/stand/build/system, 25, 55, 66, 107, 109, 130,
 140, 162, 168, 235
/stand/build/vmunix_test, 25, 55, 66, 102,
 107, 109, 111, 116, 130, 140, 162, 168, 236
/stand/ioconfig, 22
/stand/system, 102, 161, 225
 driver statement, 235
 kernel configuration file, 237
/stand/vmunix, 25, 55, 66, 102, 107, 110, 112,
 116, 130, 140, 162, 169, 237
/usr/conf/lib, 225
/usr/conf/lib/libhp-ux.a, 225, 236
/usr/conf/master.d, 225, 226
/usr/include/sys/mtio.h, 231
/usr/lbin/sysadm/system_prep, 162
/usr/lbin/ups_mond, 181
/usr/sbin/sam, 61, 62, 69, 102, 130, 140, 181
 MSG_ONLY
 noncritical operation, 182
 printers and plotters, 148

Numerics

28615A HP-PB fiber-optic link adapter, 42
28643A, 51
28643A SCSI Fiber-Optical Extender, 50

5061-2569 (serial connector), 178
5961-8383, 177
700/60, 64
700/96, 64
700/98, 64
7596A Draftmaster II plotter, 168

A

A1439A CRX-24 graphics display interface
 card, 40
A2269A Dual CRX graphics display interface
 card, 40
A2941A, 180
A2994A, 180
A2996A, 180
A2997A, 180
A2998A, 180
AC power failure and UPS, 175
accelerator card
 HP A1454A, 40
access mode bits, 232
Access port MUX16, 70
access to printers and plotters, 149
adding drivers, 140
adding peripherals
 summary, 25
addressing, 225
 by decreasing priority, 138
 device drivers, 225
adjusting minor number bits to read other
 densities, 230
adjusting minor-number bits, 225
anti-static workstation, 29
APPCC-1250UX, 180
APPCC-600UX, 180
ar(1), 236
ar(1M), 225
asio0, 32, 64, 65, 155, 156, 164, 232
associating driver and peripheral manually,
 237
asynchronous data communication, 32
ATT V.4 file-system layout, 105
attached line printer bit, 232
ATT-style tape positioning, 135
audio, 232
AUI LAN, 46
AUTO file, 115
auto form feed bit, 232
autoch

Index

- class in sample ioscan output, 131
- automatic mode, 188
- autox0, 231

B

- backplane slot priority, 29
- backward compatibility
 - /etc/checklist, 109
 - /etc/disktab, 92
- configuring disks with hard partitions, 106
- configuring LVM disks, 106
- configuring SDS disks, 106
- configuring whole disks, 106
- disktab(4), 110
- magneto-optical disks, 128
- s2, 110
- section numbers, 96, 97, 98
- Series 700 SDS disks, 104
- Series 700 whole disks, 104
- Series 800 hard partitions, 104
- baud rate for modem, 62
- baud switching, 83
- baud-rate mismatch, 88
- bdevsw, 226
- bdf(1), 109
- Bell/CCITT, 232
- Berkeley-style tape positioning, 135
- bit assignments, 231
 - disk drivers, 231
 - line printer devices, 232
 - magneto-optical devices, 231
 - miscellaneous devices, 232
 - network devices, 232
 - serial devices, 232
 - tape drivers, 231
- black-boxes, 223
- block I/O, 225
- block major number, 226
- book
 - overview, 11
 - references, 12
- boot administration
 - boot ROM menus, 116
 - LVM maintenance mode, 117
 - mode, 116
- booting in LVM maintenance mode, 117
- BREAK signal

- used for INTR and baud switching, 83
- BSD behavior bit, 231
- build environment, 25, 55, 66, 102, 107, 109, 111, 116, 130, 140, 162, 168, 235
- bus architecture
 - multi-processing system, 220
- bus relationships
 - Model 712, 213
 - Model 725, 214
 - Model 770 (J Series), 216
 - Model E, 217
 - Model T500, 220
 - Models 8x9 (K Series), 222
 - Models F/G/I/I, 8x7, 219

C

- C1006A/G/W, 64
- C1007A/G/W, 64
- C1017A/G/W, 64
- C1064A/G/GX/W/WX, 64
- C1065A/G/W, 64
- C1080A/G/W, 64
- C1083W, 64
- C1084W, 64
- C1085W, 64
- C2400-UTIL filesset
 - for disk array tools, 94
- c700, 49, 98, 127
- c720, 49, 98
- cable length, SCSI, 52
- cables
 - 10833A/B/C/D, 45
 - 92222A/B/C/D, 50
 - C2900A, 50
 - C2901A, 50
 - C2902A, 50
 - C2903A, 50
 - C2906A, 50
 - C2907A, 50
 - C2908A, 50
 - C2911A, 50
 - for SwitchOver configurations, 51
 - HP-FL, 43
 - K2296, 50
 - K2297, 50
 - PBus, 43
- cabling guidelines

- HP-FL, 43
- HP-IB, 45
- RS-232-C devices, 35
- SCSI, 50
- capacities, magneto-optical disk, 126
- capacity
 - magneto-optical disk libraries, 125
- card instance, 227
 - and class, 16
 - and interface card, 16
 - correlating device files, 23
 - defined, 16
- cartridge tape bit, 231
- case fold bit, 232
- CCITT, 232
- CCITT protocol for modem, 62
 - control signals, 83
- cdevsw, 226
- CD-ROM configuration
 - planning, 94
- cent(7), 167
- CentIf, 37, 158, 167, 232
 - handshake modes, 167
- centronics configuration requirements
 - for plotters, 158
 - for printers, 158
- centronics interface, 37
- CFG files, 189
 - checking for correctness, 204
 - format, 189
- changing choices for E/ISA board functions, 197
- ChannelSpan card (A1749A), 42
- character I/O, 225
- character major number, 226
- CharDrv, 158
- ChrDrv, 37
- CIO
 - SCSI tape drives, 138
 - Series 800 HP-FL disk drives, 97
 - Series 800 HP-IB disk drives, 96
 - Series 800 HP-IB tape drivers, 135
 - Series 800 magneto-optical disk drives, 127
 - Series 800 RS-232-C plotters, 156
 - Series 800 RS-232-C printers, 155
 - Series 800 SCSI disk drives, 98
 - Series 800 SCSI printers, 159
 - Series 800 SCSI tape drivers, 138
- cio_ca0, 32, 42, 44, 46, 49, 64, 96, 97, 98, 127, 135, 136, 153, 155, 156, 159
- class
 - and instance number, 22
 - of interface, 16, 22, 227
- command
 - cat, 87
 - comment, eisa_config, 195
 - init, 86, 195
 - lifcp(1M), 115
 - mkboot(1M), 115
 - move, 201
 - remove, eisa_config, 202
 - save, eisa_config, 200
 - set (shell command), 89
 - stty, 89
 - who, 86
- commands
 - mknod(1M), 166
- comment command, eisa_config, 195
- compatibility pseudo-driver (cpd), 104
- compression, data, 134, 138, 143
- config(1M), 237
- configuration
 - initializing, 195
- configuration guidelines
 - black-boxes, 223
 - graphics devices, 40
 - HP-IB, 44
 - instruments, 223
 - SCSI, 48
 - third-party device drivers, 223
- configuration strategy
 - tape drives, 134
- configuring strategy
 - overview, 11
- console
 - compared to terminal configuration, 69
 - configuring a non-HP terminal, 70
 - connectivity for, 32
 - HP 700/60 configured in non-HP modes, 70
 - planning to configure, 61
 - VT100-compatible, 70
 - VT320, 70
 - Wyse 60, 70
- console, remote, 32
- consoles, 68
- core, 44, 49, 136
- core-hpux, 226
- correcting an error while using eisa_config, 195
- correlating components and device special files, 19

Index

cpd, 104
creating an LVM mapfile, 111
creating new sci files, 200
cron(1M), 183
crontab file and UPS, 183
CS80
 unit bits, 231
cs80, 136, 153, 154
ct(7), 136
CTS/RTS (hardware flow control) for
 modems, 83
cue(1), 79
cuegetty(1M), 79
custom device drivers, 235
custom drivers, 28
customized graphics configurations,
 maintaining accuracy of, 41

D

daemons
 syslogd, 183
 system logging, 181
 UPS monitoring, 181
 ups_mond, 183
data bits, terminal vs console, 69
data communication and terminal controllers
 (DTC), 34
 16TN/MX, 34
 72MX, 34
 J2060A/J2063A, 34
 J2070A, 34
data compression
 avoiding its use on tape drives, 143
 dealing with, 134, 138, 143
DEC terminals, 62
DEC VT terminals, 71, 74
 emulation limitations, 79
decimal, binary, and hexadecimal
 equivalents, 228
DELT-2326/C2, 180
DELT-2336/C2, 180
determining available addresses using
 ioscan, 19
dev_t format, 227
device adapter
 installing, 28
device configuration
 using SAM, 14

device drivers, 225
 28615A HP-FL adapter, 43
 addressing, 225
 and disk drives, 96
 and magneto-optical devices, 125
 and major numbers, 226
 associating custom driver with a
 peripheral, 235
 bit assignments, 231
 dev_t format, 227
 for HP-FL disk, 97
 for HP-IB disk drives, 96
 for HP-IB tape drives, 135
 for parallel (centronics) plotters, 158
 for parallel (centronics) printers, 158
 for printers and plotters, 152
 for SCSI disk, 98
 for SCSI printers, 159
 for SCSI tape drives, 138
 for serial (RS-232-C) plotters, 156
 for serial (RS-232-C) printers, 155
 for terminals and modems, 64
 instr0, 44
 kernel association, 225
 location, 225
 major number, 226
device installation
 requirements, 13
device number
 defined, 16
device special files
 and hardware path, 23
 associated with a peripheral device, 24
 bit assignments, 227
 correlating with hardware components, 19
 creating customized for tape drives, 142
 creating for modems, 81
 creating for serial printer or plotter, 164
 creation, 104
 disk drives, 97, 98
 exhaustive mode for tape drives, 143
 floppy disk drives, 101
 for printers and plotters, 164
 for tape drives, 141
 magneto-optical disk drives, 127
 major and minor numbers, 225

- plotters, 156, 158
- printers, 155, 158, 159
- tape drives, 135, 136, 138
- diagnostic bit, 231, 232
- disc1, 96, 136, 231
- disc2, 42, 97, 231
- disc3, 42, 98, 101, 127, 231
- disc4, 42, 97, 231
- disk
 - class in sample ioscan output, 131
- disk array configuration
 - planning, 94
 - RAID levels, 94
- disk drives
 - 7907A, 96
 - 7914CT/P/R/ST, 96
 - 7933H, 96
 - 7935H, 96
 - 7936FL, 97
 - 7936H, 96
 - 7937FL, 97
 - 7937H, 96
 - 7957A/B, 96
 - 7957B, 98
 - 7958A/B, 96
 - 7958B, 98
 - 7959B, 96, 98
 - 7962B, 96
 - 7963B, 96
 - 9127A, 96
 - 9153C, 96
 - 9262B, 96
 - 9263B, 96
 - 97902B, 96
 - 97903B, 96
 - 97962B, 96
 - A1999A, 98
 - A2655A, 98
 - A2657A, 98
 - A3058A, 98
 - A3182A, 98
 - A3231A, 94, 98
 - A3232A, 94, 98
 - and device drivers, 96
 - C1707A, 96
 - C2200A, 96
 - C2201A, 97
 - C2203A, 96
 - C2204A, 97
 - C2212A, 98
 - C2213A, 98
 - C2214B, 98
 - C2216T, 98
 - C2217T, 98
 - C2252B/BZ/HA/HZ, 97
 - C2254B/BZ/HA/HZ, 97
 - C2258B/HA, 97
 - C2259B/HA, 97
 - C2281A, 98
 - C2282A, 98
 - C2290A, 98
 - C2291A, 98
 - C2293A/T/U, 98
 - C2295B, 98
 - C2425JK, 98
 - C2427JK, 98
 - C2460F/R, 98
 - C2461F/R, 98
 - C2462F/R, 98
 - C2470S, 98
 - C2471S, 98
 - C2472F/R/S, 98
 - C2473F/R/S, 98
 - C2473T, 98
 - C2474F/R/S, 98
 - C2474J, 98
 - C2476F/R, 98
 - C2481A, 98
 - C2482A, 98
 - C2491A, 98
 - C2492A, 98
 - C3020T, 98
 - C3021T, 98
 - C3022R/T, 98
 - C3023R/RZ/T, 98
 - C3023T, 98
 - C3024R/RZ/T, 98
 - C3024T, 98
 - C3027U, 98
 - C3028U, 98
 - C3032T, 98
 - C3033T, 98
 - C3034T, 98
 - C3035T, 98
 - C3036T, 98
 - C3037U, 98
 - C3038U, 98
 - C3040R/T, 98

Index

- C3041R/T, 98
- C3044U, 98
- C3560U, 98
- device special files created, 97, 98
- moving using HP-UX commands, 114
- planning to configure, 93
- disk model number
 - finding out, 121
- diskinfo(1M), 92, 103, 121, 126
- disks drives
 - further tasks, 122
- disktab(4), 92, 95, 110
- distribution panels
 - 0950-2431, 33
 - 28659-60005, 33
 - 5062-3054, 33
 - 5062-3070, 33
 - 5062-3085, 33
 - 5181-2085, 33
 - ADP 5062-3070, 32
 - ADP422 5062-3085, 32
 - characterized, 33
 - DDP 5062-3066, 32
 - DDP 5181-2085, 32
 - MDP 5062-3054, 32
 - purpose of, 33
 - RJ45 0950-2431, 32
 - serial connectivity, 33
- driver behavior, controlling, 225
- Driver Development Guide
 - Series 700 resource, 96
- driver install table, 226
- driver library, location of, 236
- driver statement, 235
- DTC Manager software, 34
- DTCs
 - purpose of, 33
 - serial connectivity, 33
- dump
 - managing when moving a root LVM disk, 114
 - managing when removing a disk, 120
- dynamically assigned major numbers, 226
- E**
- E/ISA boards
 - changing choices for board functions, 197
 - choices, 190
 - moving, 201
 - removing, 202
 - resources, 189
 - setting switches and jumpers, 200
 - troubleshooting configuration, 204
- eeprom, 44, 49, 136
- EISA
 - boards, 187, 189
 - defined, 38
 - incompatibility of most HP-IB tape drives, 135
 - SCSI disk drives, 98
 - SCSI tape drives, 138
- eisa, 44, 49, 98, 136, 153
- EISA device
 - swapping to, 38
- eisa_config
 - automatic mode, 188
 - changing choices for board functions, 197
 - correcting an error, 195
 - example session, 193
 - exiting, 200
 - initializing configuration, 195
 - interactive mode, 192
 - log file, 200
 - moving boards, 201
 - removing boards, 202
 - saving configuration, 200
 - troubleshooting, 204
- eisa_config(1M), 161
- Ethernet bit, 232
- EtherTwist, 46
- examples
 - /etc/syslog.conf entry for redirecting UPS log messages, 183
 - /usr/conf/master.d sample file entry, 236
 - calculating SCSI cable length, 52
 - checking syntax of EISA CFG file, 204
 - configuration of a UPS, 177
 - configuring UPS to cycle power during non-work hours, 183
 - correlating card instance and device files, 23

creating device special files for modem, 81, 82
 determining available addresses using `ioscan`, 19
`diskinfo` output for disks, 121
`diskinfo` output for magneto-optical disk, 126
 displaying EISA board information, 196
 editing `/etc/uucp/Devices` for modem, 83
 entries in `/etc/ttytype`, 68
 force configuration of device drivers, 235
`getty` entry for a UPS port, 181
`getty` entry in `/etc/inittab` for modem, 82
 identifying device special files with a tape device, 24
 interacting with the ISL, 116
`ioscan -fn` output showing tape device special files, 24
`ioscan` output for a Model 725, 214
`ioscan` output for a Series 800 multiplexer card, 181
`ioscan` output for HP-IB instrument, 169
`ioscan` output for HP-IB plotter, 168
`ioscan` output for magneto-optical disk library, 131
`ioscan` output for mux interface, 164
`ioscan` output for serial printer, 164
`ioscan` output of a LAN card, 56
`ioscan` output of a Model 8x9 (K Series), 222
`ioscan` output of a multi-function card, 218
`ioscan` output of a T500 system, 221
`ioscan` output of tape driver, 141
`lssf` output for serial printer, 165
`lssf` output for serial printer with hardware flow control (RTS/CTS) enabled, 165
`lvlnboot` output, 114
 minor number for printer, 164
`mksf` command for reading non-default tape format, 142
`mksf` command for tape driver exhaustive mode, 143
`mksf` command to prevent tape data compression, 143
 moving a disk, 114
 moving a printer or plotter, 170
 output from `lssf` for modem files, 82
 output of `ps -ef`, 87
 portion of `/stand/system` file, 235
 sample CFG file used by `eisa_config`, 189

sample display of EISA CFG files, 194
 sample display of `eisa_config` switch/jumper settings, 199
 sample `eisa_config` exit, showing subsequent steps, 198
 sample `eisa_config` start-up screen, 193
 setting hardware flow control (RTS/CTS) for serial printer, 164
 tar test to verify tape driver configuration, 141
 using `eisa_config` `show slot` command, 195
 using `ioscan -C` (class) option, 24
 exhaustive mode for tape-device special files, 143
`exports(4)`, 114, 119
`ext_bus` and instance number, 22
 extracting the system file, 25, 55, 66, 102, 107, 109, 111, 116, 130, 140, 162, 168, 235

F

`fddi`, 46
 fiber-optic extender cable for SCSI, 51
 field separators, 20
`fifo` bits, 232
 file
 `/etc/eisa/config.log`, 200
 CFG, 189
 file type, 225
 fileset for disk array configuration, 94
 file-system layout, 104
 floppy disk drives
 adjusting minor number bits, 230
 configuration guidelines, 101
 configuration planning, 95
 device special files created, 101
 floppy disks and HP-UX
 capability for mounted file system, 95
 differences from PC floppies, 95
 intended use and limitations, 95
`floppy(7)`, 95
 force configuration, 235
 force configuration of device drivers, 235
 formats
 handling differences on tape media, 142
`framebuf`, 39
`fstab(4)`, 109, 118
 full `ioscan` listing, 23
 further tasks
 disk drives, 122
 magneto-optical devices, 132
 tape drives, 144

Index

fuser(1M), 86

G

garbage data

on terminals, 86, 88

geometry determined, 231

getty, 155

modem entry in */etc/inittab* described, 82

getty(1M), 60, 69, 82, 87

key options for terminals, 67

gettydefs(4), 67, 69, 89

H setting for hard-wired terminals, 69

glitches

preventing tape data loss due to, 138

graph3, 39, 232

graphics cable extensions, 41

graphics card configuration guidelines, 39

graphics cards and subsystems

98768A, 39

A1439, 39

A2269A, 39

A2270A, 39

A2271A, 39

A2272A, 39

A2666A, 39

A2667A, 39

A2673A, 39

A2674A, 39

A2675A, 39

A4070A, 39

A4071A, 39

A4072A, 39

A4073A, 39

Z1100A, 39

graphics configurations, maintaining

accuracy of, 41

graphics devices

configuration information, 40

installing, 40

group

volume group file, 112

guidelines

centronics (parallel) interface, 37

configuring a disk with existing data, 104

configuring a non-HP printer to a parallel port, 167

device drivers for terminals and modems, 64

EISA configuration, 38

floppy disk configuration, 101

graphics card configuration, 39

HP-IB printer and plotter configuration, 152

HP-IB tape-drive configuration, 135

magneto-optical disk configuration, 127

magneto-optical disk library configuration, 129

networking configuration, 46

parallel printer and plotter configuration, 158

SCSI disk configuration, 98

SCSI printer and plotter configuration, 159

SCSI tape-drive configuration, 138

serial printer and plotter configuration, 155

H

H/W Path

defined, 20

handshake bits, 232

handshake modes for parallel interface, 167

hardware

terminals, 88

hardware addresses, 225

decoding, 20

defined, 20

determining, 25

field separators, 20

general, 25

Models F/G/I/I, 8x7, 219

on multi-function cards, 217

hardware considerations for UPS, 177

hardware flow control (CTS/RTS), 64

for modems, 83

hardware flow control(CTS/RTS)

minor number bit, 232

hardware path, 20

associating with driver, 237

hard-wired terminals in */etc/gettydefs*, 69

hexadecimal equivalents to binary and decimal, 228

hexadecimal notation, 227

hierarchy of I/O, 20

- hippi, 46
 - HP 700/60 configured in non-HP console modes, 70
 - HP JetDirect Network Interface, 149
 - HP JetDirect Network Interface Configuration Guide, 172
 - HP MPower 1.2 Installation and Configuration, 172
 - HP terminals in non-HP modes, 62
 - HP VUE 3.0 User's Guide, 60
 - HP-FL
 - 28615A adapter, 42
 - accessories, 43
 - cables, 43
 - device bits, 231
 - disk device drivers, 97
 - installation guidelines, 42
 - limitations, 97
 - unit bits, 231
 - hpfl0, 42, 97
 - hpfl1, 42, 97
 - HP-IB
 - address bits, 231
 - addressing range, 135
 - and parallel polling, 135
 - cable length, 45
 - cabling, 45
 - changing address switch settings, 45
 - configuration guidelines, 44
 - device bits, 232
 - disk device drivers, 96
 - disk limitations, 96
 - instrumentation access, 44
 - interface limitations, 93
 - tape device drivers, 135
 - hpib, 153
 - HP-IB device
 - bits, 231
 - HP-IB unit
 - bits, 231
 - hpib(7), 44
 - hpib0, 44, 96, 135, 136, 153
 - hpib1, 44, 96, 135, 136
 - HP-PB
 - 28615A HP-FL adapter, 42
 - A1749A ChannelSpan card, 42
 - backplane slot priority, 29
 - F/W SCSI disk drives, 98
 - SCSI tape drives, 138
 - Series 800 HP-FL disk drives, 97
 - Series 800 HP-IB disk drives, 96
 - Series 800 HP-IB tape drivers, 135
 - Series 800 magneto-optical disk drives, 127
 - Series 800 parallel plotters, 158
 - Series 800 parallel printers, 158
 - Series 800 RS-232-C plotters, 156
 - Series 800 RS-232-C printers, 155
 - Series 800 SCSI disk drives, 98
 - Series 800 SCSI printers, 159
 - Series 800 SCSI tape drivers, 138
 - HP-UX runstate, 86
 - hshpib, 44, 136, 153
- ## I
- I/O hierarchy, 20
 - identifying device special files with a peripheral device, 24
 - identifying run-level, 86
 - init command, 195
 - init(1M), 67, 87
 - initializing configuration, 195
 - inittab(4), 67, 69, 85, 87
 - inquiry response, 121
 - insf(1M), 134, 135, 141, 169
 - and data compression, 138
 - creating additional device files for disk library, 131
 - installation guidelines
 - HP-FL, 42
 - installing device adapter, 28
 - installing graphics devices, 40
 - installing interface card, 28
 - instance number, 22, 227
 - and class, 22
 - and interface card, 16, 22
 - defined, 16
 - location of, 22
 - significance of, 22
 - instr0, 44, 232
 - configuring devices, 168
 - instrument address, 232
 - instrumentation access, 44
 - instruments, 223
 - interactive mode, 188
 - interface card
 - installing, 28
 - interface card instance number
 - significance of, 22
 - interface cards
 - 25525A/B, 49
 - 25560A, 44
 - 25567B, 46

Index

27110B, 44
27147-60002, 159
27147A, 49
28615A, 42
28639-50001, 32
28639-60001, 64, 180
28650A/B, 44
28655A, 37, 49, 158, 159
28696A, 49
36960A, 46
36967A, 46
40299B, 32, 64, 155, 156, 180
98190A, 32, 64, 155, 156
98196A, 64, 155, 156
A1703-60003, 32, 64, 180
A1703-60022, 32, 64, 70, 180
A1749A (ChannelSpan), 42
A2544A, 46
Apollo TokenRing, 46
E2070A, 44
E2071B, 44
FDDI/9000, 46
HIPPI Link, 46
HP 25525B, 98
HP 25560A, 136
HP 27110B, 96, 135, 136
HP 27111A, 97
HP 27113B, 96
HP 27147A, 98, 127
HP 28615A, 97
HP 28650B, 96, 135, 136
HP 28655A, 98, 127
ISDN Link, 46
J2069A, 46
J2092A, 32, 180
J2093A, 32, 180
J2094A, 32, 180
J2096A, 32, 180
J209x, 155, 156
J209xA, 64
J2104A, 46
J2109A, 46
J2146A, 46
J2156A, 46
J2157A, 46

J2159A, 46
J2165A, 46
J2166A, 46
J2220A, 46
J2226A, 46
LAN/9000, 46
LANLink, 46
maximum configurations, 31
networking, 46
planning to configure, 29
selecting drivers, 32
SNAplus Link, 46
TokenRing 9000, 46
X.25/9000, 46
X.25Link, 46
interface driver, 225
interface drivers
 selecting for interface card, 32
ioinit(1M), 22
ioscan(1M), 19, 61, 65, 66, 92, 102, 161
 and kernel structures, 19
 comparing hardware path and device file,
 110
 full listing, 23
 identifying usable devices, 19
 manually associating driver and
 peripheral, 237
 terse listing, 19
 using to determine available addresses, 19
ISA boards, 187, 189
 configuration guidelines, 38
 configuring, 192
 moving, 201
 removing, 202
 setting switches and jumpers, 200
 switches and jumpers, 189
isdn, 46
isdnetd, 46
isdnsn, 46
isdnx25, 46

K

kernel (/stand/vmunix), 25, 55, 66, 102, 107,
 110, 112, 116, 130, 140, 162, 169, 237
 associating drivers, 225
 configuration file (/stand/system), 237

- rebuilding to add drivers, 25, 140, 162, 168
- kernel (stand/vmunix)
 - rebuilding to add drivers, 65
- kernel structures and ioscan(1M), 19
- keyboard bits, 232
- kill(1), 87
- killing processes, 87

L

- LAN/9000 interface cards, 46
- lan0, 46, 232
- lan1, 232
- lan2, 46, 232
- lan3, 46, 155, 156
- lanadmin(1M), 29
- LAN-based multi-function cards, 217
- lanmux0, 32, 64, 155, 156, 180
- lantty0, 32, 64, 155, 156, 180
- library, driver
 - location of, 236
- lifcp(1M), 115
- limitations to non-HP terminal emulation, 79
- limited support
 - STK 3480 tape drive, 138, 143
- location of device drivers, 225
- location of libraries, 236
- Logical Volume Manager (LVM), 94
 - need to import LVM information, 104
 - to apportion disk space, 104
- lpr0, 37, 153, 232
- lpr1, 153, 232
- lpr2, 158, 232
- lpr3, 159, 232
- lpsched(1M), 167
- lsdev(1M), 226
- lssf(1M), 65, 164
- LU number replaced, 23
- LU number, compared to instance number, 23
- lvlnboot(1M), 114, 117
- LVM commands
 - lvdisplay(1M), 114
 - lvlnboot(1M), 114, 117
 - lvreduce(1M), 114
 - lvremove(1M), 114
 - lvrmboot(1M), 117
 - vgchange(1M), 111, 112, 114, 117
 - vgexport(1M), 111, 114
 - vgimport(1M), 112
 - vgscan(1M), 112, 114
- LVM maintenance mode, booting in, 117

- lvrmboot(1M), 117

M

- magneto-optical disk drives
 - C1701A, 127
 - C1701C, 127
 - C1716C, 131
 - C2550B, 127
 - device special files created, 127
 - further tasks, 132
 - product ID strings, 127
- magneto-optical disk libraries
 - C1708C, 131
 - capacity, 125
 - device drivers, 129
 - further tasks, 132
 - I/O limitations, 125
 - installation, 124
 - installation planning, 125
 - SCSI addresses, 49
 - SCSI addressing guidelines, 130
 - surfaces bits, 231
- magneto-optical disks
 - access, 125
 - device drivers, 125, 127
 - powerfail support, 125
 - surfaces, 125
 - use as mountable file system, 125
 - uses and limitations, 123
 - writing to, 123
- magneto-optical media
 - capacity, 126
 - ratings, 126
- major and minor numbers
 - in device special files, 225
- major numbers
 - and device drivers, 226
 - defined, 226
 - dynamic assignment and ranges, 226
- Managing SwitchOver/UX, 174
- mapfile, creating an LVM, 111
- master files, 226
- maximum device connections
 - by interface card, 31
- maximum disk space, 94
- mediainit(1), 103, 128
- minor numbers
 - bit assignments, 231
 - bit setting for tape drives, 136
 - creating, 227

Index

- defined, 226
 - examples, 229
 - mk_kernel(1M), 25, 55, 66, 102, 107, 109, 111, 116, 130, 140, 162, 168, 235, 237
 - mkboot(1M)
 - example, 115
 - mknod(1M), 166, 238
 - mksf(1M), 110, 134, 142, 164
 - and data compression, 138, 143
 - for modem configuration, 62
 - used for creating device files for modems, 81
 - Model 712, 213
 - Model 712 floppy disk configuration, 101
 - Model 725, 214
 - Model 770 (J Series), 216
 - Model E, 217
 - Models 890 and T500, 220
 - Models 8x7, 219
 - Models 8x9 (K Series), 222
 - Models F/G/H/I, 219
 - modem type bit, 232
 - modems
 - access mode, 81
 - AT command, 83
 - autoanswer, 83
 - baud rate, 62
 - bit assignments, 232
 - BREAK, 83
 - CCITT control signals, 83
 - CCITT protocol, 62
 - configuring, 65
 - creating device special files, 81
 - device file for dial-in port, 81
 - device file for dial-out port, 81
 - device file for direct connect, 81
 - DTR, 83
 - duplex control, 33
 - editing /etc/uucp/Devices, 83
 - hardware flow control (CTS/RTS), 83
 - Hayes modem protocol, 83
 - moving using HP-UX commands, 85
 - planning to configure, 62
 - removing using HP-UX commands, 85
 - removing using SAM, 85
 - requirements specific to HP-UX, 83
 - system-side configuration, 65
 - testing call-out ability, 83
 - troubleshooting approach, 83
 - using mksf(1M), 81
 - UUCP, 62
 - modifying the printer address, 171
 - mouse device bits, 232
 - moving
 - E/ISA boards, 201
 - ISA boards, 201
 - Moving HP-UX 9.x Code and Scripts to 10.x, 105
 - moving peripherals
 - disk drive, 114
 - printers and plotters, 170
 - terminal or modem, 85
 - MSG_ONLY
 - example, 181
 - noncritical operation, 182
 - mt(7), 231
 - mt_property_type, 231
 - multi-function (personality) cards
 - 28639-60001, 64
 - A1703-60003, 64
 - A1703-60022, 64
 - and networking configuration, 46
 - hardware addresses on, 217
 - SCSI/Parallel/MUX, 218
 - multi-function cards, 217
 - multiplexers
 - reset using /sbin/dasetup, 88
 - multi-processing system
 - bus architecture, 220
 - multi-user mode, 86
 - MUX connectivity, 32
 - MUX interface for non-HP console, 70
 - mux0, 32, 64, 155, 156, 164, 232
 - mux2, 32, 64, 155, 156, 164, 180, 232
 - mux4, 32, 64, 155, 156, 164, 180, 232
 - MUX-based multi-function cards, 217
- ## N
- naming device special files for printers and plotters, 164
 - network interfaces, 46
 - NFS
 - installing and administering, 114
 - special considerations, 114
 - nm(1), 237

no rewind bit, 135, 231
non-HP terminal emulation, limitations to,
79

O

dev/crt*, 39
obsolete products
 disk drives, 96, 97, 98
 printers, 152, 155, 158
 tape drives, 135, 136, 138
on-line help, eisa_config, 193
OpenView DTC Manager software, 34
OpenView Software Distributor
 Administrator's Guide, 179
OSF/1 file-system layout, 105
osi0, 232

P

pa, 32, 42, 44, 49, 64, 96, 97, 98, 127, 135, 136,
153, 155, 158, 159, 180
parallel configuration requirements
 for plotters, 158
 for printers, 158
parallel interface, 37
parallel polling and HP tape drives, 135
parity, terminal vs console, 69
path, hardware, 20
PC floppy disk configuration guidelines, 101
pcfdc, 101
pcfloppy, 101
pdn0, 46, 232
performance
 disk drives, 93
 distribution of data, 93
 magneto-optical disk devices, 125
 root disk drive, 135
 tape drives, 135
peripheral, adding
 overview, 25
peripherals
 removing using HP-UX commands, 120
 third party, 54
personality (multi-functional) card, 218
personality cards, 217
 28639-60001, 64
 A1703-60003, 64
 A1703-60022, 64
 and networking configuration, 46
 connectivity for, 32
pfail, 32, 42, 44, 49, 64, 96, 97, 98, 127, 135,
136, 153, 155, 156, 158, 159, 180

planning
 CD-ROM configuration, 94
 disk array configuration, 94
 disk drive configuration, 93
 floppy disk-drive configuration, 95
 interface card configuration, 29
 magneto-optical disk libraries
 configuration, 125
 modem configuration, 62
 printer and plotter configuration, 149
 tape-drive configuration, 135
 terminal configuration, 61

plotters

7440A, 156, 158
7475A, 156
7550A, 156
7550B, 158
7558, 156
7570A, 156
7576A, 156
7586B, 156
7595A/B, 156
7596A, 168
7596A/B, 156
7596C, 156
7599A, 156
C1600A, 158
C1601A, 158
C1620A, 156, 158
C1625A, 156, 158
C1627A, 156, 158
C1629A, 156, 158
C1631A, 158
C1633A, 158
C2847A, 156, 158
C2848A, 156, 158
C2858A, 156, 158
C2859A, 156, 158
C3170A, 156, 158
C3171A, 156, 158
C3180A, 156
C3181A, 156, 158
parallel (centronics) configuration
 requirements, 158
serial (RS-232-C) configuration
 requirements, 156
port number bits, 232
ports, terminal, 65
PostScript, 167

Index

- power
 - order for turning on/off, 102, 131, 141
- power_onoff(1M), 183
- PowerTrust System Guide, 177
- PowerTrust Uninterruptible Power System (UPS), 175, 185
- PowerTrust UPS
 - configuring, 181
- primary boot path
 - setting, 117
- printer and plotter configuration
 - planning, 149
- printers
 - 2562C, 155, 158
 - 2563C, 155, 158
 - 2564B, 170
 - 2566B/C, 155
 - 2566C, 158
 - 2567B/C, 155
 - 2567C, 158
 - 2684A, 155
 - 2684A/P, 158
 - 2686A/D, 155, 158
 - 2932A, 155, 158
 - 2934A, 155, 158
 - 33438P, 158
 - 33440A, 155, 158
 - 33447A, 155, 158
 - 33449A, 155, 158
 - 33459A, 155, 158
 - 33471A, 155, 158
 - 3630A, 155, 158
 - 41063A, 155
 - C1200A, 155
 - C1202A, 158
 - C1602A, 155, 158
 - C1645A, 155, 158
 - C1656A, 158
 - C1676A, 155
 - C1686A, 158
 - C2001A, 155, 159
 - C2010A, 155, 158
 - C2011A, 158
 - C2021A, 158
 - C2040A, 158
 - C2106A, 155, 158, 159
 - C2113A, 155, 158
 - C2114A, 158, 159
 - C2121A, 158
 - C2225C/P, 158
 - C2225D, 155
 - C2227A, 155, 158
 - C2228A, 155, 158
 - C2235A, 158
 - C2235A/B/C/D, 155
 - C2276A, 155, 158
 - C2277A, 155, 158
 - C2354A, 155
 - C2356A, 155, 158
 - C2562A/C, 155
 - C2562C, 158
 - C2563A/B/C, 155, 158
 - C2564B/C, 155, 158
 - C2565A, 155, 158
 - C2566A/B/C, 155
 - C2566B/C, 158
 - C2567B/C, 158
 - C2753A, 159
 - C2754A, 159
 - C2755A, 159
 - C2756A, 159
 - C2772A, 159
 - C2773A, 159
 - C2776A, 159
 - C2777A, 159
 - F100, 161
 - LaserJet 4si, 161
 - minor number example, 164
 - parallel (centronics) configuration
 - requirements, 158
 - SCSI configuration requirements, 159
 - serial (RS-232-C) configuration
 - requirements, 155
- printers and plotters
 - choosing means of access, 149
 - configuring, 147, 174
 - hardware concerns, 151
 - local and remote access, 149
 - moving, 170
 - network access, 149
 - selecting device drivers, 152
 - software concerns, 151

TSM access, 150
 via DTCs, 155
priority of backplane slots, 29
problems
 with terminals, 86, 88
procedures
 configuring a DEC420 to emulate VT100
 mode, 71, 74
 configuring a disk device, 102
 configuring a magneto-optical disk, 128
 configuring a magneto-optical disk library,
 130
 configuring a partitioned disk with existing
 data, 109
 configuring a port for a modem connection,
 65
 configuring a port for a terminal
 connection, 65
 configuring a tape drive, 140
 configuring a Wyse 60 terminal as HP
 console, 76
 configuring an unpartitioned disk with
 existing data, 107
 configuring LVM disk, 111
 configuring UPS to cycle power during
 non-work hours, 183
 force configuration of device drivers, 235
 manually associating driver and
 peripheral, 237
 moving disk drive to a different address,
 114
 removing a disk drive, 119
processes
 associated w/terminals, 86
 terminating, 87
ps(1), 86
ps2, 232
 autosearch bits, 232
psi0, 46
psi1, 46
pty0, 232
pty1, 232

Q

QIC tape drives, 142

R

RAID independent mode, 220
RAID levels, 94

raw mode bit, 232
real-time priority and UPS, 181
reboot(1M), 66
rebuilding the kernel to add drivers, 140
recommendation
 backing up existing data, 107
redirecting log messages, 183
reference manuals, 12
regenerating kernel (/stand/vmunix), 237
remote console, connectivity for, 32
remove command, eisa_config, 202
removing
 boards, 202
removing peripherals
 disk drive, 119
 terminal or modem, 85
root disk
 special considerations, 114, 115
root privileges, 12
RS-232-C, 64, 65
 cabling, 35
 configuration requirements for plotters, 156
 configuration requirements for printers,
 155
 interface cards, 32
 total cable length for UPS, 178
RS-422
 availability for plotter configuration, 156
RS-422,423, 32
rtprio, 181
run-level, 86

S

s0, 110
s2, 110
sample addresses, 213, 214, 219, 220
schgr, 231
 in sample ioscan output, 131
sci files
 creating new, 200
screen-oriented applications, running on a
 non-console terminal, 69
SCSI
 addressing, 49
 addressing range for single-ended SCSI,
 138
 bus support, 48
 bus width, 48
 cable length, 52
 cables, 52
 cabling, 50

Index

- cabling limits, 98
- configuration guidelines, 48
- device address priority, 98
- device installation, 54
- device maximum, 49
- differential, 48
- disk array powerfail, 98
- disk configuration guidelines, 98
- disk device drivers, 98
- fast/wide, 48
- fast/wide/differential limitations, 98
- fiber-optic extender cable, 51
- floppy disk device drivers, 101
- grounding, 52
- inquiry response, 121
- limitations, 49
- line out, 48
- LUN bits, 232
- parity checking, 54
- power status, 30
- priorities of addresses, 49
- signal termination, 53
- single-ended, 48
- single-ended limitations, 98
- tape device drivers, 138
- target bits, 231, 232
- termination, 53, 141
- third party peripherals, 54
- types and characteristics, 48
- SCSI addressing
 - determining availability, 19
- SCSI ATN bits, 232
- SCSI configuration requirements for printers, 159
- SCSI Fiber-Optical Extender (28643A), 50
- SCSI LUN
 - bits, 232
- SCSI pass-through driver, 232
- SCSI target
 - bits, 232
- SCSI/Parallel/MUX multi-functional card, 218
- scsi1, 49, 127, 159
- scsi2, 49, 98, 127, 159
- scsi3, 49
- sctl, 49, 127, 232
- sdisk, 98, 127, 231
 - in sample ioscan output, 131
- section number bits, 231
- selecting device drivers for disk drives, 96
- selecting device drivers for magneto-optical devices, 125
- selecting device drivers for tape drives, 135
- selecting driver for interface card, 32
- serial connectivity (RS-232-C), 32
- serial ports
 - cabling, 35
 - configuring for a modem, 65
 - configuring for a printer, 161
 - configuring for a terminal, 65
 - creating device files for printers and plotters, 164
- Series 700
 - bus architecture, 212
 - configuring SDS disks, 106
 - configuring whole disks, 106
 - EISA SCSI, 98
 - HP-FL unsupported, 97
 - HP-IB limitations, 96
 - Models 735, 755, 98
 - RS-232-C plotters, 156
 - RS-232-C printers, 155
 - SCSI, 98
 - SCSI tape drives, 138
 - SDS disks, 104
 - used as cluster server, 212
- Series 800
 - /sbin/dasetup, 88
 - bus architecture, 217
 - CIO HP-FL disk drives, 97
 - CIO HP-IB disk drives, 96
 - CIO RS-232-C plotters, 156
 - CIO RS-232-C printers, 155
 - CIO SCSI disk drives, 98
 - CIO SCSI printers, 159
 - CIO SCSI tape drives, 138
 - configuring a modem, 81
 - configuring disks with hard partitions, 106
 - configuring LVM disks, 106
 - ensuring the modem port is not locked, 81
 - floppy disk configuration, 101
 - hard partitions/sections, 104
 - HP-PB HP-FL disk drives, 97

- HP-PB HP-IB disk drives, 96
- HP-PB parallel plotters, 158
- HP-PB parallel printers, 158
- HP-PB RS-232-C plotters, 156
- HP-PB RS-232-C printers, 155
- HP-PB SCSI disk drives, 98
- HP-PB SCSI printers, 159
- HP-PB SCSI tape drives, 138
- Model E, 19, 217
- multi-function card, 81
- setting primary boot path, 117
- setting switches and jumpers, E/ISA boards, 200
- sflop, 101, 231
- SharedPrint/UX User and Administrator's Guide, 172, 174
- shutdown(1M), 66
- shutdown_delay_mins
 - example, 181
- shutdown_timeout_mins
 - example, 181
- signal termination
 - SCSI, 53
- signal(5), 87
- single-user mode, 86
- sio, 32, 42, 44, 49, 64, 96, 97, 98, 127, 135, 136, 153, 155, 156, 158, 159, 180
- SIO drivers, 28
- sna_access, 46
- sna_LAN, 46
- sna_NODE, 46
- sna_QLLC, 46
- sna_router, 46
- sna_SDL, 46
- sna_trace, 46
- Soft PC bits, 231
- software applications, 118
- speed, default for terminals and console, 69
- stand/build/system, 102
- Standard Instrument Control Library (SICL), 44
- stape, 231
- Starbase Graphics Techniques, 174
- station address, obtaining, 29
- STK 3480 tape drive
 - limited support, 138, 143
- stty(1), 75, 87
- superuser privileges, 12
- SupportWatch, 185
- surfaces in magneto-optical disk libraries, 231
- swap

- managing when moving a root LVM disk, 114
- managing when removing a disk, 120
- swapinfo(1M), 109
- swapping to EISA devices, 38
- swinstall, 179
- swinstall(1M), 69
- SwitchOver and cabling, 51
- syslogd, 181
- syslogd(1M), 183
- System Administration Manager (SAM), 61, 62, 69
- system file, extracting the, 25, 55, 66, 102, 107, 109, 111, 116, 130, 140, 162, 168, 235
- system runstate, 86
- system_prep script, 25, 55, 66, 102, 107, 109, 111, 116, 130, 140, 162, 168, 235

T

- tape drives
 - 7890S/SX, 138
 - 7914CT/P/R, 136
 - 7946, 136
 - 7980A/XC, 135
 - 7980S/SX, 138
 - A2311A, 138
 - A2656A, 138
 - A2944A, 138
 - A3024A, 138
 - allowing for trial and error, 143
 - avoiding data compression, 143
 - C1502A, 138
 - C1503A/B/C, 138
 - C1504A/B/C, 138
 - C1511A, 135
 - C1512A, 138
 - C1520A/B, 138
 - C1521A/B, 138
 - C1530B, 138
 - C1533A, 138
 - C1534A, 138
 - C1535A, 138
 - C1553A, 138
 - C2292A, 138
 - C2297T/U, 138
 - C2298A, 138
 - C2463F/R, 138
 - C2464F/R, 138
 - C2465F/R, 138
 - C2466F/R, 138

Index

- C2467F/R, 138
- C2477F/R/S/U, 138
- C2478U, 138
- configuration bits, 231
- configuration strategy, 134
- creating customized device special files, 142
- device special files created, 135, 136, 138, 141
- incompatibility of QIC and older cartridge media, 142
- index/density bits, 231
- minor number bit setting, 136
- parallel polling, 135
- planning to configure, 135
- STK 3480, 138
- STK 4220, 138
- STK 4280, 138
- tape positioning, 135
- tasks, 144
- types, 133
- working with different formats, 142
- tape positioning, 135
- tape1, 135, 231
- tape2, 231
- tar(1), 141
- target, 42, 97, 98, 127, 159
- target address
 - defined, 16
- tasks
 - configuring a DEC420 to emulate VT100 mode, 71, 74
 - configuring a non-HP terminal as a console, 70
 - configuring a port for a modem connection, 65
 - configuring a port for a terminal connection, 65
 - configuring a Wyse 60 terminal as HP console, 76
 - configuring PowerTrust UPS, 181
 - configuring printers, 161
 - configuring UPS to cycle power during non-work hours, 183
 - force configuration of device drivers, 235
 - instr0 devices, 168
 - maintaining accuracy of customized graphics configurations, 41
 - moving a printer or plotter, 170
 - plotters, 168
 - tape drives, 144
 - terminals, 65
- telnet, 155
- terminal configuration, 87
- terminal, resetting, 87
- terminals, 88
 - as consoles, 61, 65, 68
 - compared to console, 69
 - configuring, 65
 - configuring a DEC420 to emulate VT100 mode, 71, 74
 - configuring a non-HP, 70
 - configuring Wyse 60 as HP console, 76
 - data bits, 69
 - DEC VT terminals, 71, 74
 - default speed, 69
 - device files, 87
 - differences between console and terminal configuration, 69
 - ensuring correct configuration for hard-wired, 69
 - hard-wired vs. accessed by modem, 69
 - limitations to non-HP terminal emulation, 79
 - moving using HP-UX commands, 85
 - parity, 69
 - planning to configure, 61
 - ports, 65
 - removing using HP-UX commands, 85
 - removing using SAM, 85
 - running screen-oriented applications on, 69
 - setting default modes, 67
 - system-side configuration, 65
 - terminal-side configuration, 67
 - unique definitions of VT100 keys, 74
 - using HP 700/60 in DEC mode, 75
- terminals and modems
 - configuring, 59, 90
 - device drivers, 64
- terminating processes, 87
- termination
 - HP-FL PBus, 43

- SCSI, 53
- SCSI devices, 141
- termio(7), 64
 - for modem configuration, 62
- termiox(7), 64
- ThinLAN, 46
- third party peripherals, 54
- third-party device drivers, 223
- token1, 46
- tools
 - Upgrade.UPG-ANALYSIS fileset, 105
 - Upgrade.UPG-MAN fileset, 105
- trial and error in using tape devices, 143
- troubleshooting, eisa_config, 204
- TSM access to printers and plotters, 150
- tty class, 65
- tty class and UPS, 181
- ttytype(4), 68

U

- unresponsive terminals, 86
- Upgrade.UPG-ANALYSIS fileset, 105
- Upgrade.UPG-MAN fileset, 105
- UPS
 - A2941A, 180
 - A2994A, 180
 - A2996A, 180
 - A2997A, 180
 - A2998A, 180
 - AC power failure, 175
 - and external bus extenders, 185
 - APPCC-1250UX, 180
 - APPCC-600UX, 180
 - cable pin-outs, 178
 - cabling guidelines, 178
 - configuration requirements, 180
 - configuring, 181
 - configuring more than one, 182
 - DELT-2326/C2, 180
 - DELT-2336/C2, 180
 - destination of log messages, 183
 - error messages, 185
 - getty entries, 181
 - hardware considerations, 177
 - introduction, 175
 - ioscan output, 179
 - monitoring daemon, 181
- MSG_ONLY
 - example, 181
 - noncritical operation, 182

- MUX requirements, 179
- networking considerations, 177
- planning, 177
- prioritizing protected devices, 182
- real-time priority, 181
- required for disk array powerfail, 98
- selecting drivers and interface, 180
- shutdown_delay_mins
 - example, 181
- shutdown_timeout_mins
 - example, 181
- software considerations, 179
- troubleshooting, 185
- tty class, 181
- UPS-TOOLS, 179
- upstty
 - example, 181
- using crontab file, 183
- verifying configuration, 183
- voltage/amperage (VA) load considerations, 177
- UPS serial connector 5061-2569, 178
- ups_conf(4), 181
- ups_mond(1M), 183
 - documentation of UPS error messages, 185
- UPS-TOOLS fileset, 179
- upstty
 - example, 181
- usable devices, displayed with ioscan, 19
- Using HP OpenView DTC Manager, 60
- Using the HP DTC Manager/UX, 60
- UUCP for modem, 62
- uucp(1), 61

V

- verifying tape-drive configuration, 141
- vgchange(1M), 111, 112, 117
- vgexport(1M), 111
- vgimport(1M), 112
- vgscan(1M), 112
- volume group management, 111, 112, 114
- VT100, 64
- VT100 mode, 74
- VT320, 64

W

- white papers
 - HP-UX 10.0 Device File Naming Convention, 22
 - HP-UX 10.0 File System Layout, 105

Index

- whole disk designation, 110
- work sheets
 - disk drives, 242
 - interface cards, 240
 - printers and plotters, 245
 - tape drives, 244
 - terminals and modems, 241
 - uninterruptible power systems (UPS), 246
- writing tape data in uncompressed form, 143
- wsio, 32, 44, 49, 127, 136, 153
- Wyse 60 default configuration values, 76
- Wyse 60 terminal as HP console, 76
 - emulation limitations, 79
- Wyse terminals, 62
- WYSE60, 64

X

- x25ip, 46
- x25pa, 46