

2002 Ford Focus ZX5

2002 TRANSMISSION Clutch - Vehicles With MT285 - Focus

2002 TRANSMISSION

Clutch - Vehicles With MT285 - Focus

SPECIFICATIONS

CLUTCH SPECIFICATION

| | |
|-------------------------------|-------------------------|
| Type | Single-plate dry clutch |
| Operation | Hydraulic |
| External diameter | 228 mm |
| Pedal travel (not adjustable) | 133 +/- 3 mm |


TORQUE SPECIFICATIONS

| Description | Nm | lb-ft | lb-in |
|-----------------------------------|----|-------|-------|
| Clutch pressure plate to flywheel | 29 | 21 | - |

DESCRIPTION AND OPERATION

CLUTCH

Clutch Components

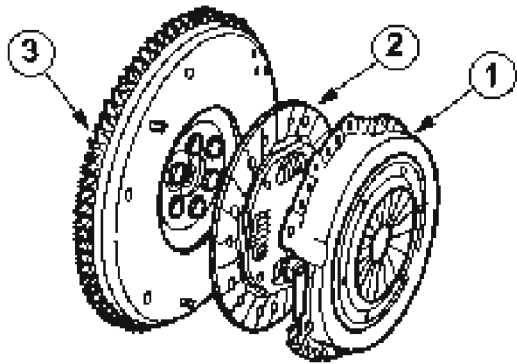

| Item | Part Number | Description |
|------|-------------|-----------------------|
| 1 | | Clutch pressure plate |
| 2 | | Clutch friction disc |
| 3 | | Flywheel |

G03854432

Fig. 1: Identifying Clutch Components
Courtesy of FORD MOTOR CO.

The clutch transmits the engine torque to the transmission.

The clutch comprises the clutch friction disc and the clutch pressure plate which is bolted to the flywheel.

The power flow between the engine and transmission is interrupted when the clutch is actuated. This means the clutch is engaged (unreleased) when not actuated. The clutch disengages (releases) once actuated.

DIAGNOSIS AND TESTING



CLUTCH

REFER to MANUAL TRANSMISSION/TRANSAXLE AND CLUTCH - GENERAL INFORMATION .

REMOVAL AND INSTALLATION

CLUTCH DISC AND PRESSURE PLATE

Special Tool(s)
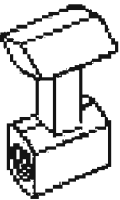
| | |
|---|---|
|  | Holding Tool, Flywheel 303-103 (T74P-6375-A) |
|  | Aligner, Clutch Disc 308-020 (T74P-7137-K) |

G03854433


Fig. 2: Identifying Clutch Disc And Pressure Plate Special Tool
Courtesy of FORD MOTOR CO.

Removal

1. Remove the transaxle. Refer to MANUAL TRANSMISSION/TRANSAXLE - VEHICLES WITH MT285/MANUAL TRANSMISSION/TRANSAXLE .

CAUTION: Loosen the clutch pressure plate retaining bolts

evenly, by two turns at a time.

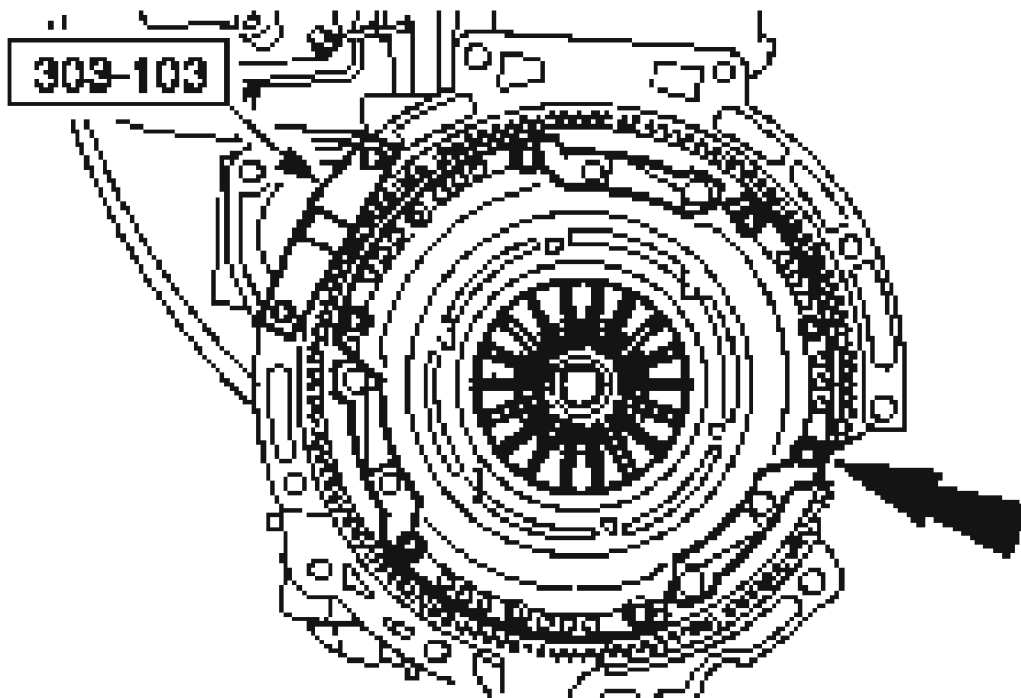


G03854434

Fig. 3: Removing Clutch Disc And Pressure Plate
Courtesy of FORD MOTOR CO.

2. Using the special tool, remove the clutch disc and pressure plate.
 - Discard the bolts.

Installation

1. Using the special tool, centralize the clutch disc on the clutch pressure plate.

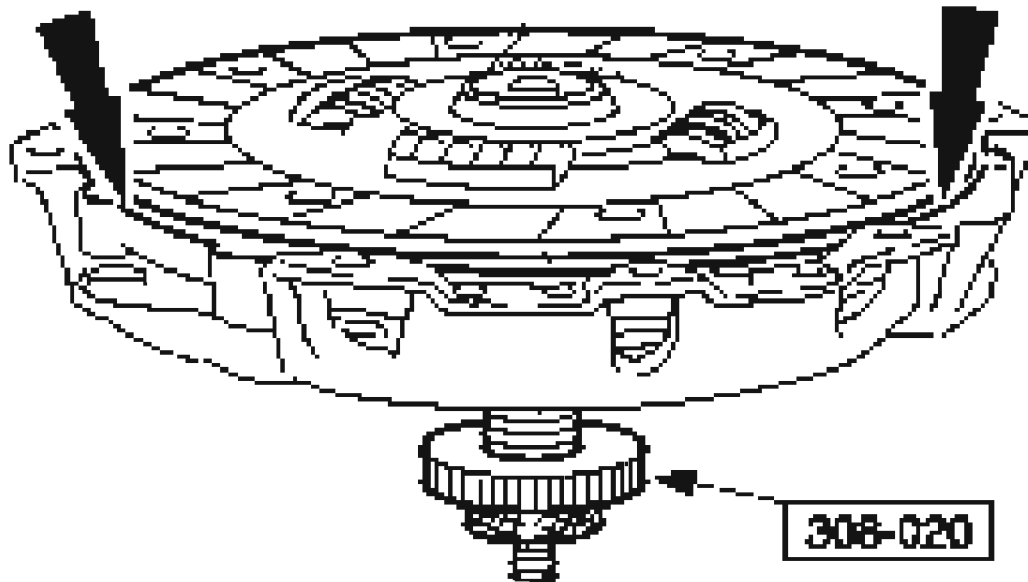


G03854435

Fig. 4: Centralizing Clutch Disc On Clutch Pressure Plate
Courtesy of FORD MOTOR CO.

CAUTION: Tighten the clutch pressure plate retaining bolts finger tight and then evenly by two turns at a time to the specified torque.

NOTE: Install new clutch pressure plate retaining bolts.

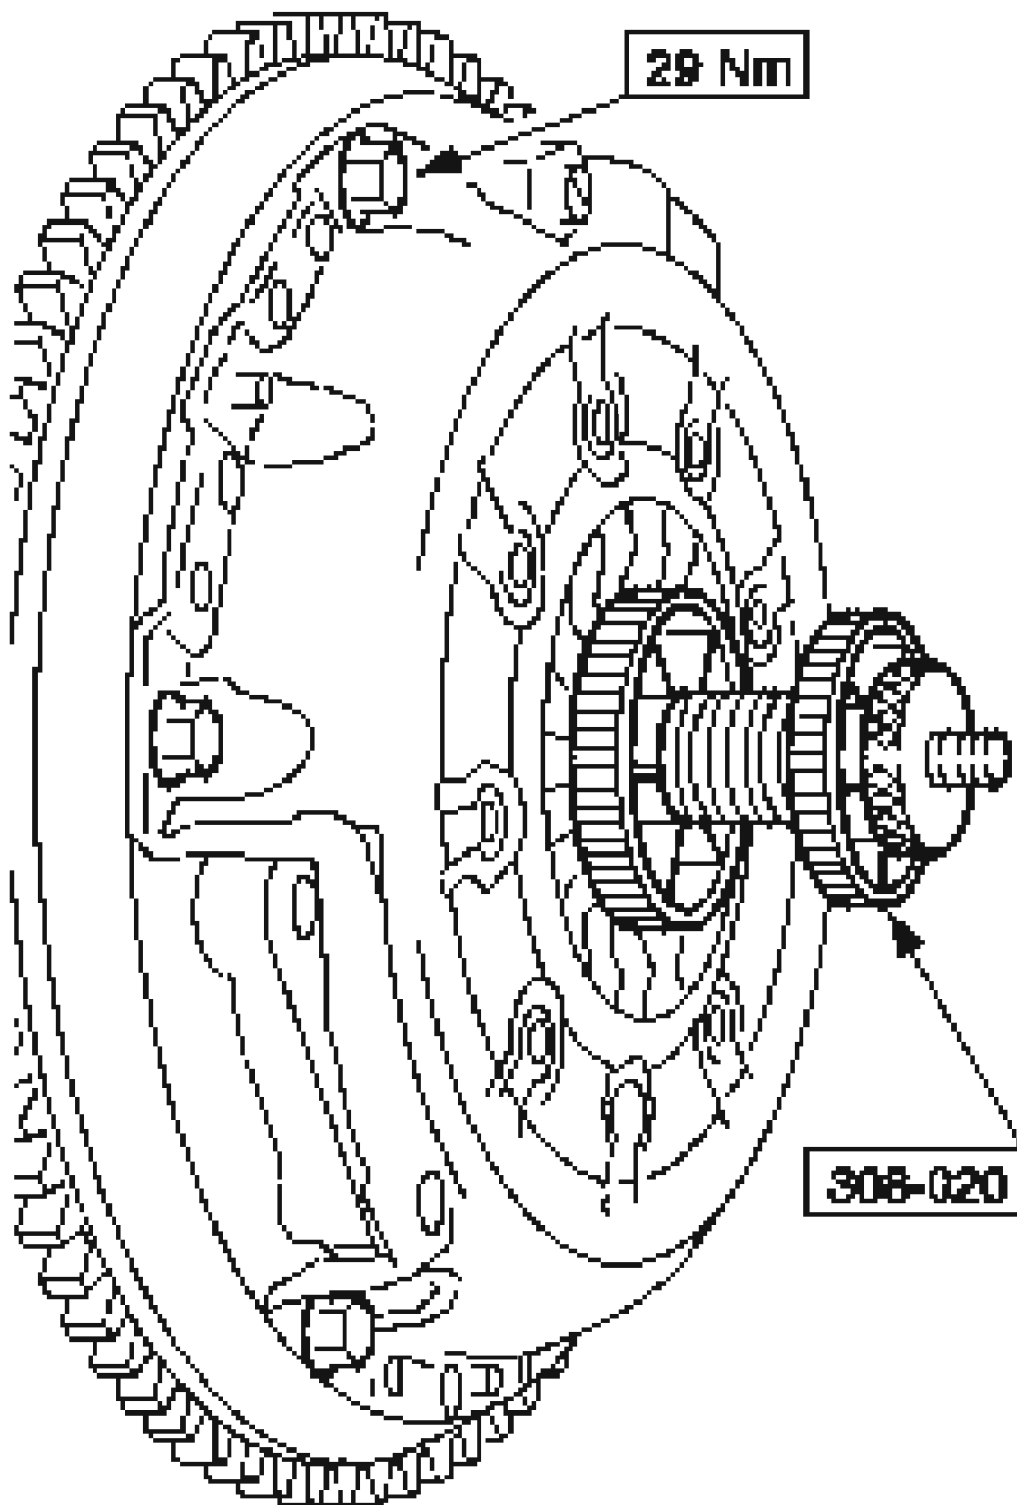

G03854436

Fig. 5: Installing Clutch Disc And Pressure Plate Using Special Tool

Courtesy of FORD MOTOR CO.

2. Using the special tool, install the clutch disc and pressure plate.
3. Remove the special tool.
4. Install the transaxle. Refer to **MANUAL TRANSMISSION/TRANSAXLE - VEHICLES WITH MT285/MANUAL TRANSA****XLE .**